



# HA202-PV

**Storage Barebone  
User's Manual**

# Table of Contents

Preface .....	i
Safety Instructions .....	ii
About This Manual .....	iv
1.1 Box Content.....	1
Chapter 1. Product Features .....	1
1.2 Specifications .....	2
1.3 Features .....	3
2.1 Central Processing Unit Setup .....	7
2.1.1 Processor Installation.....	7
Chapter 2. Hardware Setup.....	7
2.1.2 CPU heatsink for each CPU .....	10
2.2 System Memory .....	11
2.2.1 Dual Processor .....	11
2.2.2 Recommended Dimm Installation Order .....	12
2.2.3 DIMM Installation .....	14
2.3 Top Cover .....	15
2.3.1 Installing the top cover .....	15
2.3.2 Removing the top cover .....	15
2.4 Power Supply Unit Module.....	16
2.4.1 Installing the Power Supply Unit .....	16
2.4.2 Removing the Power Supply Unit .....	16
2.5 Node .....	17
2.5.1 Installing the Node .....	17
2.5.2 Removing the Node.....	17
2.6 Fan Module .....	18
2.6.1 Installing the fan module .....	18
2.6.2 Removing the fan module.....	18
2.7 Hard Disk Drive.....	19
2.7.1 Installing the hard disk drive.....	19
2.7.2 Removing the hard disk drive .....	19
2.8 HDD Backplane Module .....	20
2.8.1 Installing the HDD Backplane .....	20
2.8.2 Removing the HDD Backplane .....	20
2.9 Slide Rail Installation .....	21
Chapter 3. Hardware Settings .....	24
3.1 Motherboard Block Diagram .....	24
3.2 Motherboard Content List.....	25
3.3 Motherboard Layout .....	26
3.4 Connector and Jumper .....	27
3.5 System LED Indicator .....	32
3.5.1 Front Panel LED .....	32
3.5.2 Rear I350 LAN LEDs .....	32
3.5.3 Rear PCH LAN LEDs.....	33
3.5.4 Rear UID LED & Internal LED.....	34
3.6 HDD Backplane.....	35
3.6.1 Layout .....	35
3.6.2 Internal Connectors/Jumpers .....	36

<b>3.7 Bridge Board .....</b>	<b>37</b>
3.7.1 Layout .....	37
3.7.2 Connector .....	38
<b>Chapter 4. BIOS Configuration Settings .....</b>	<b>39</b>
<b>    4.1 Navigation Keys.....</b>	<b>39</b>
<b>    4.2 BIOS Setup .....</b>	<b>40</b>
4.2.1 Menu .....	40
4.2.2 Startup .....	40
<b>    4.3 Main .....</b>	<b>43</b>
4.3.1 Main .....	43
<b>    4.4 Advanced .....</b>	<b>44</b>
4.4.1 Peripheral Configuration.....	44
4.4.2 Video Configuration .....	44
4.4.3 Socket Configuration .....	44
4.4.4 PCH Configuration .....	48
4.4.5 H2o IPMI Configuration .....	52
4.4.6 H2o Event Log Config Manager .....	53
<b>    4.5 Security.....</b>	<b>54</b>
4.5.1 Security .....	54
<b>    4.6 Power.....</b>	<b>55</b>
4.6.1 Power.....	55
<b>    4.7 Boot .....</b>	<b>56</b>
4.7.1 Boot.....	56
<b>    4.8 Exit.....</b>	<b>57</b>
4.8.1 Exit.....	57
<b>    4.9 BIOS Update Process.....</b>	<b>58</b>
<b>Chapter 5. BMC Configuration Settings .....</b>	<b>59</b>
<b>    5.1 Method 1 (Use the BIOS Setup) .....</b>	<b>59</b>
<b>    5.2 Method 2 (Use a Dos Tool - Syscheck).....</b>	<b>62</b>
<b>    5.3 Login .....</b>	<b>64</b>
<b>    5.4 Web GUI .....</b>	<b>65</b>
5.4.1 Menu Bar.....	65
5.4.2 User Information and Quick Button .....	66
5.4.3 Dashboard: .....	67
5.4.4 Sensor .....	67
5.4.5 FRU Information .....	67
5.4.6 Logs and Report .....	68
5.4.7 Settings .....	68
5.4.8 KVM Mouse Setting .....	69
5.4.9 Firmware Update .....	71
5.4.10 BIOS Firmware Update.....	75
<b>Chapter 6. Technical Support.....</b>	<b>77</b>
<b>Appendix: Battery Backup Unit(BBU) .....</b>	<b>78</b>
<b>    1-1 Feature .....</b>	<b>78</b>
<b>    1-2 Safety Precautions.....</b>	<b>78</b>
<b>    1-3 Hardware Installation .....</b>	<b>79</b>
<b>    1-4 BMC FET Mode .....</b>	<b>80</b>



**Copyright © 2018 AIC, Inc. All Rights Reserved.**

This document contains proprietary information about AIC products and is not to be disclosed or used except in accordance with applicable agreements.

## **Document Release History**

<b>Release Date</b>	<b>Version</b>	<b>Update Content</b>
June 2018	1	User's Manual release to public.
June 2019	1.1	Memory update
January 2020	1.2	Specifications update. QIG update. BP update.
September 2022	1.3	Section 4.9/ Section 5.4 Firmware update.

# Preface

## Copyright

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photo-static, recording or otherwise, without the prior written consent of the manufacturer.

## Trademarks

All products and trade names used in this document are trademarks or registered trademarks of their respective holders.

## Changes

The material in this document is for information purposes only and is subject to change without notice.

## Warning

1. A shielded-type power cord is required in order to meet FCC emission limits and also to prevent interference to the nearby radio and television reception. It is essential that only the supplied power cord be used.
2. Use only shielded cables to connect I/O devices to this equipment.
3. You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

## Disclaimer

AIC shall not be liable for technical or editorial errors or omissions contained herein. The information provided is provided "as is" without warranty of any kind. To the extent permitted by law, neither AIC or its affiliates, subcontractors or suppliers will be liable for incidental, special or consequential damages including downtime cost; lost profits; damages relating to the procurement of substitute products or services; or damages for loss of data, or software restoration. The information in this document is subject to change without notice.

## Instruction Symbols

Special attention should be given to the instruction symbols below.



### NOTE

This symbol indicates that there is an explanatory or supplementary instruction.



### CAUTION

This symbol denotes possible hardware impairment. Upmost precaution must be taken to prevent serious hardware damage.



### WARNING

This symbol serves as a warning alert for potential body injury. The user may suffer possible injury from disregard or lack of attention.

# Safety Instructions

Before getting started, please read the following important cautions:

- All cautions and warnings on the equipment or in the manuals should be noted.
- Most electronic components are sensitive to electrical static discharge. Therefore, be sure to ground yourself at all times when installing the internal components.
- Use a grounding wrist strap and place all electronic components in static-shielded devices. Grounding wrist straps can be purchased in any electronic supply store.
- Be sure to turn off the power and then disconnect the power cords from your system before performing any installation or servicing. A sudden surge of power could damage sensitive electronic components.
- Do not open the system's top cover. If opening the cover for maintenance is a must, only a trained technician should do so. Integrated circuits on computer boards are sensitive to static electricity. Before handling a board or integrated circuit, touch an unpainted portion of the system unit chassis for a few seconds. This will help to discharge any static electricity on your body.
- Place this equipment on a stable surface when install. A drop or fall could cause injury.
- Please keep this equipment away from humidity.
- Carefully mount the equipment into the rack, in such manner, that it won't be hazardous due to uneven mechanical loading.
- This equipment is to be installed for operation in an environment with maximum ambient temperature below 35°C.
- The openings on the system are for air convection to protect the equipment from overheating. DO NOT COVER THE OPENINGS.
- Never pour any liquid into ventilation openings. This could cause fire or electrical shock.
- Make sure the voltage of the power source is within the specification on the label when connecting the equipment to the power outlet. The current load and output power of loads shall be within the specification.
- This equipment must be connected to reliable grounding before using. Pay special attention to power supplied other than direct connections, e.g. using of power strips.
- Place the power cord out of the way of foot traffic. Do not place anything over the power cord. The power cord must be rated for the product, voltage and current marked on the product's electrical ratings label. The voltage and current rating of the cord should be greater than the voltage and current rating marked on the product.
- If the equipment is not used for a long time, disconnect the equipment from mains to avoid being damaged by transient over-voltage.
- Never open the equipment. For safety reasons, only qualified service personnel should open the equipment.

- If one of the following situations arise, the equipment should be checked by service personnel:
  1. The power cord or plug is damaged.
  2. Liquid has penetrated the equipment.
  3. The equipment has been exposed to moisture.
  4. The equipment does not work well or will not work according to its user manual.
  5. The equipment has been dropped and/or damaged.
  6. The equipment has obvious signs of breakage.
  7. Please disconnect this equipment from the AC outlet before cleaning. Do not use liquid or detergent for cleaning. The use of a moisture sheet or cloth is recommended for cleaning.
- Module and drive bays must not be empty! They must have a dummy cover.

**CAUTION**



The equipment intended for installation should be placed in Restricted Access Location.

**CAUTION**



There will be a risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions. After performing any installation or servicing, make sure the enclosure is correct in position before turning on the power.

**CAUTION**



This unit may have more than one power supply. Disconnect all power sources before maintenance to avoid electric shock.



# About This Manual

Thank you for selecting and purchasing the HA202-PV.

This user's manual is provided for professional technicians to perform easy hardware setup, basic system configurations, and quick software startup. This document pellucidly presents a brief overview of the product design, device installation, and firmware settings for HA202-PV. For the latest version of this user's manual, please refer to the AIC website: <https://www.aicipc.com/en/productdetail/50946>.

## Chapter 1 Product Features

HA202-PV is a flexible storage server barebone that is specifically designed to accommodate diverse corporations and enterprises for managing heavy workloads and multiple applications.

## Chapter 2 Hardware Setup

This chapter displays an easy installation guide for assembling the hardware in this product. Utmost caution for proceeding to set up the hardware is highly advised. Most of the components are highly fragile and vulnerable to exterior influence. Do not endanger the device by placing the device in an unstable environment.

## Chapter 3 Hardware Settings

This chapter elaborates the overall layout of the server motherboard, including multifarious connectors, jumpers, and LED descriptions. These descriptions assist users to configure different settings and functions of the motherboard, as well as to confirm the location of each connector and jumper.

## Chapter 4 BIOS Configuration Settings

This chapter introduces the key features of BIOS, including the descriptions and option keys for diverse functions. These details provide users to effortlessly navigate and configure the input/output devices.

## Chapter 5 BMC Configuration Settings

This chapter illustrates the diverse functions of IPMI BMC, including the details on logging into the web page and assorted definitions. These descriptions are helpful in configuring various functions through Web GUI without entering the BIOS setup. For more information of BMC configurations, please refer to IPMI BMC (Aspeed AST2500) User's Manual for a more detailed description.

## Chapter 6 Technical Support

For more information or suggestion, please contact the nearest AIC corporation representative in your district or visit the AIC website: <https://www.aicipc.com/en/index>. It is our greatest honor to provide the best service for our customers.

# Chapter 1. Product Features

HA202-PV is a 2U high density storage server with 24 hot swap bays for dual-port NVMe SSDs (U.2). For more information about our product, please visit our website at <https://www.aicipc.com/en/index>.

Before removing the subsystem from the shipping carton, visually inspect the physical condition of the shipping carton. Exterior damage to the shipping carton may indicate that the contents of the carton are damaged. If any damage is found, do not remove the components; contact the dealer where the subsystem was purchased for further instructions. Before continuing, first unpack the subsystem and verify that the number of components in the shipping carton is accurate and in good condition.

## 1.1 Box Content

This product contains the components listed below.

Please confirm the number and the condition of the components before installation.

- System chassis  
(drive tray, fan, power supply unit)
- Power cord (vary per region)
- 28" Tool-less slide rail x 1 set (optional)

☒ PACKAGE CONTENT MAY VARY PER REGION.

## 1.2 Specifications

<b>Dimensions</b> (W x D x H)	mm : 435 x 911 x 87 inches : 17.1 x 35.9 x 3.4			<b>System Management</b>	<ul style="list-style-type: none"> <li>IPMI 2.0</li> <li>KVM over IP</li> <li>Media redirection</li> <li>Temperature, fan, voltage, PSU sensor monitor</li> <li>System temperature</li> <li>System ID / System fail indicator</li> <li>Remote Power on/off/reset</li> <li>SEL message alarm through mail</li> <li>SNMP support</li> <li>Intel NM</li> <li>HTML5</li> <li>Redfish</li> </ul>				
<b>Motherboard</b> (per node)	AIC Server Board Pavo								
<b>Processor</b> (per node)	Processor Support	<ul style="list-style-type: none"> <li>Intel® Xeon® Scalable Processors (Skylake/Cascade Lake/Cascade Lake Refresh)</li> <li>Supports CPU TDP up to 165W</li> </ul>							
	UPI Speeds	10.4 GT/s, 9.6 GT/s							
	Socket Type	Socket P0 (LGA-3647 Socket)							
<b>Chipset Support</b> (per node)	Intel® Lewisburg C620 series PCH			<b>Expander Boards</b> (per node)	2 x 64-port Broadcom/PLX 9765 PCIe switch board				
	<ul style="list-style-type: none"> <li>6 x memory channels per CPU, 1 x DIMM per channel</li> <li>16 x DIMM slots support: DDR4 2933/2666/2400MHz</li> <li>- up to 192GB RDIMM SRx4</li> <li>- up to 384GB RDIMM DRx4</li> <li>- up to 1536GB RDIMM 3DS 8Rx4</li> <li>- up to 768GB RDIMM QRx4</li> <li>- up to 1536GB RDIMM 3DS 8Rx4</li> <li>Intel® NVM DIMM (Apache Pass) support by next gen. Purley Refresh CPU</li> </ul>			<b>Riser Card</b> (included) (per node)	RC-PE2U08-TY    1 x 16 PCIe slot + 1 x 8 PCIe slot				
<b>System Memory</b> (per node)				<b>System BIOS</b>	<table border="0"> <tr> <td>BIOS Type</td> <td>Insyde UEFI BIOS</td> </tr> <tr> <td>BIOS Features</td> <td> <ul style="list-style-type: none"> <li>ACP</li> <li>PXE</li> <li>WOL</li> <li>AC loss recovery</li> <li>Serial console redirection</li> <li>BIOS Boot Specification</li> <li>BIOS Recovery Mode</li> <li>SM BIOS</li> <li>SRIOV</li> <li>iSCSI</li> <li>TPM</li> <li>PCIe Hotplug</li> </ul> </td> </tr> </table>	BIOS Type	Insyde UEFI BIOS	BIOS Features	<ul style="list-style-type: none"> <li>ACP</li> <li>PXE</li> <li>WOL</li> <li>AC loss recovery</li> <li>Serial console redirection</li> <li>BIOS Boot Specification</li> <li>BIOS Recovery Mode</li> <li>SM BIOS</li> <li>SRIOV</li> <li>iSCSI</li> <li>TPM</li> <li>PCIe Hotplug</li> </ul>
BIOS Type	Insyde UEFI BIOS								
BIOS Features	<ul style="list-style-type: none"> <li>ACP</li> <li>PXE</li> <li>WOL</li> <li>AC loss recovery</li> <li>Serial console redirection</li> <li>BIOS Boot Specification</li> <li>BIOS Recovery Mode</li> <li>SM BIOS</li> <li>SRIOV</li> <li>iSCSI</li> <li>TPM</li> <li>PCIe Hotplug</li> </ul>								
<b>Front Panel</b>	System power on/off								
<b>LEDs</b>	A :	B :							
	<ul style="list-style-type: none"> <li>Power (Secondary)</li> <li>Warning</li> </ul>	<ul style="list-style-type: none"> <li>Power (Primary)</li> <li>Warning</li> </ul>							
<b>Drive Bays</b>	External	2.5" hot swap	24						
	Internal	2.5"	2 per node						
<b>Backplane</b>	1 x 24-port dual loop NVMe backplane								
<b>Expansion Slots</b> (per node)	PCIe 3.0	<ul style="list-style-type: none"> <li>1 x 16 slot (FH)</li> <li>1 x 16 slot (x8 mode) (FH)</li> <li>1 x OCP Mezzanine card V2.0</li> </ul> <p>(Notification: About OCP card, please contact AIC Technical Support for additional information/details.)</p>							
<b>Rear I/O</b> (per node)	LAN	<ul style="list-style-type: none"> <li>2 x 10GbE SFP+</li> <li>2 x GbE RJ45</li> <li>1 x GbE RJ45 dedicated to BMC management</li> </ul>							
	USB	2 x USB 3.0 Type A							
	VGA	1 x external DB-15 VGA port							
	Serial Port	1 x audio jack for COM port							
<b>TPM</b> (optional)	TPM Support	1 x TPM 2.0 connector onboard							
<b>Power Supply</b>	<p>1300W 1+1 redundant power supply 80+ Platinum</p> <ul style="list-style-type: none"> <li>AC INPUT : 100-120V,50/60Hz,12A</li> <li>DC OUTPUT : 900W</li> <li>AC INPUT : 200-240V,50/60Hz,8A</li> <li>DC OUTPUT : 1300W</li> </ul>			<b>Environmental Specifications</b>	<ul style="list-style-type: none"> <li>Storage temperature : -10°C(14°F) ~ 60°C(140°F)</li> <li>Operating temperature : 0°C(32°F) ~ 35°C(95°F)</li> <li>Storage operating humidity : 5%~95% non-condensing</li> </ul>				
<b>System Cooling</b> (per node)	2 x 60x56mm easy swap fans			<b>Gross Weight</b>	<table border="0"> <tr> <td>(w/ PSU &amp; Rail)</td> <td>kgs : 43.5</td> </tr> <tr> <td></td> <td>lbs : 95.9</td> </tr> </table>	(w/ PSU & Rail)	kgs : 43.5		lbs : 95.9
(w/ PSU & Rail)	kgs : 43.5								
	lbs : 95.9								
				<b>Packaging Dimensions</b>	<table border="0"> <tr> <td>(W x D x H)</td> <td>mm : 615 x 1220 x 338</td> </tr> <tr> <td></td> <td>inches : 24.2 x 48 x 13.3</td> </tr> </table>	(W x D x H)	mm : 615 x 1220 x 338		inches : 24.2 x 48 x 13.3
(W x D x H)	mm : 615 x 1220 x 338								
	inches : 24.2 x 48 x 13.3								
				<b>Mounting</b>	Standard    28" tool-less slide rail				

## 1.3 Features


HA202-PV is a reliable 2U storage server barebone with 24 hot swap drives bays. This product is designed to accommodate the AIC-patented serverboard, Pavo, which supports two Intel® Xeon® Scalable Processors and 16 DDR4 DIMM to offer greater performance, efficiency, and utility for our customers. Featuring Intel® C620 Series Chipset, which is emphasized for its accelerated speed and expansion, this product enhances these advantages by integrating flexible IO usage and system expansion into to provide greater bandwidth and utilization.

In addition to the noteworthy features of the barebone, HA202-PV provides immediate and efficient management with Onboard Baseboard Management Controller and greater I/O extension. Featuring IPMI 2.0 and Aspeed AST2500 Advanced PCIe Graphics, the server board offers support for iKVM, Media Redirection, Smash Support, IPMI over LAN, and Serial over LAN.

- 2U 2 node high-availability storage server supporting 24 hot-swap 2.5" drive bays for dual-port NVMe SSDs (U.2)
- High availability storage server optimized for mission critical, enterprise-level storage applications
- Fully redundant, fault-tolerant system supporting hot swappable controller nodes and storage drives
- Two compute nodes, Active-Active configuration, each supporting 2nd generation Intel®Xeon® Scalable Processors (Cascade Lake/Cascade Lake Refresh/Skylake)
- 1 PCIe x16, 1 PCIe x8, 1 OCP Mezzanine x16 slots per node provide direct links to CPU
- PCIe NTB link between nodes for communication and fail over
- Customizable to meet OEM/ODM requirements

## Front Panel


HA202-PV provides 1 system button (power) and 2 LED indicators for each node (A & B node: power and warning LED).

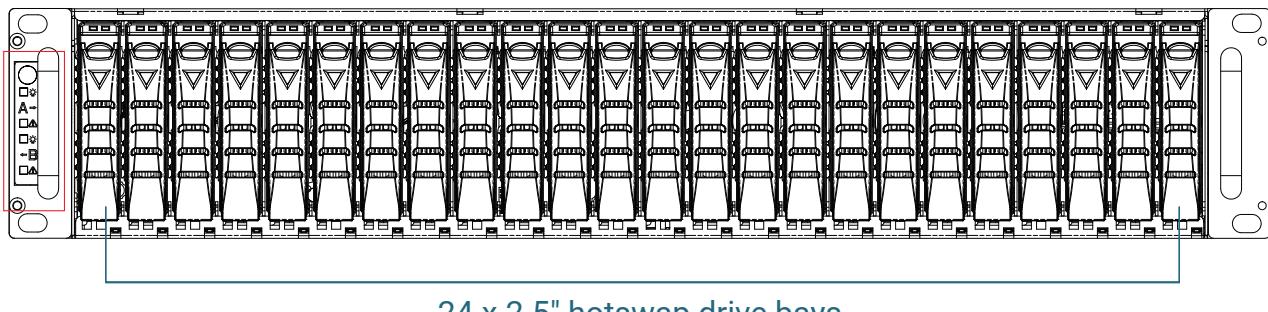

	Power Button	On
A	Canister A Power LED	Green
	Canister A fail LED	Red
B	Canister B Power LED	Green
	Canister B fail LED	Red


## Rear Panel

HA202-PV provides 3 PCIe slots per node (1 x PCIe x16 , 1 x PCIe Gen3 x8 , and 1 x OCP Mezzanine card V2.0), 4 LAN ports (2x 10GbE SFP+, 2 x GbE RJ45), 1 GbE RJ45 port dedicated to BMC management, 2 USB ports (3.0 Type A), 1 VGA port, and 1 audio jack for COM port.

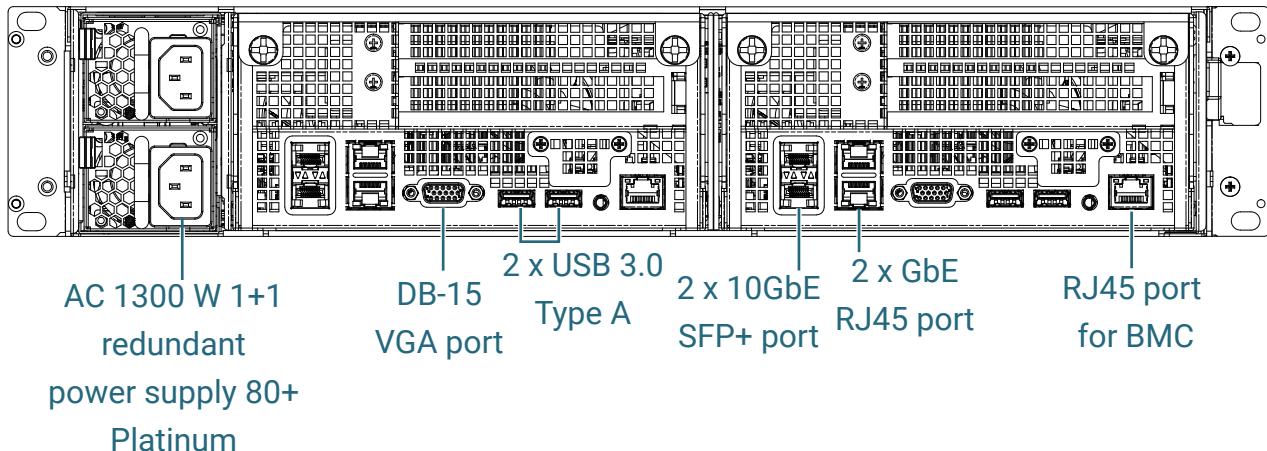


## Major Components

HA202-PV provides 24 x 2.5" external hot swap drive bays.

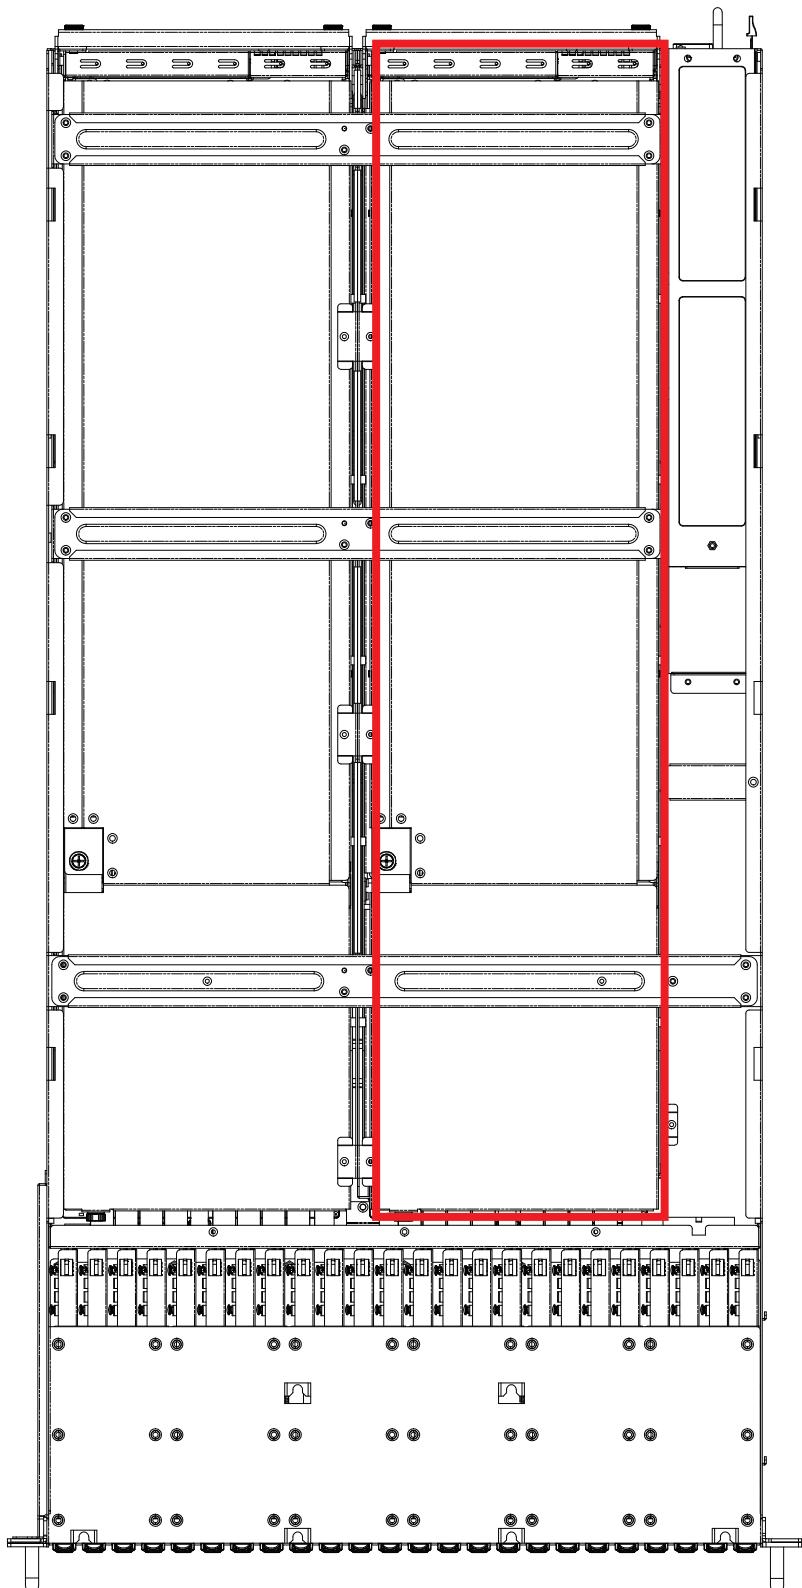

HA202-PV Top view

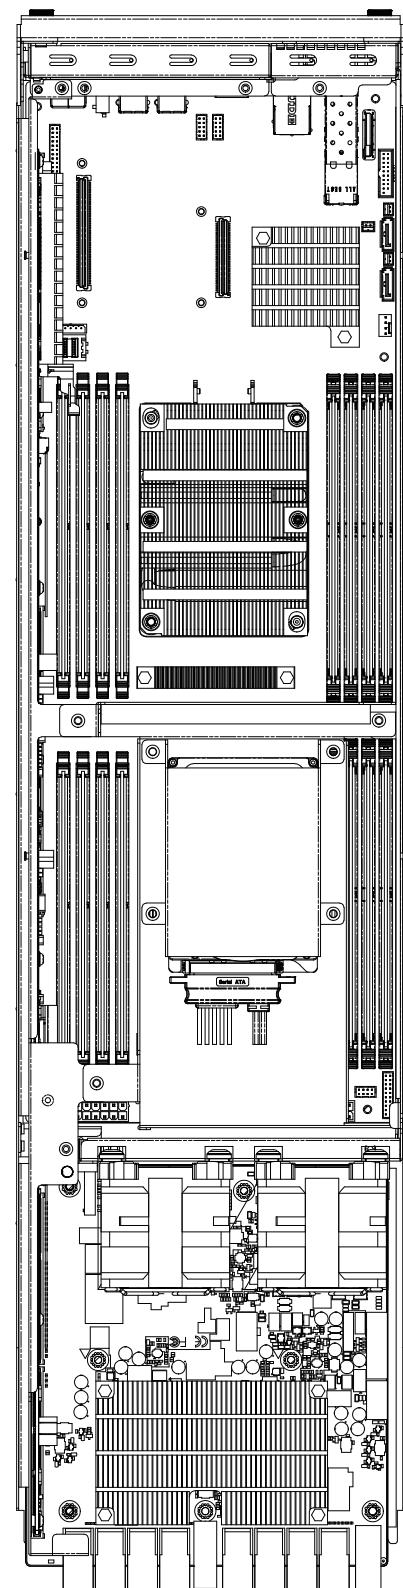

Node top view

# Chapter 2. Hardware Setup

This section describes a simple instruction guide for installing the hardware components on the serverboard system. Turn off and unplug all system and peripheral devices before proceeding.

## 2.1 Central Processing Unit Setup

The serverboard supports dual Xeon scalable processors and Socket P0 (LGA-3647).

### 2.1.1 Processor Installation

To ensure a safe and easy setup, you need to prepare before installation:

- a T20 Torx screwdriver
- ESD wrist strap/mat and conductive foam pad

#### CAUTION


 The pins of the processor socket are vulnerable and easily susceptible to damage if fingers or any foreign objects are pressed against them. Please keep the socket protective cover on when the processor is not installed.

#### CAUTION

 When unpacking a processor, hold the processor only by its edges to avoid touching the contacts.



#### Standard Processor Assembly:

A standard processor assembly is comprised of PHM(Processor Heatsink Module) components and processor socket assembly.

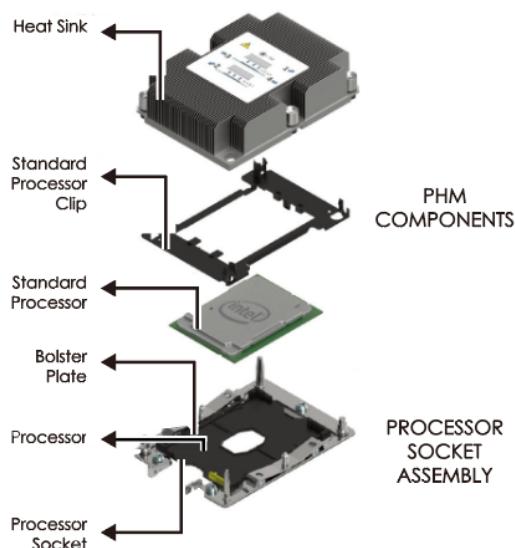

**Processor Socket Assembly:**


The server board includes two processor sockets (LGA-3647), supports one or two of the Intel® Xeon® Processor Scalable Family and has a Thermal Design Power (TDP) of up to 165W on selected models.

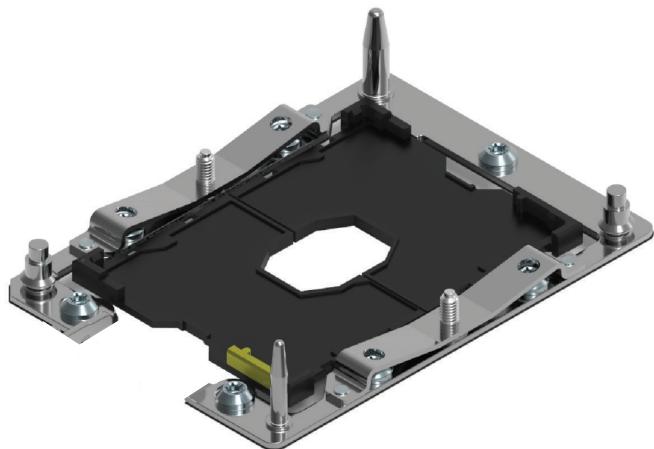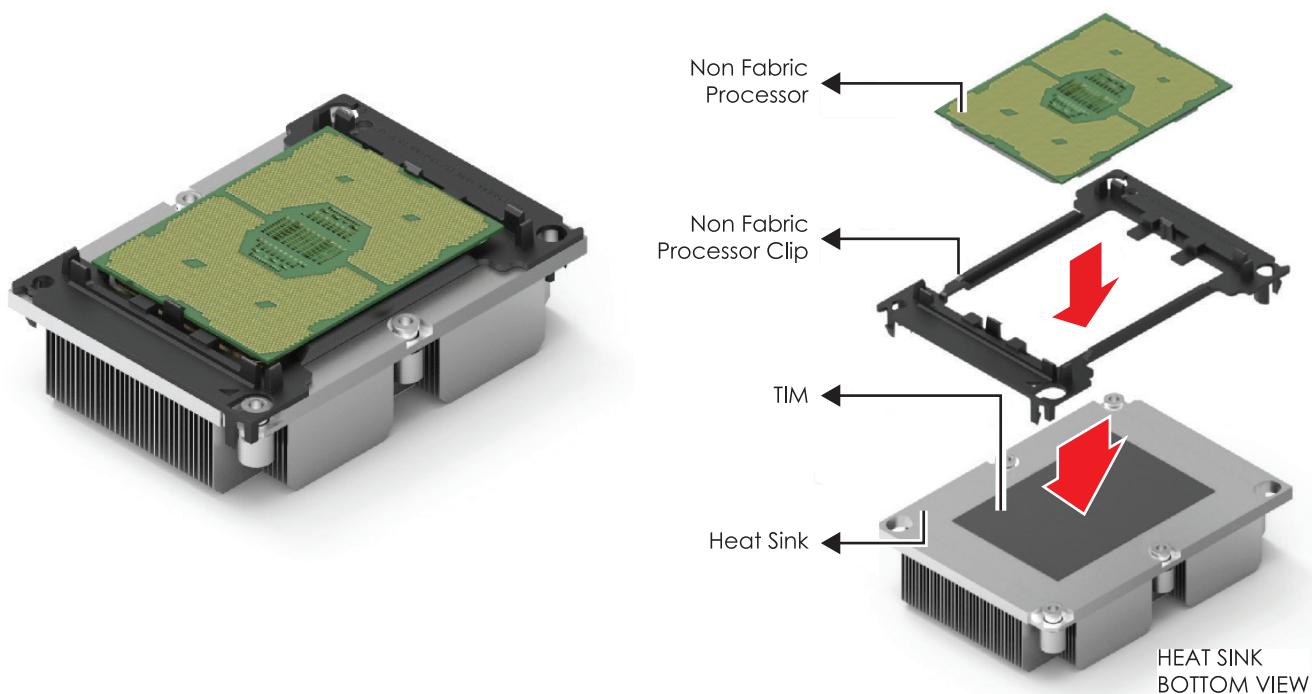**PHM (Processor Heatsink Module) Component:**

This information is provided for professional technicians only.

The PHM sits level with the processor socket assembly. The PHM is NOT installed properly if it does not sit level with the processor socket assembly. Once the PHM is seated over the processor socket assembly, the four heat sink torque screws must be tightened in order as shown below.

Processor Heat Sink – Top View with Screw Tightening Order

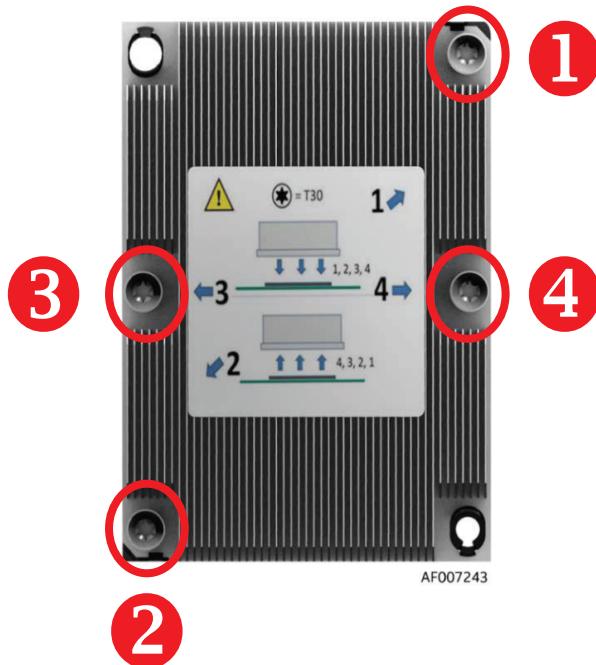

**CAUTION**




Failure to tighten the heatsink screws in the specified order may cause damage to the processor socket assembly. Heat sink screws should be tightened to 12 in-lbs torque according to the indicated order on the top of the heatsink label.



This information is provided for professional technicians only.

### 2.1.2 CPU heatsink for each CPU

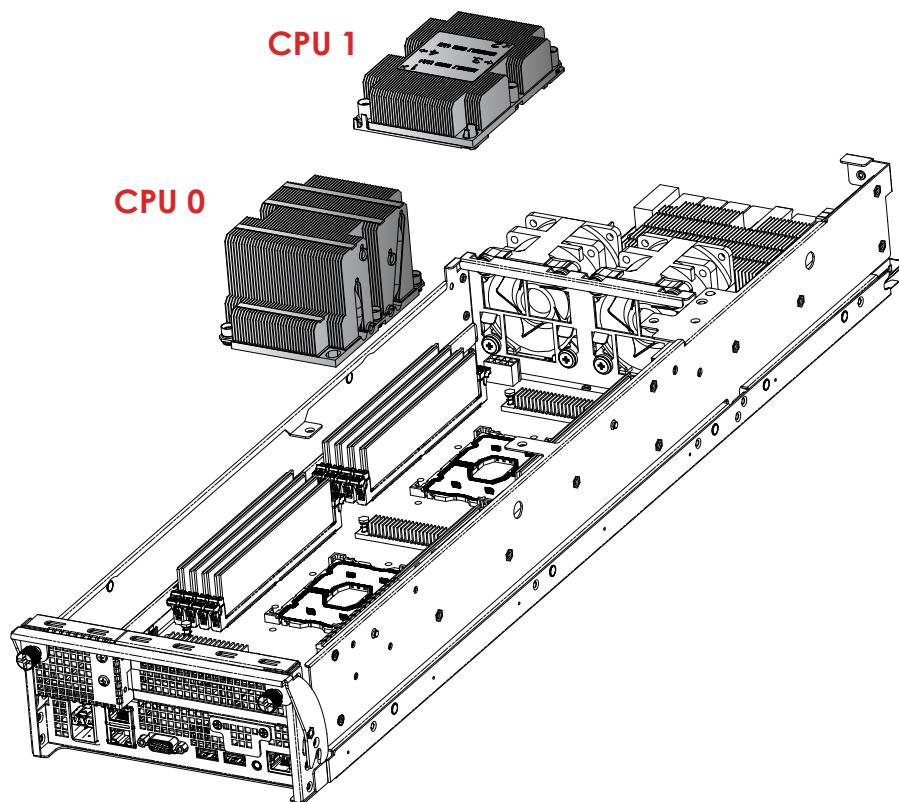


heatsink inside each node

## 2.2 System Memory














### 2.2.1 Dual Processor

This server board supports up to sixteen DDR4 2400 and 2666 Registered ECC DRAM/Load-Reduced DIMM (LRDIMM).

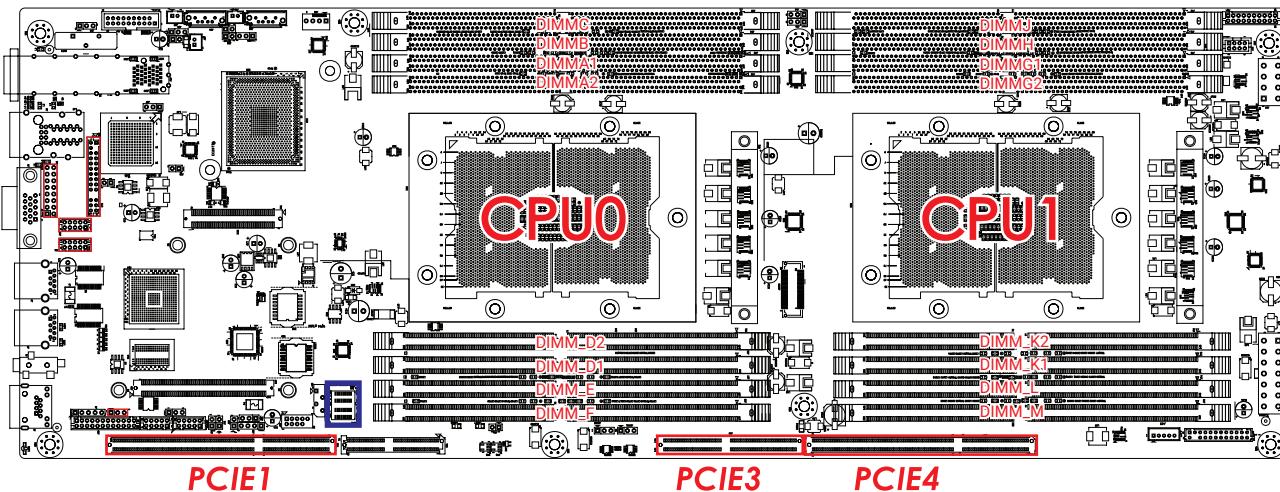**NOTE**

In Pavo Case, the 16 lanes from CPU#0 and the 8 lanes from CPU#1 are routed to PCIe slot1. The lanes from the CPU#1 are routed to the PCIe slot 3 and 4.

### **2.2.2 Recommended Dimm Installation Order**

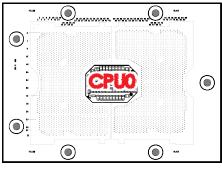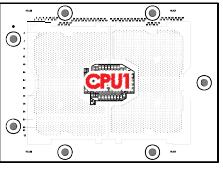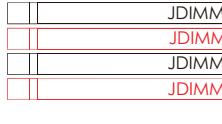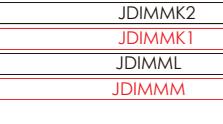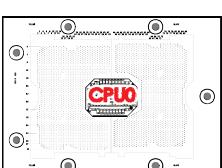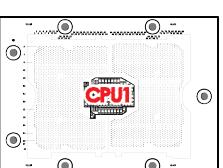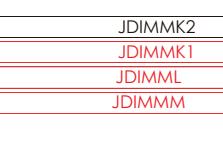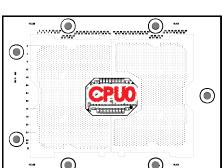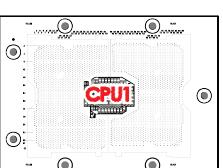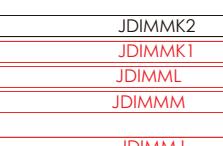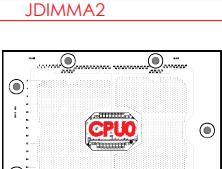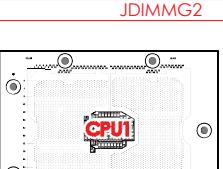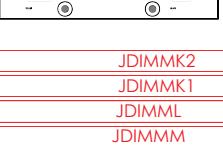
	CPU0	CPU1	JDIMMC	JDIMMJ
			JDIMMB	JDIMMH
			JDIMMA1	JDIMMG1
			JDIMMA2	JDIMMG2
10 DIMMs	JDIMM_C	JDIMM_J		
	JDIMM_B	JDIMM_H		
	JDIMM_A1	JDIMM_G1		
	JDIMM_D1	JDIMM_K1		
	JDIMM_F	JDIMM_M		
			JDIMMD2	JDIMMK2
			JDIMMD1	JDIMMK1
			JDIMME	JDIMML
			JDIMMF	JDIMMM
12 DIMMs	JDIMM_C	JDIMM_J		
	JDIMM_B	JDIMM_H		
	JDIMM_A1	JDIMM_G1		
	JDIMM_D1	JDIMM_K1		
	JDIMM_E	JDIMM_L		
	JDIMM_F	JDIMM_M		
			JDIMMD2	JDIMMK2
			JDIMMD1	JDIMMK1
			JDIMME	JDIMML
			JDIMMF	JDIMMM
14 DIMMs	JDIMM_C	JDIMM_J		
	JDIMM_B	JDIMM_H		
	JDIMM_A1	JDIMM_G1		
	JDIMM_A2	JDIMM_G2		
	JDIMM_D1	JDIMM_K1		
	JDIMM_E	JDIMM_L		
	JDIMM_F	JDIMM_M		
			JDIMMD2	JDIMMK2
			JDIMMD1	JDIMMK1
			JDIMME	JDIMML
			JDIMMF	JDIMMM
16 DIMMs	JDIMM_C	JDIMM_J		
	JDIMM_B	JDIMM_H		
	JDIMM_A1	JDIMM_G1		
	JDIMM_A2	JDIMM_G2		
	JDIMM_D2	JDIMM_K2		
	JDIMM_D1	JDIMM_K1		
	JDIMM_E	JDIMM_L		
	JDIMM_F	JDIMM_M		
			JDIMMD2	JDIMMK2
			JDIMMD1	JDIMMK1
			JDIMME	JDIMML
			JDIMMF	JDIMMM

### 2.2.3 DIMM Installation


**Step 1** Unlock the dimm socket by pressing the retaining clips outward.



**Step 2** Insert the memory module into the slot. Make sure that the dimm notch is accurately positioned.

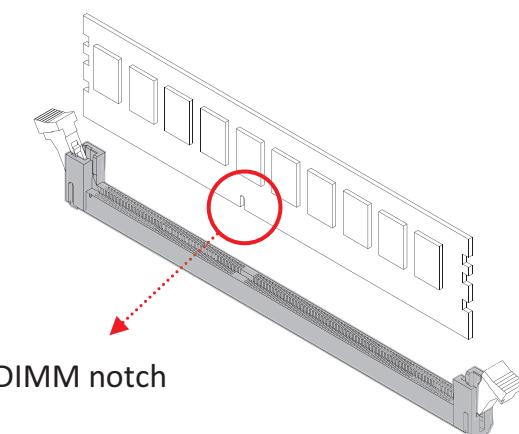

**Step 3** Close the retaining clips to complete installation.

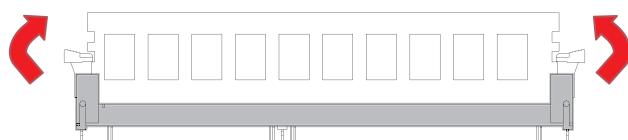

This information is provided for professional technicians only.


## 2.3 Top Cover

### 2.3.1 Installing the top cover

Position the top cover on the chassis and secure the screws x 10 pcs.

### 2.3.2 Removing the top cover

Remove the screws on the top cover to remove the cover.

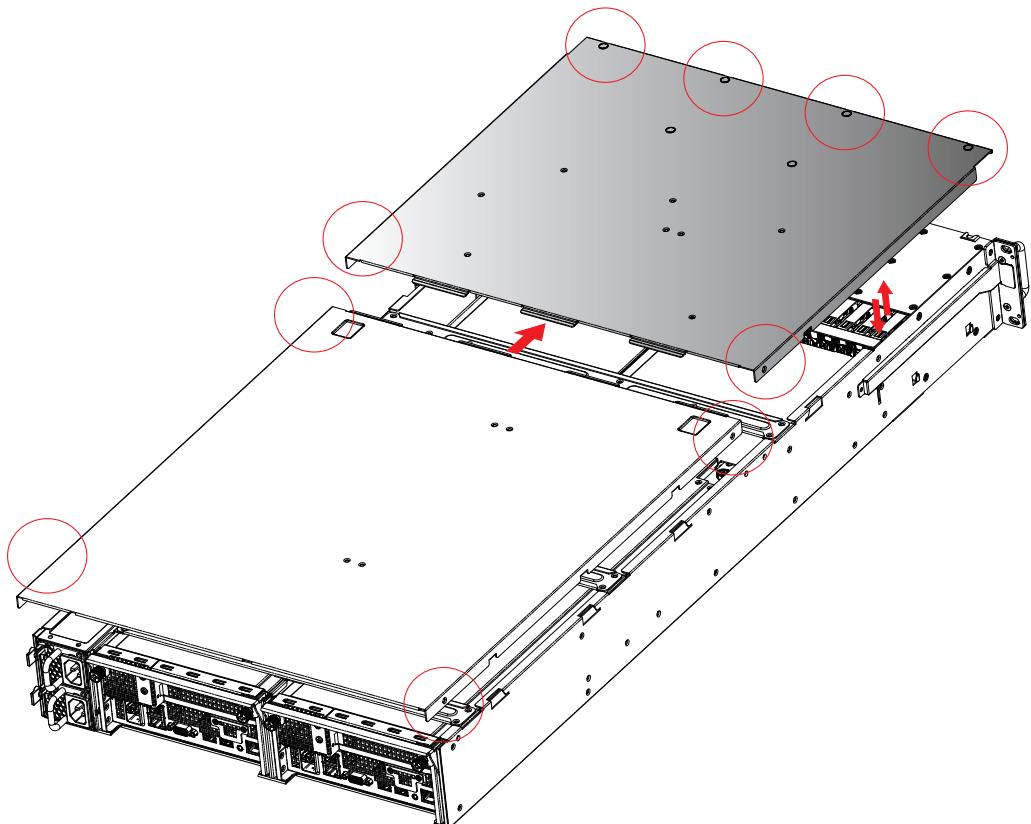

This information is provided for professional technicians only.


## 2.4 Power Supply Unit Module

### 2.4.1 Installing the Power Supply Unit

Push module into the enclosure. Make certain that the module is fully inserted to complete installation.

### 2.4.2 Removing the Power Supply Unit

Push the latch on the module and pull the tray handle to remove.

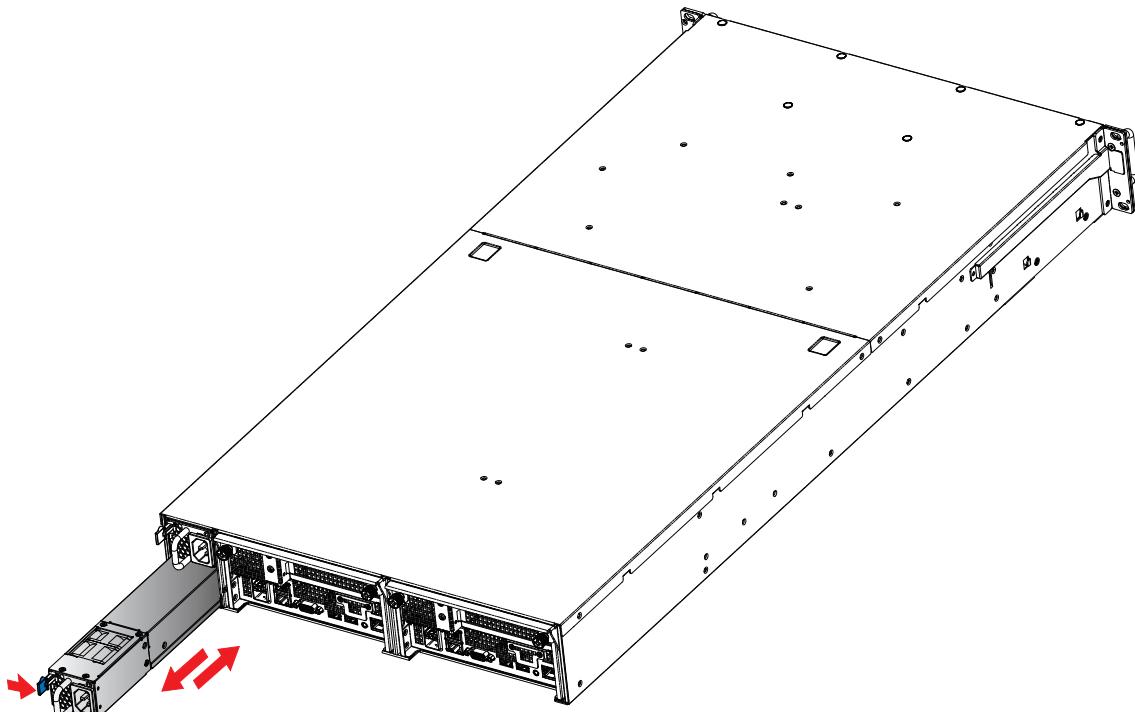

This information is provided for professional technicians only.


## 2.5 Node

### 2.5.1 Installing the Node

Loosen the retaining screw x 2 pcs on the module and pull the tray handle.

### 2.5.2 Removing the Node

Push the module into the enclosure and tighten the retaining screws. Make certain to fully insert the module into the chassis before securing the screws.

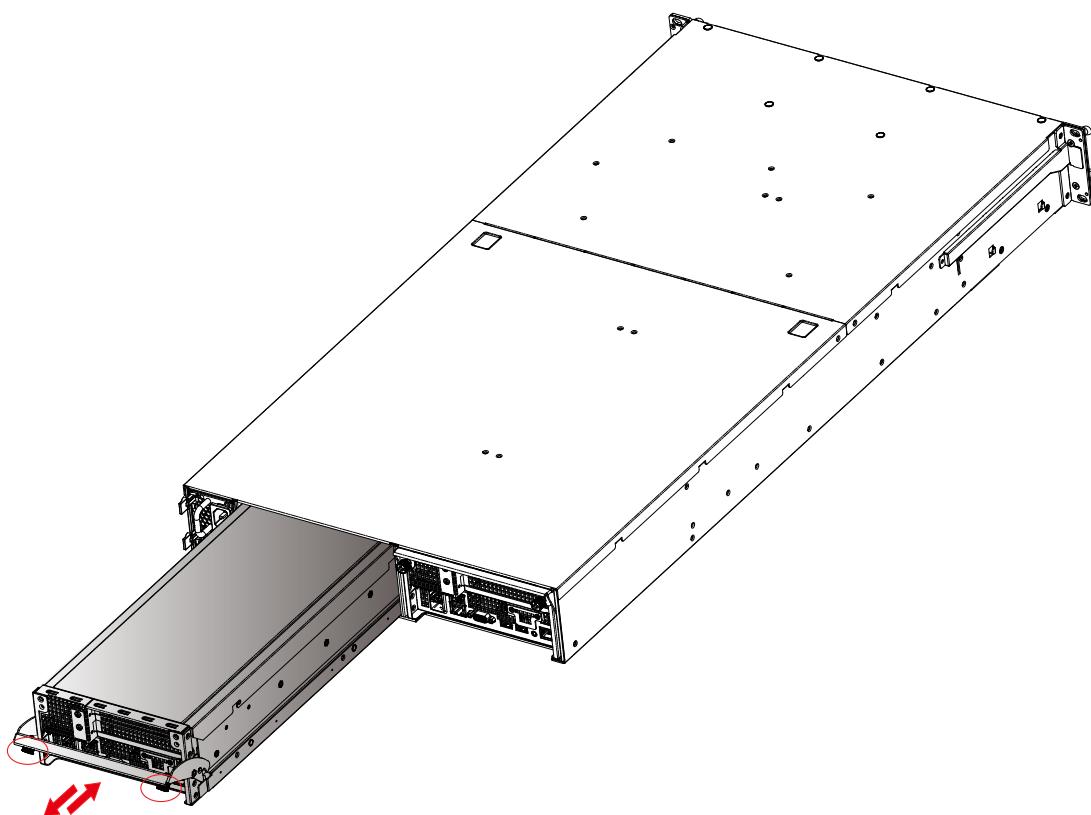

This information is provided for professional technicians only.


## 2.6 Fan Module

### 2.6.1 Installing the fan module

- ① Insert the module into the node. Make certain that the four rubber connectors are firmly inserted.
- ② Secure the top cover of the node.
- ③ Push the node into the chassis as demonstrated in section 2.5.

### 2.6.2 Removing the fan module

- ① Remove the node from the enclosure as demonstrated in section 2.5.
- ② Remove the top cover of the node.
- ③ Pull the module out of the node.

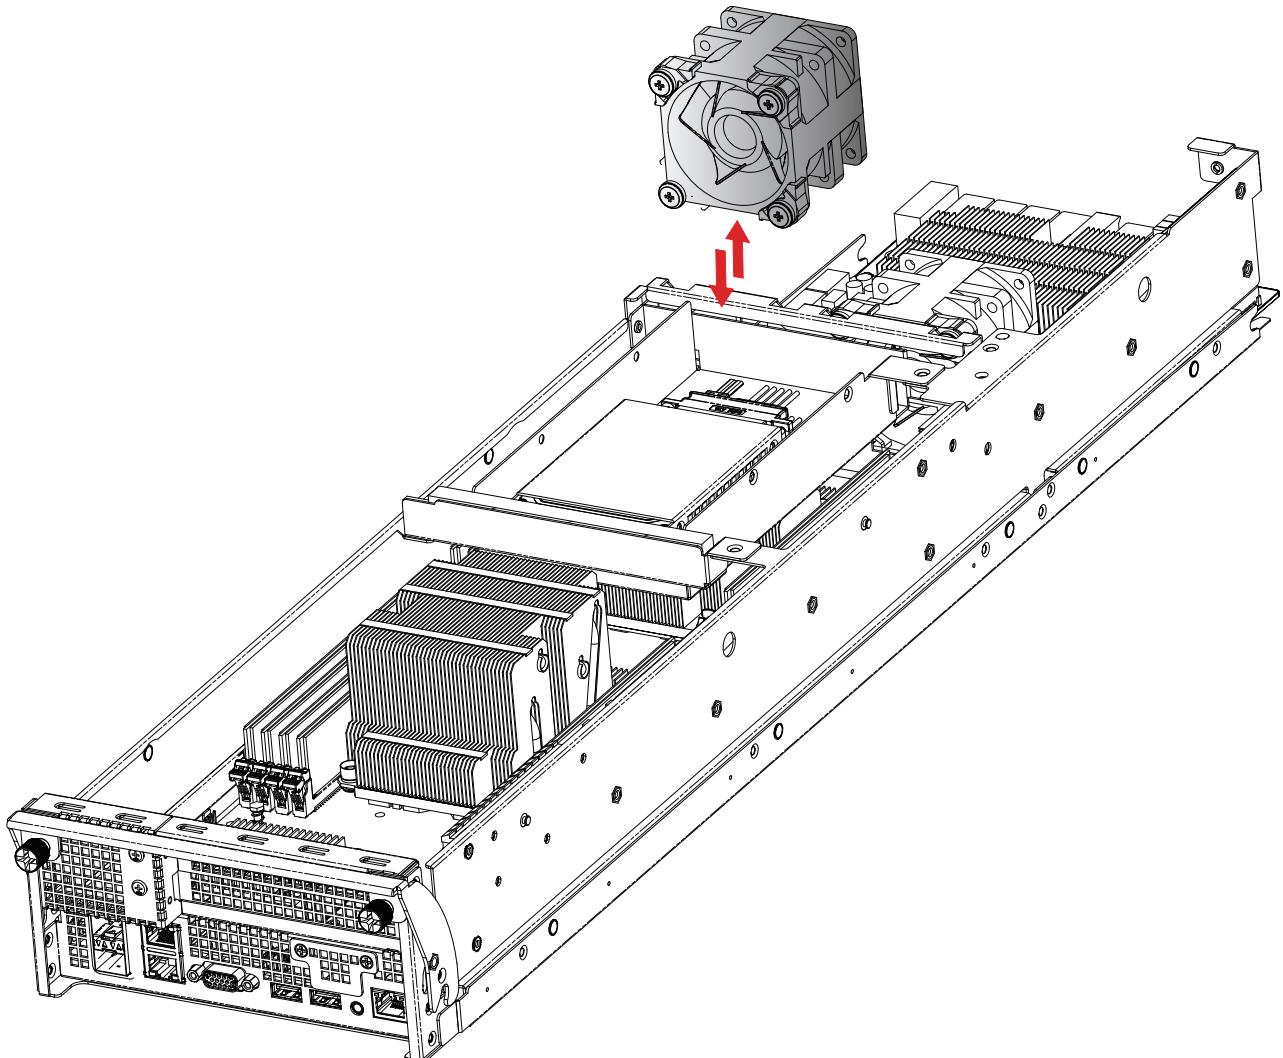

This information is provided for professional technicians only.


## 2.7 Hard Disk Drive

### 2.7.1 Installing the hard disk drive

- ① Insert the hard disk drive into the tray
- ② Secure the screws x 4 pcs (Screws may vary according to different types of hard drive disks).
- ③ Push the hard drive disk tray into the enclosure.

### 2.7.2 Removing the hard disk drive

- ① Press the lever on the hard drive disk tray. The tray lever will automatically be ejected.
- ② Remove the hard drive disk tray.
- ③ Remove the hard drive disk.

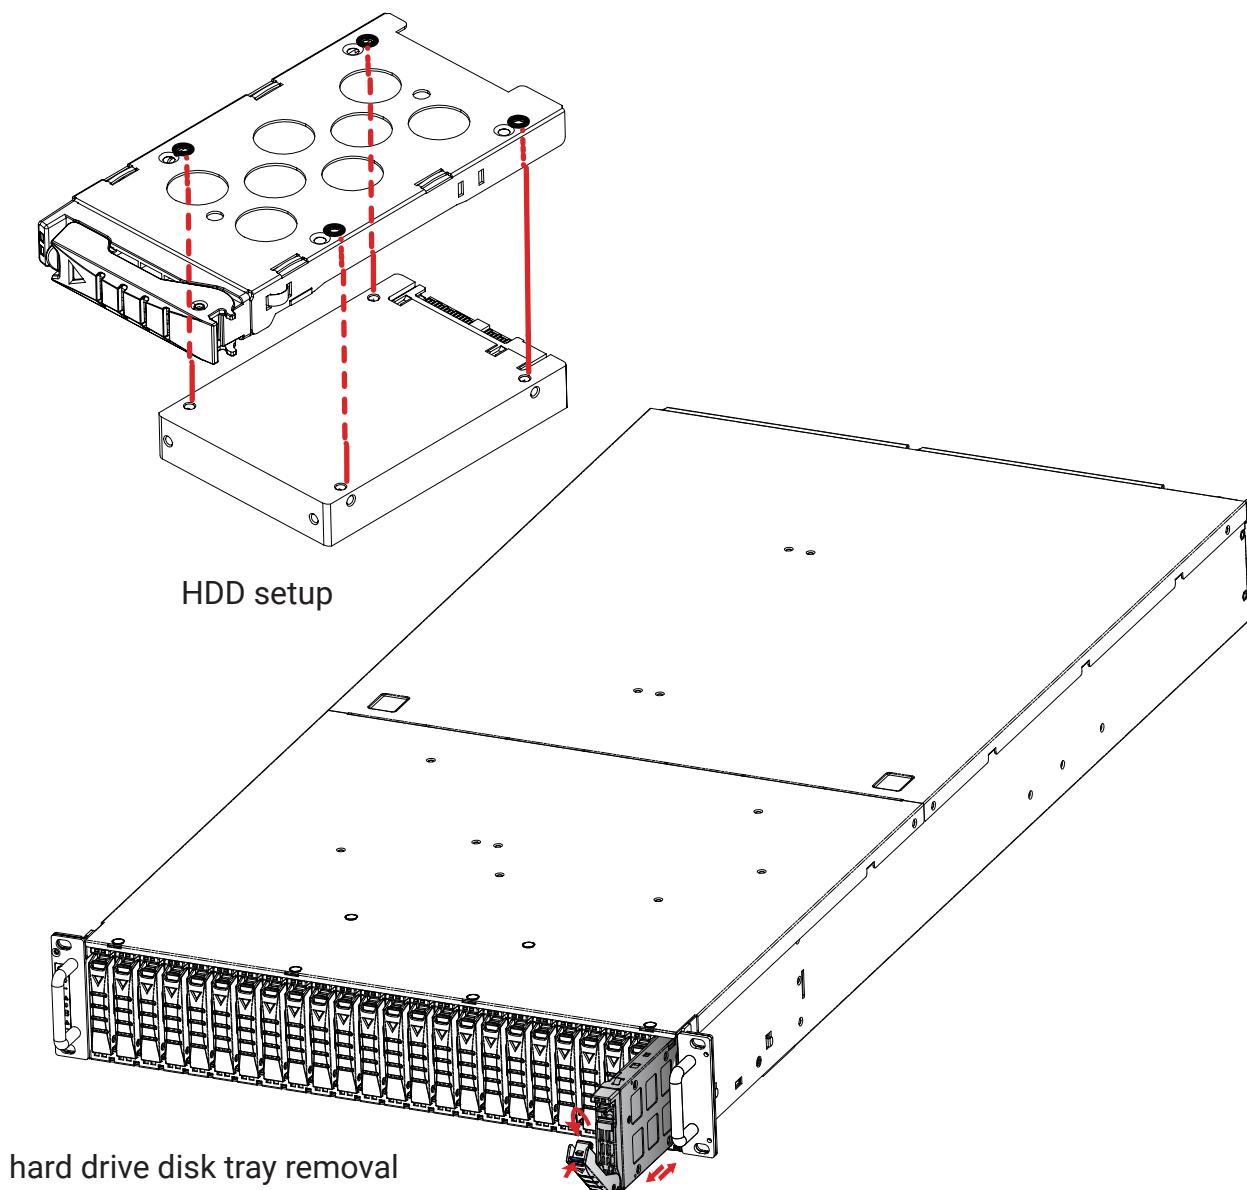

This information is provided for professional technicians only.


## 2.8 HDD Backplane Module

### 2.8.1 Installing the HDD Backplane

Insert the HDD module into the HDD backplane slot and secure the screws x 9 pcs.

### 2.8.2 Removing the HDD Backplane


Remove the screws on the HDD backplane and pull the module out of the enclosure.

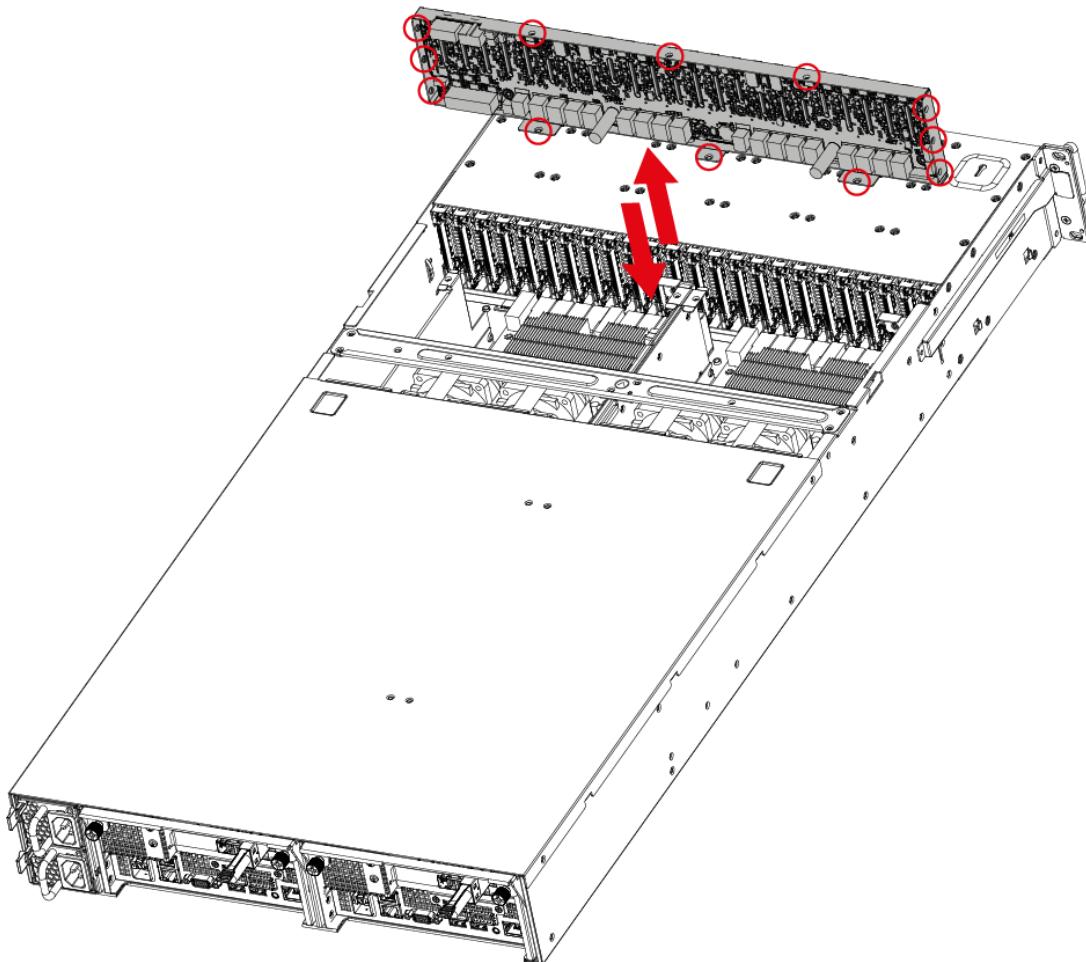


This information is provided for professional technicians only.

## 2.9 Slide Rail Installation

- ① Removing the inner slide rail.  
Pull the slide rail open by pressing the trigger downward.

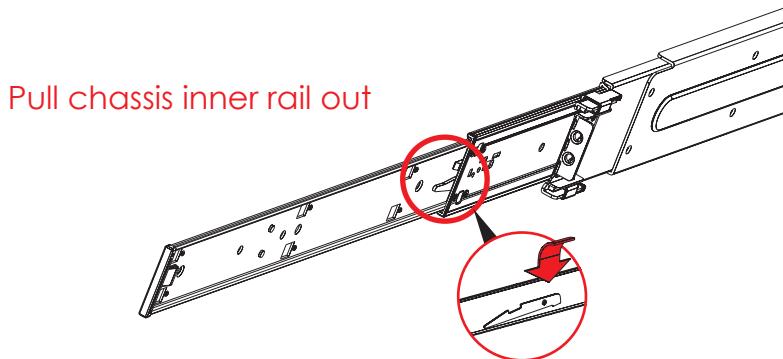

- ② Mounting the inner side of the slide rail.  
Align the rectangular holes on the inner side of the chassis with the bayonets on the side of chassis. Secure the inner chassis with screw form in a standard screw kit after the bayonets go through the holes and are accurately positioned.

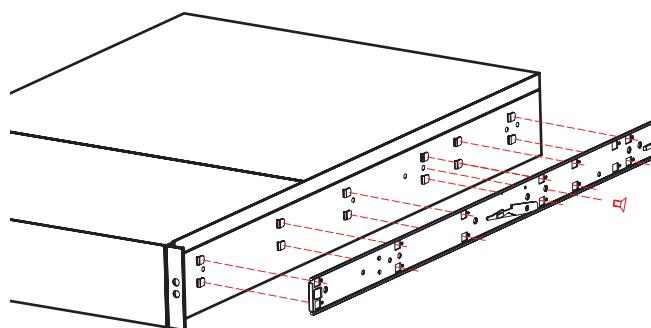


Bayonet on chassis shall be pre-formed as per  
the recommended dimension and location.


③ Attach the outer of cabinet to the slide rail.

Insert the stag into the upper and lower square holes on rail from the back of rail. Push the safety lock forward to secure the bracket. Be certain to check if the safety lock is in disengaged position before mounting the brackets.

Release safety lock before mounting

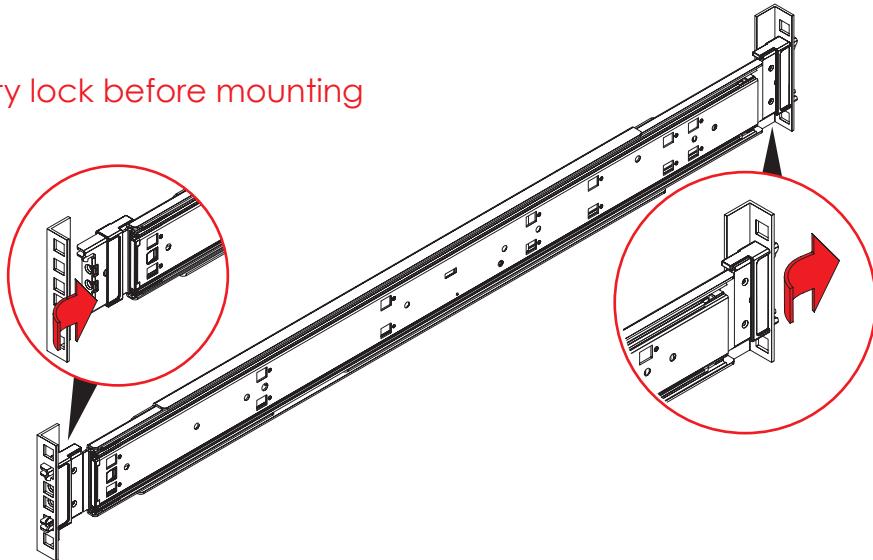

Push the safety lock forward to secure

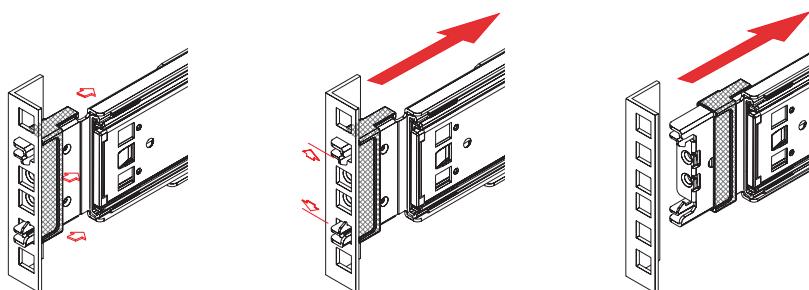


④ Mount the chassis into the cabinet.

Insert the inner side of chassis into the cabinet. Check if the ball retainer is fully opened before installing the chassis. It may cause catastrophic damage to the chassis if ball retainer is not in fully open position while mounting the chassis. While you are pushing chassis back into the cabinet, release the slide from locking position by pressing the trigger downward.

**WARNING**



It requires at least 2 people to install the chassis for safety purpose.

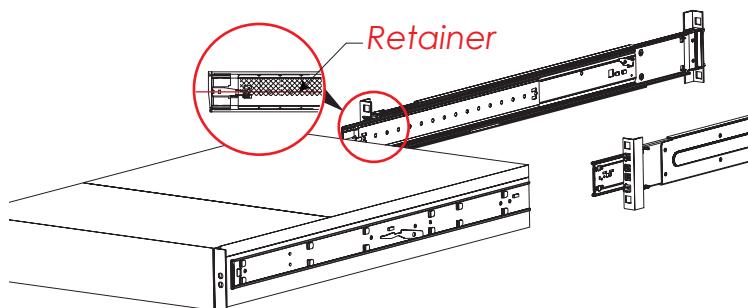


This information is provided for professional technicians only.

# Chapter 3. Hardware Settings

This section describes the jumpers, internal connectors, and internal LED settings.

## 3.1 Motherboard Block Diagram


**PAVO Block Diagram**

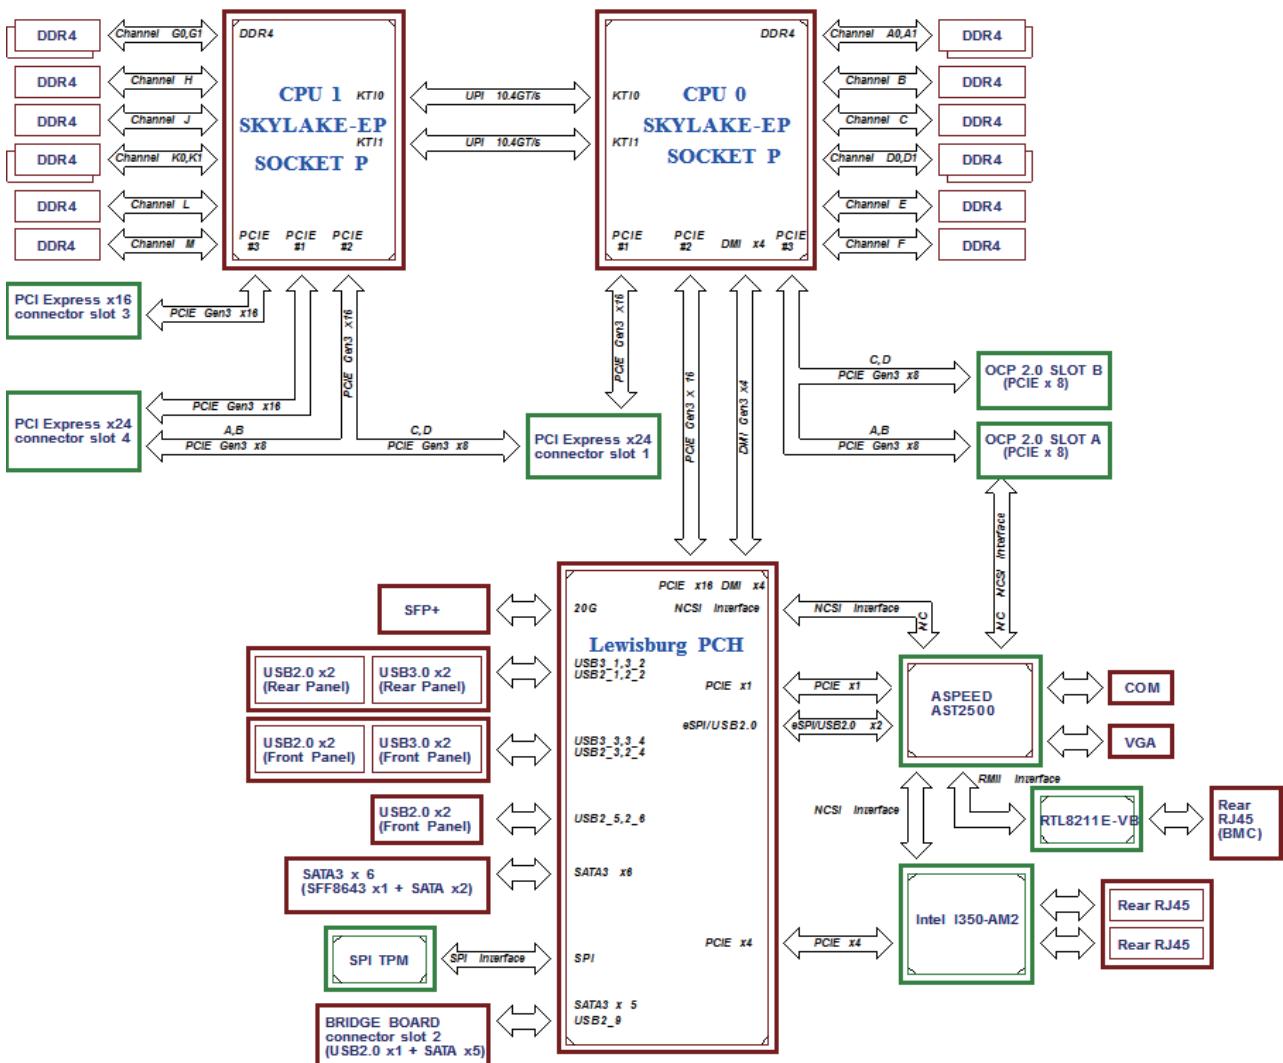


## 3.2 Motherboard Content List

Connector/Jumper/Header		Location	Connector/Jumper/Header		Location
1	Power Supply Connector Pin-out	J87: 12V & 5VSB 6A per pin.	23	ME Recovery Mode	J35
2	VDR Supply Connector Pin-out	J86: 12V	24	AIC Open Rack Header	J40
3a 3b	Serial ATA	J33, J34	25	FAN Front Header	J39
4	Serial ATA	J32	26	MDI PHY Port Header	J85
5	Front Panel Header	J81	27a 27b	SATA-DOM Power	J22, J42
6	VGA Port Header	J7	28	LCM Header	J9
7	COM1 Header	J11	29	PCH SGPIO Header	J18
8	COM4 Header	J12	30	PCH SSGPIO Header	J27
9	Front USB 3.0 Port	J16	31	BMC Disable	J30
10	Front USB 2.0 Port	J49	32	Password Clear	J31
11	DIMM Slots	J56~J58, J61~J65, J69~J76	33	PECI	J44
12	CPU Sockets	U55, U78	34	VRM SMB Header	J24
13	Debug Port Header	J13	35	All Node OFF	J52
14	BMC Debug Port Header	J14	36	PMBUS	J45
15	Clear CMOS Jumper	J10	37	BMC Fan	J51
16	IPMB Header	J36	38a 38b	SATA DOM Set Up	J20, J43
17	Battery Socket	BAT1	39	BIOS Recovery Mode	J37
18	Intruder Header	J47	40	UART	J17
19	SPI ROM Socket	U25	41	UID LED Header	J15
20	BMC ROM Socket	U29	42	BMC Reset	J23
21	Speaker Header	J48	43	PCIE Hot-Plug SMB Header (CPU0)	J2001
22	FLASH Security override	J21	44	PCIE Hot-Plug SMB Header (CPU1)	J2002

### 3.3 Motherboard Layout

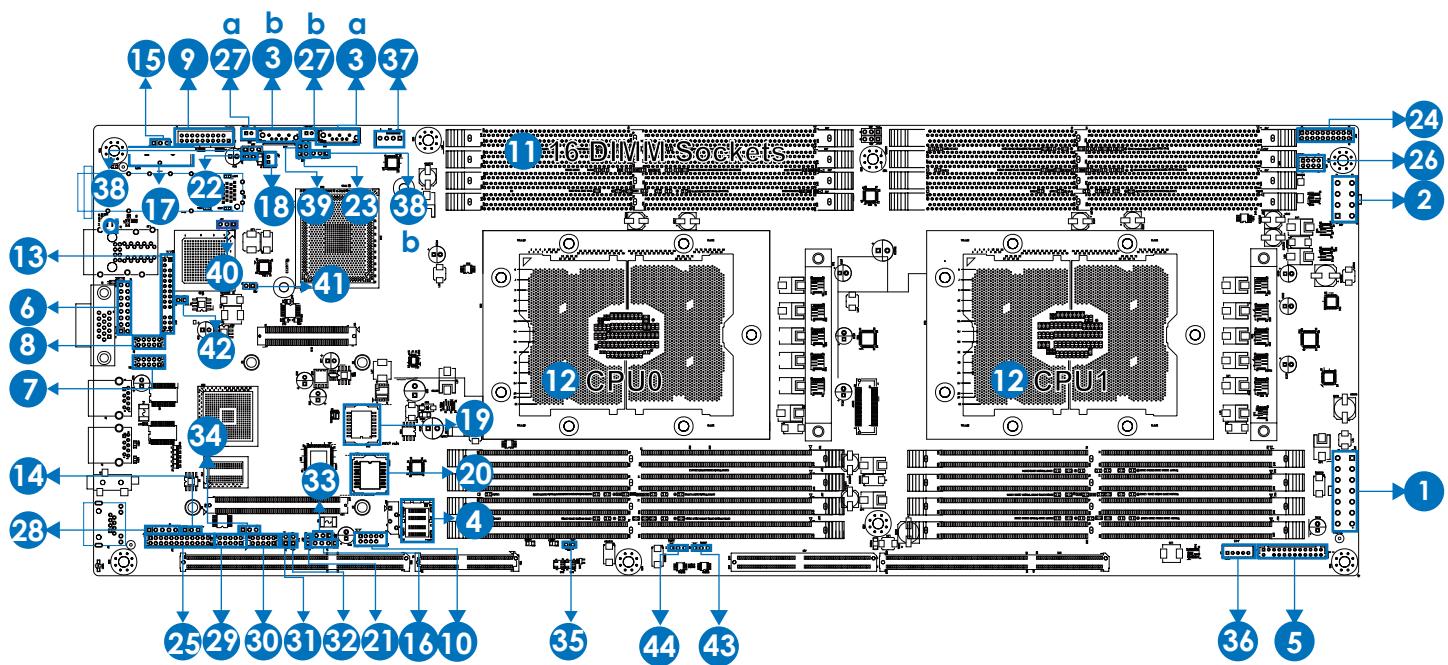


### 3.4 Connector and Jumper

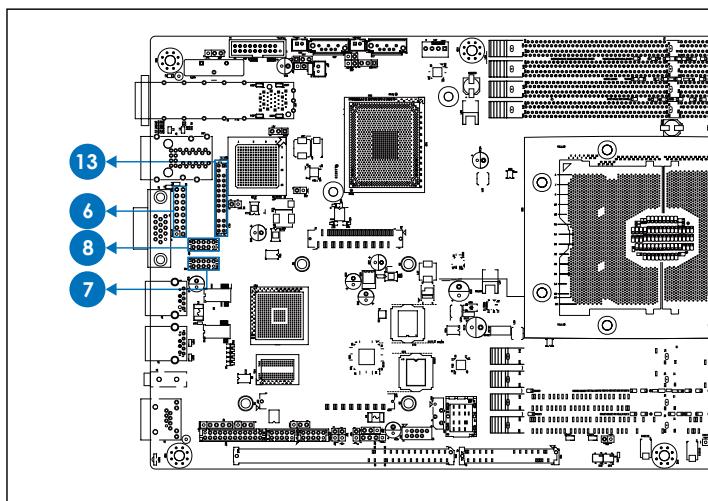

⑥ Front VGA Header: J7


	15 16	
GND	● ●	DDC_CLKO
GND	● ●	GND
AVSYNCO	● ●	VGA_5V
NC	● ●	AHSYNCO
GND	● ●	DACBO
DDC_DATAO	● ●	GND
DACGO	● ●	NC
GND	■ ●	DACRO
	1 2	







⑦&⑧ COM Header:  
J11, J12

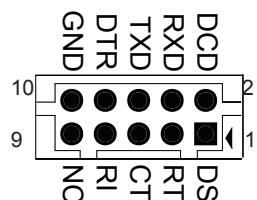


⑬ Debug Port Header: J13

	2	1	
CLK_DP80	● ■	GND	
PCH_CS0_N	●	KEY	
RST_PERST_N	●	P5V	
PCH_IO3	●	PCH_IO2	
P3V3	●	PCH_IO1	
PCH_IO0	●	GND	
SMB_PCH_SCL	●	SMB_PCH_SDA	
P3V3_AUX	●	ESPI_CS1	
GND	●	PCH_CLKRUN	
ESPI_RESET	●	ESPI_ALERT0	
KEY	●	KEY	
ESPI_ALERT1	●	PCH_A20GATE	
ESPI_SMI	●	ESPI_PME	
P5V_AUX	●	ESPI_SEL	
	28	27	

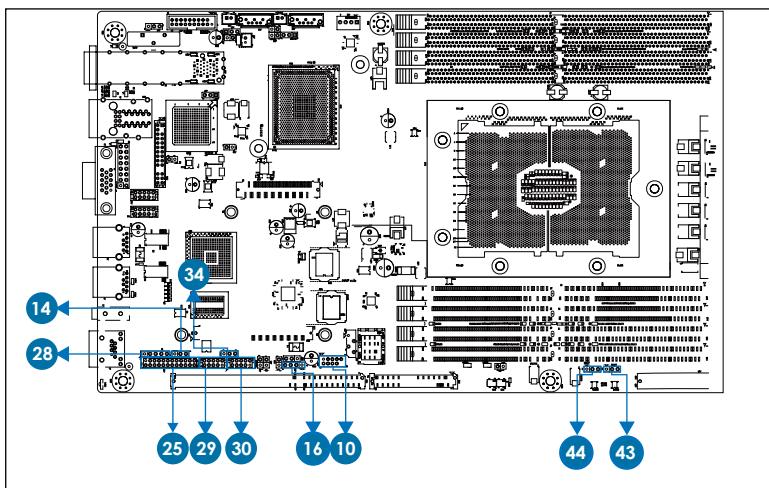

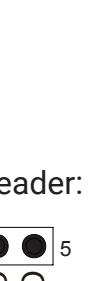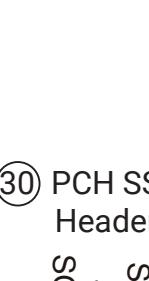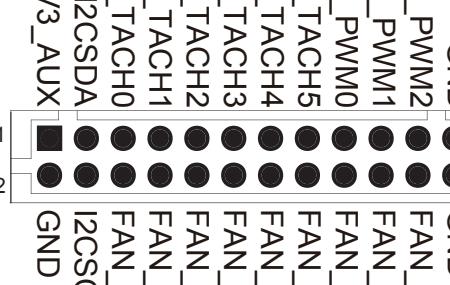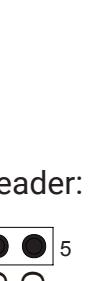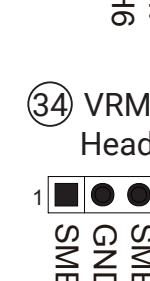
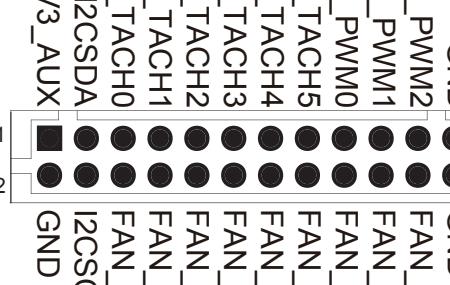
- |  |   |   |
|--|---|---|
| ⑩ Front USB 2.0:<br>J49  | ⑯ IPMB Header:<br>J36   | ㉕ FAN Front<br>Header: J39  |
|    |     |   |
|   |    |  |
|   |    |  |
|  |    |  |
|    |  |  |
|  |    |  |

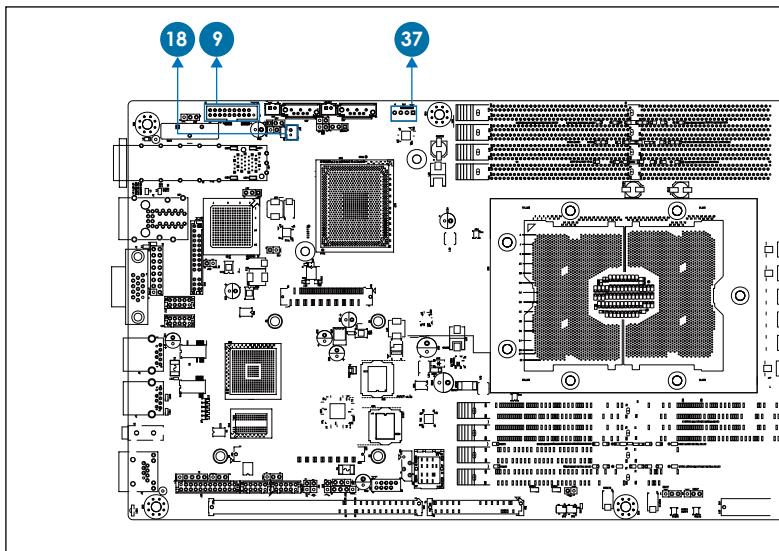


(9) Front USB 3.0 Port: J16

(18) Intruder Header: J47

(37) BMC Fan Header: J51

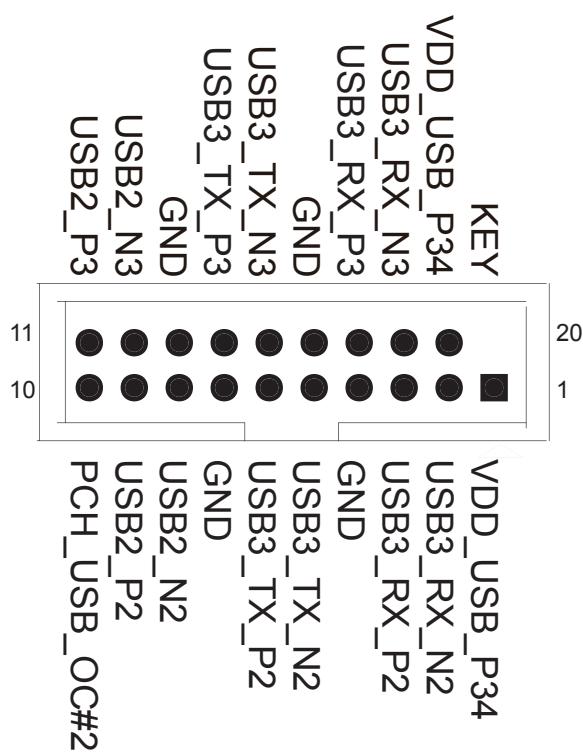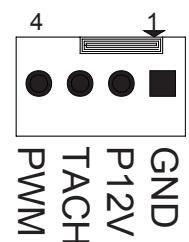

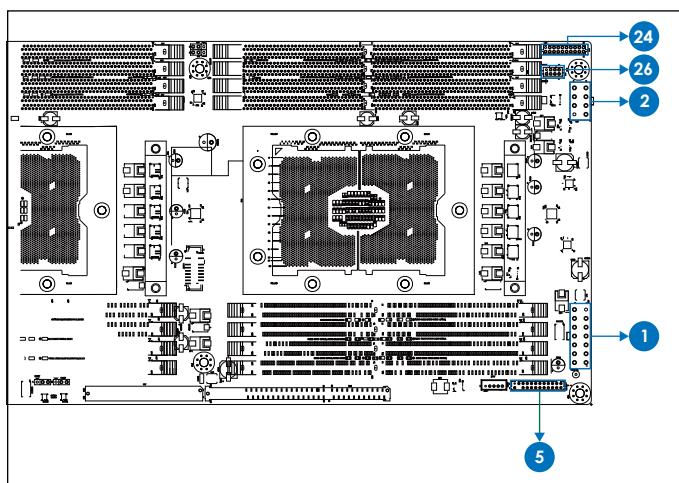

① Power Supply Connector  
Pin-out: J87

8	1	GND
+12V	●	■ GND
+12V	●	● GND
+5VSB	●	● GND
POWER OK	●	● PS_ON#
14	7	

② VRD Supply Connector  
Pin-out: J86

4	8	+12V
GND	●	● +12V
GND	●	● +12V
GND	●	● +12V
GND	■	● +12V
1	5	

⑤ Front Panel Header: J81


LAN2_ACT-	NMI_BTN
LAN1_ACT+	NC
INTRUDER_N	UID_BTN
I2CCLK	GND
FAULT_LED-	RST_BTN
UID_LED-	GND
+3.3V_DUAL	PWR_BTN
UID_LED+	HD_LED-
KEY	HD_LED+
2	PWR_LED+
1	
	23
	24

④ AIC OPEN RACK Header:  
J40

1	GND	CHASSIS_1U2N_N
2	INTRUDER_N	BNC_GPIO_EXN
	PMBUS_ALERT_N	FAN_TACH1
	PMBUS_DATA	FAN_PWM1
	PMBUS_CLK	GND
	GND	FAN_TACH0
1	BMC_RESET_N	FAN_PWM0
2	I2C1SDA	GND
	I2C1SCL	I2C8SDA
		I2C8SCL

⑥ MDI PHY Port Header:  
J85

1	MDI3_DATA_R_N	MDI1_DATA_R_P
2	MDI3_DATA_R_P	MDI1_DATA_R_N
	MDI2_DATA_R_N	MDIO_DATA_R_N
	MDI2_DATA_R_P	MDIO_DATA_R_P
1		
2		
	7	8

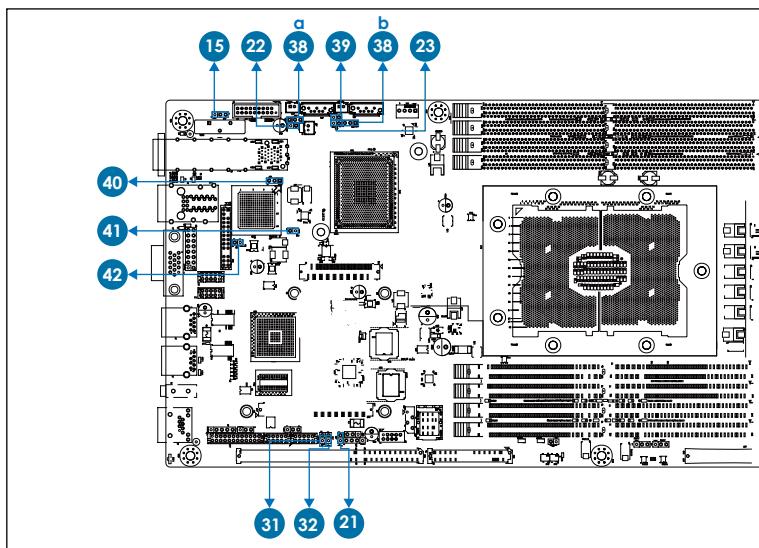


(15) CMOS Jumper Setting:  
J10



J10	Setting
Pin1-2	Normal (Default)
Pin2-3	Clear CMOS

(21) Speaker Header: J48

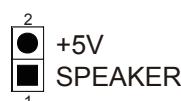

(22) FLASH Security override:  
J21



J21	Setting
Short	FLASH Security override
Open	Normal (Default)

(23) ME Recovery Mode: J35



J35	Setting
Short	ME Recovery Mode
Open	Normal (Default)

(31) BMC Disable: J30



J30	Setting
Short	BMC Disable
Open	Normal (Default)

(32) Password Clear: J31



J31	Setting
Short	Password Clear
Open	Normal (Default)

(38)a & (38)b SATA DOM Setup: J20 & J43




J20, J43	Setting
Pin1-2	SATA (Default)
Pin2-3	SATA DOM

(39) BIOS Recovery Mode:  
J37



J37	Setting
Short	BIOS Recovery Mode
Open	Normal (Default)

(40) UART Header: J17

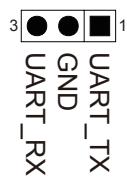

(41) BMC Reset: J23



J23	Setting
Short	BMC Reset
Open	Normal (Default)

(42) UID LED Header: J15



## 3.5 System LED Indicator


### 3.5.1 Front Panel LED

Power	Yellow	System is On.
	Blinking	System is in Standby; System is off, but has AC power.
	Off	System has no AC power.
UID	Blue	UID activity is detected.
	Off	No UID activity is detected.
System Fault	Red	Critical system failure is detected (processors, memory, voltage regulators, thermal events, fan failures, NMI, etc.).
	Off	No critical failures are detected.
Hard Disk	Green (Blinking)	Disk activity is detected.
	Off	No disk activity is detected.
LAN1_TRAFFIC	Green (Blinking)	LAN1 activity is detected.
	Off	LAN1 is not active.
LAN2_TRAFFIC	Green (Blinking)	LAN2 activity is detected.
	Off	LAN2 is not active.

### 3.5.2 Rear I350 LAN LEDs


The NIC Port LED should be connected to Vaux (standby) voltage.

Description		Left LED (LED4, LED2,) (Link/Activity)	Right LED (LED3, LED1) (Speed)
No Link		OFF	OFF
Linked at 10 Mbps	Link	Green	OFF
	Active	Blinking Green	OFF
Linked at 100 Mbps	Link	Green	Green
	Active	Blinking Green	Green
Linked at 1000 Mbps	Link	Green	Yellow
	Active	Blinking Green	Yellow

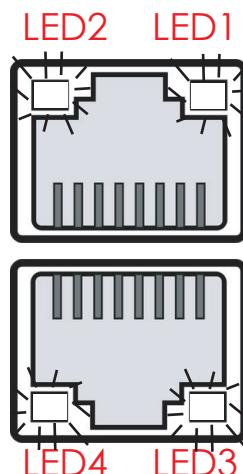


### 3.5.3 Rear PCH LAN LEDs

<b>LED5</b>	Green	LAN1 activity is detected.
	Off	LAN1 is not active.
<b>LED7</b>	Green	LAN1 link is detected
	Off	LAN1 is not linked.
<b>LED6</b>	Green	LAN0 activity is detected
	Off	LAN0 is not linked.
<b>LED4</b>	Green	LAN0 link is detected.
	Off	LAN0 is not active.

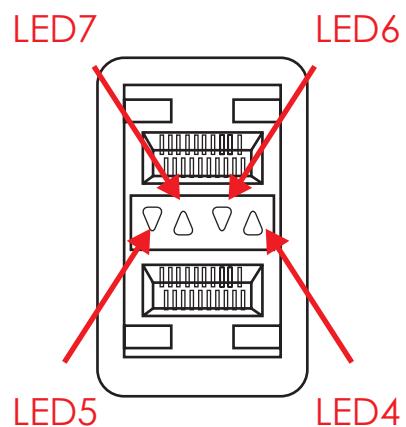

### 3.5.4 Rear UID LED & Internal LED


<b>LED1</b>	On	UID activity is detected.
	Off	UID is not active.
<b>LED2</b>	On	BMC Rack LAN activity is detected (Only for Rack).
	Off	BMC Rack LAN is not active (Only for Rack).
<b>LED3</b>	On	BMC Rack LAN activity is detected (Only for Rack).
	Off	BMC Rack LAN is not active (Only for Rack).
<b>LED18</b>	Blinking	BMC is working.
	Off	BMC is not working.

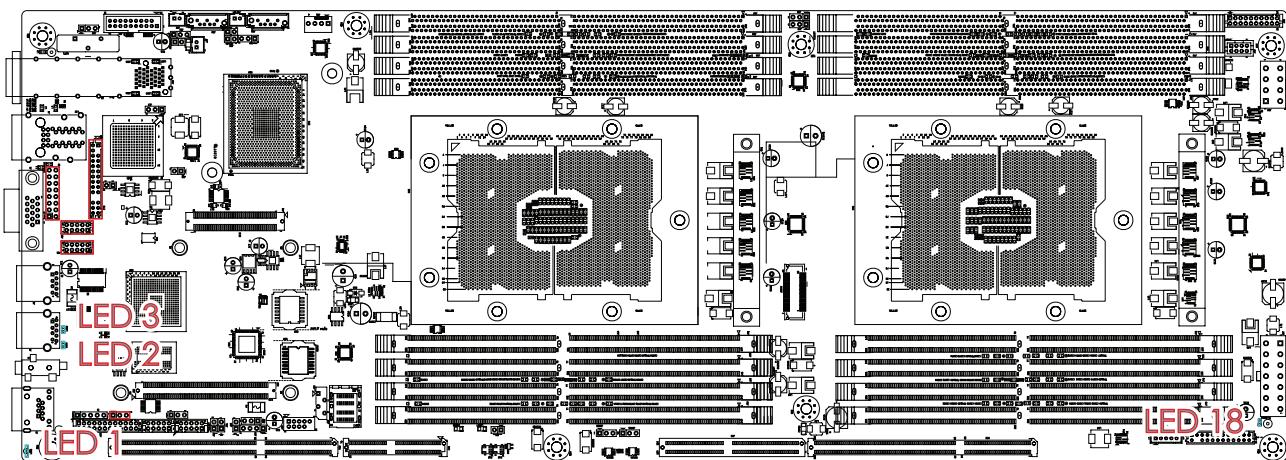


## 3.6 HDD Backplane

### 3.6.1 Layout

Top view

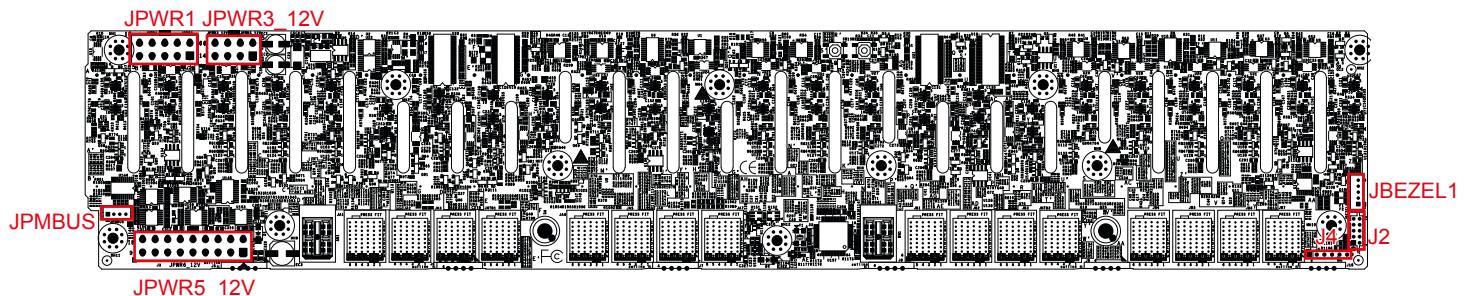


Bottom view

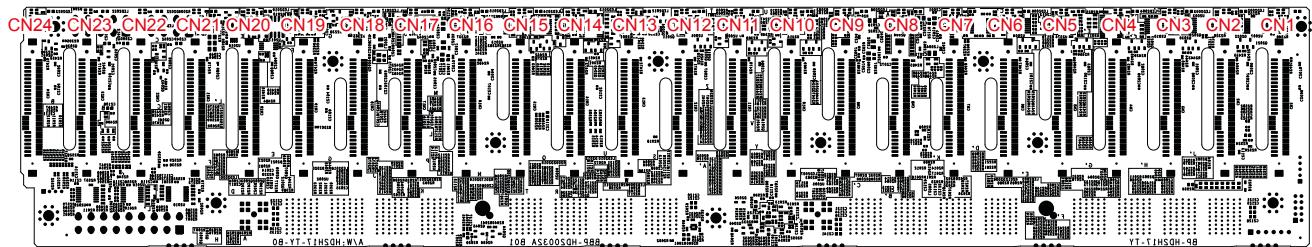


### 3.6.2 Internal Connectors/Jumpers


Power Supply Connector (JPWR1)

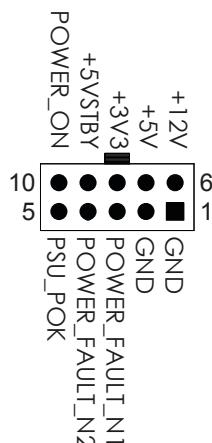


Power Supply Connector (JPWR3\_12V)

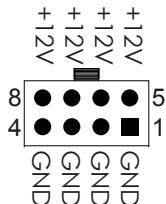


PMBUS Header (JPMBUS)

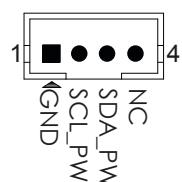


Power Supply Connector (JPWR5\_12V)

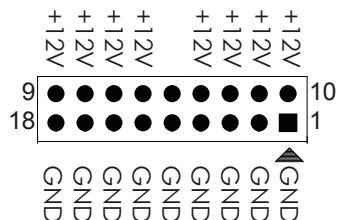


for Bezel (JBEZEL1)

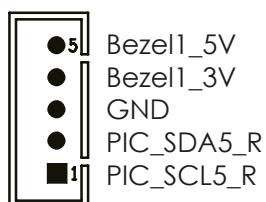

Front Panel Header (J2)

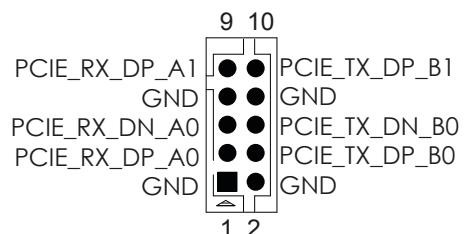


MCU JTAG Header (J4)

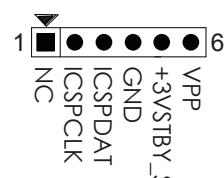


## 3.7 Bridge Board

### 3.7.1 Layout

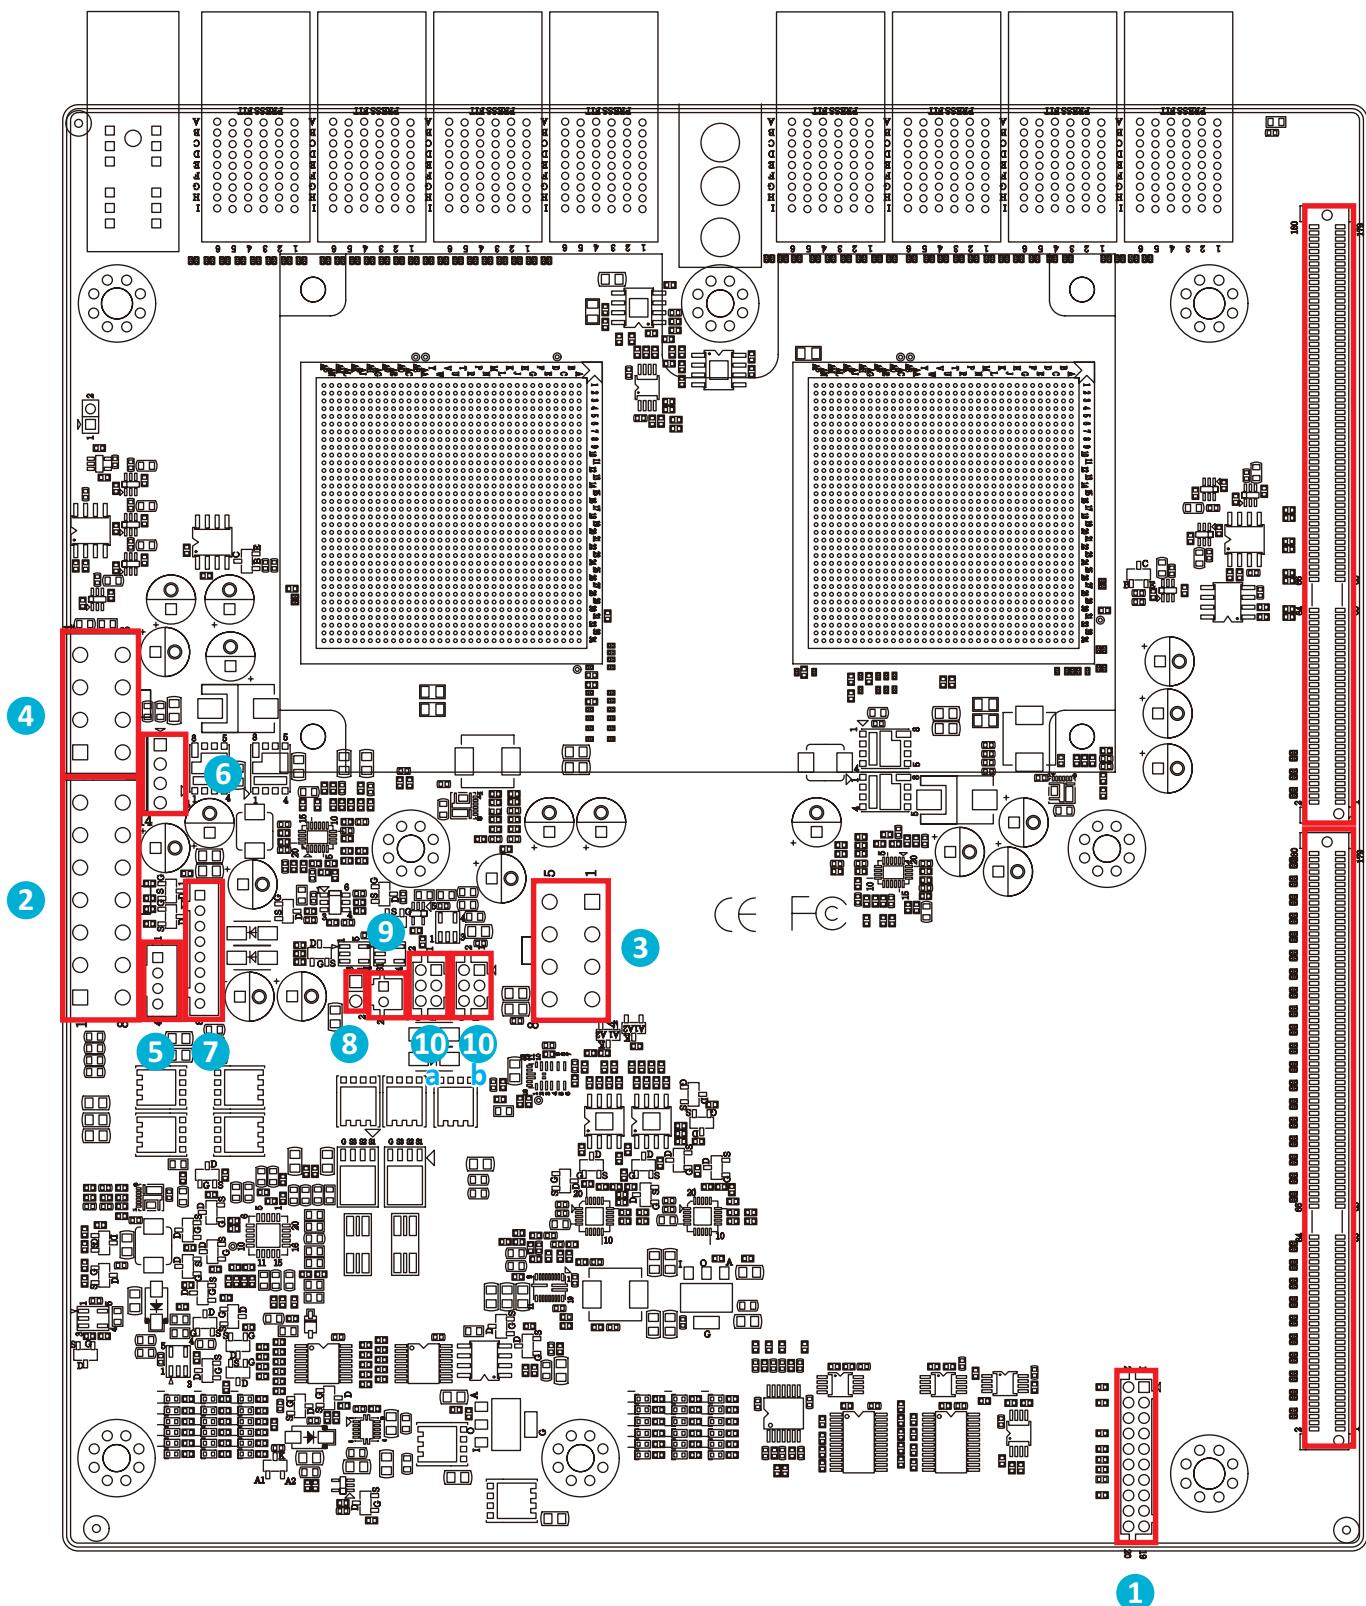

### 3.7.2 Connector

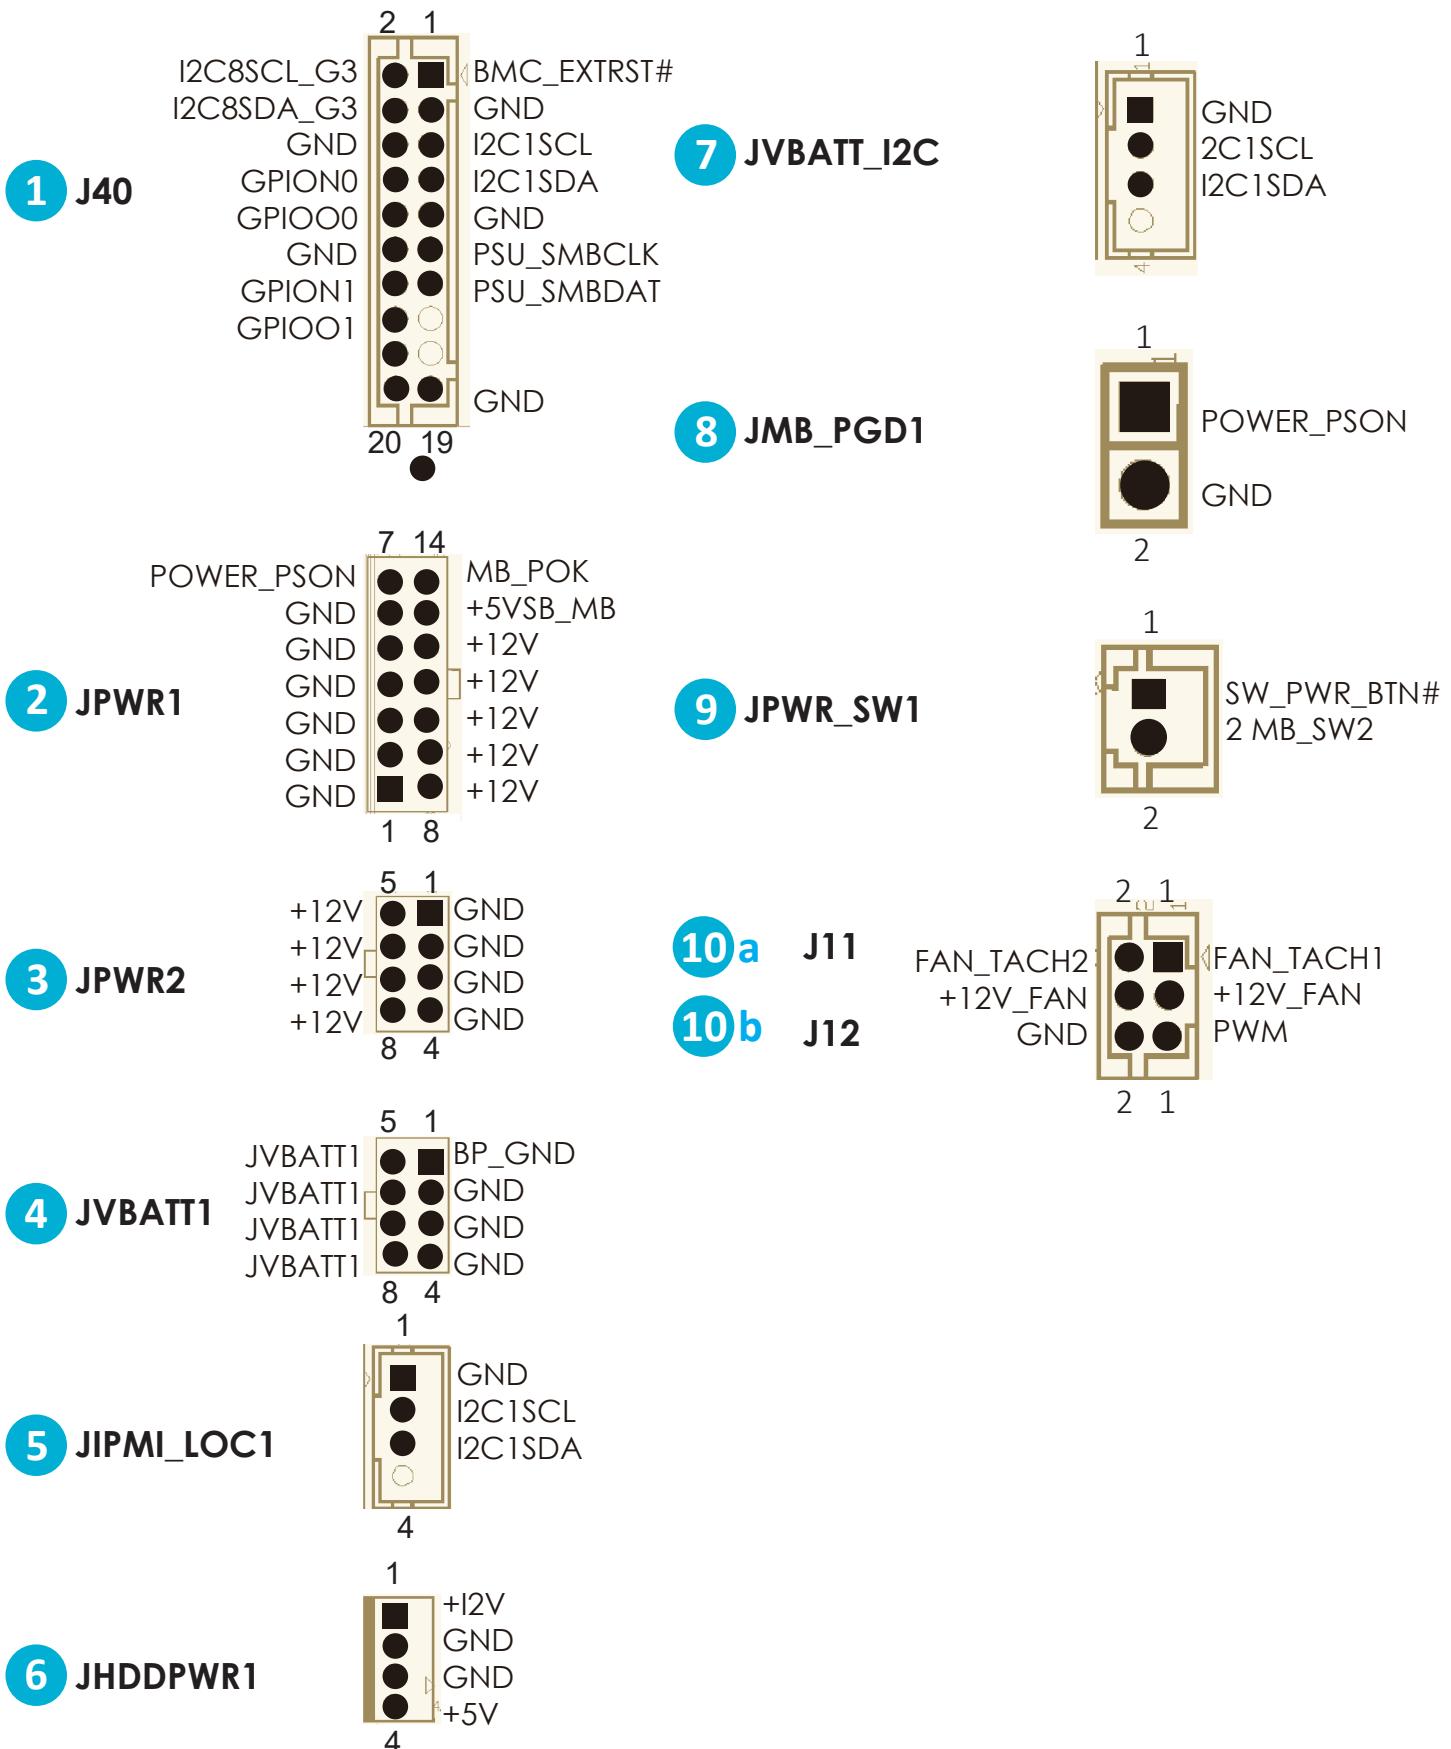

# Chapter 4. BIOS Configuration Settings

This chapter demonstrates how to configure the UEFI BIOS settings in your system device. You can enter the BIOS screen during system startup.

To enter BIOS configuration settings,

- Press **Esc** key during the Power-On-Self-Test (POST)

To enter BIOS after POST, you have to restart the system by using one of the three methods:

- Press **Ctrl + Alt + Delete**.
- Press the reset button on the system chassis.
- Turn the system off and on.

## NOTE

 The following pages provide the details of BIOS menu. Please be noticed that the BIOS menu are continually changing due to the BIOS updating. The BIOS menu provided are the most updated ones when this manual is written.

## 4.1 Navigation Keys

The navigation keys are listed below.

Function Key	Description
< ↑ > < ← > < → > < ↓ >	Select item.
< Enter >	Select and enter sub-screen.
< + > < - >	Modify selected option.
< F1 >	General help.
< F2 >	Previous Value.
< F3 >	Optimized defaults.
< F4 >	Save & Exit.
< F5> < F6 >	Change values.
< F7 >	Discard Change and Exit.
< F9 >	Load Optimal Default for all values.
< F10 >	Save changes and exit.
< F12 >	Print Screen.
< Esc >	Exit the current menu screen.

## 4.2 BIOS Setup

### 4.2.1 Menu

Press **←** and **→** to select the options of the menu bar.

Press **Enter** to access the option screen.

Menu	Description
Main	Displays basic system information and date & time.
Advanced	Allows configuration of advanced system settings.
Security	Sets passwords and security functions.
Power	Sets the power management parameters.
Boot	Sets boot options, such as Quick Boot or USB Boot.

### 4.2.2 Startup

**Step 1** Press **ESC** to run the BIOS setup procedure.




#### NOTE

When Quiet Boot is enabled, OEM logo will be displayed instead of post messages.



**Step 2** There will be a message “Entering SETUP” displayed on the diagnostics screen.

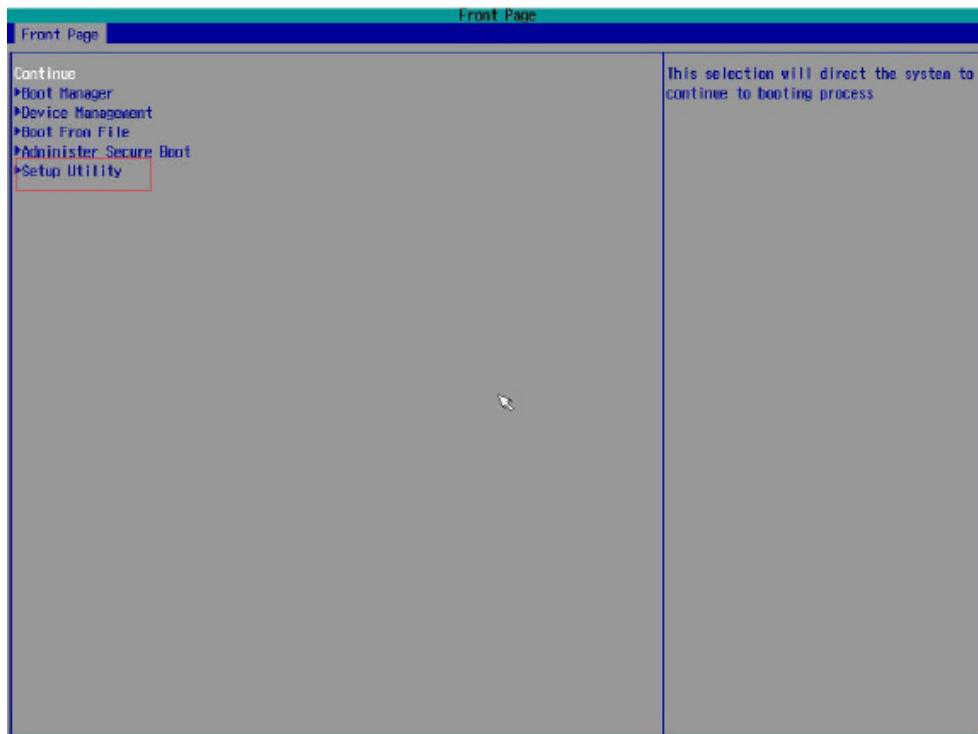



**Step 3** Identify the BIOS version.




**NOTE**

For the official released version, the last digit of the BIOS version must end in a “0.”

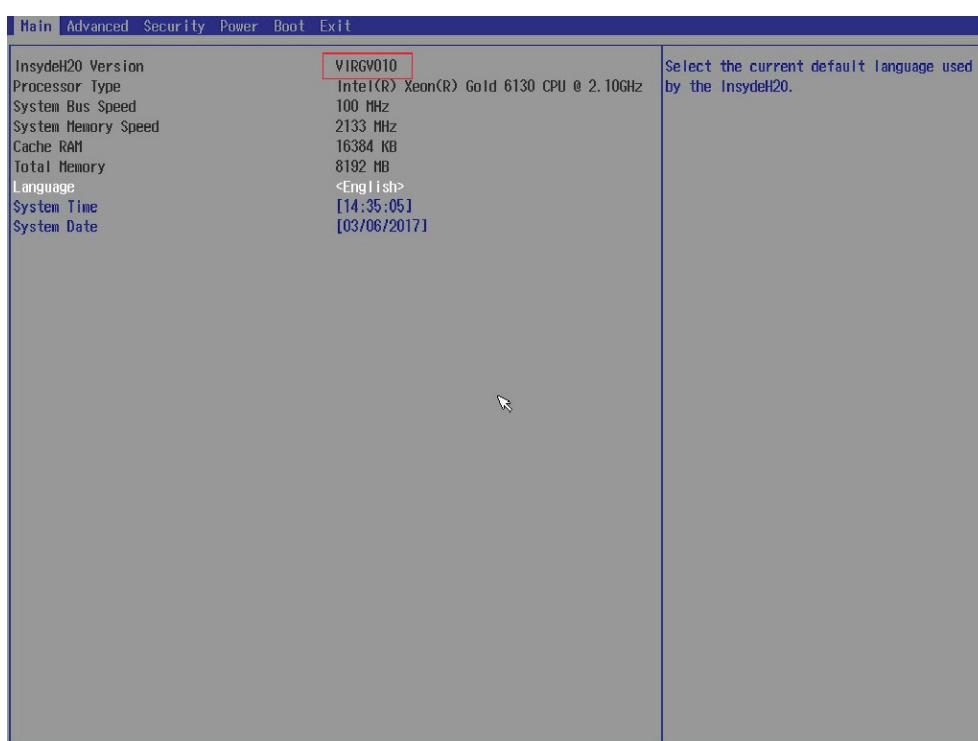

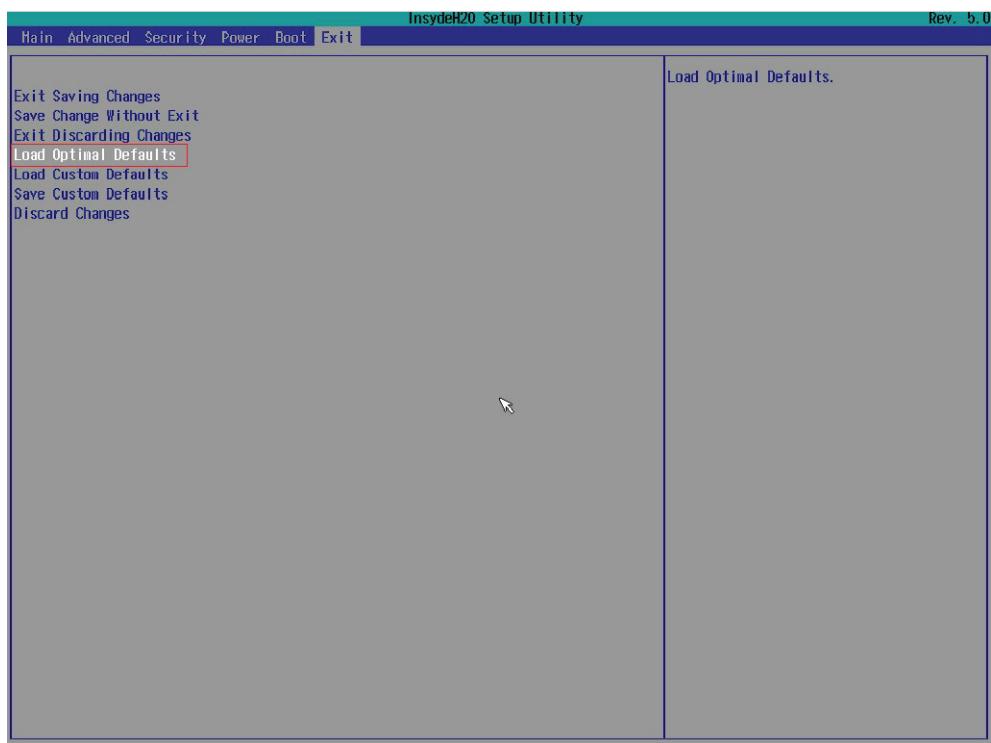**Step 4** Load Optimal Default Setting.**Step 5** Save the setting and exit the BIOS setup utility.

## 4.3 Main

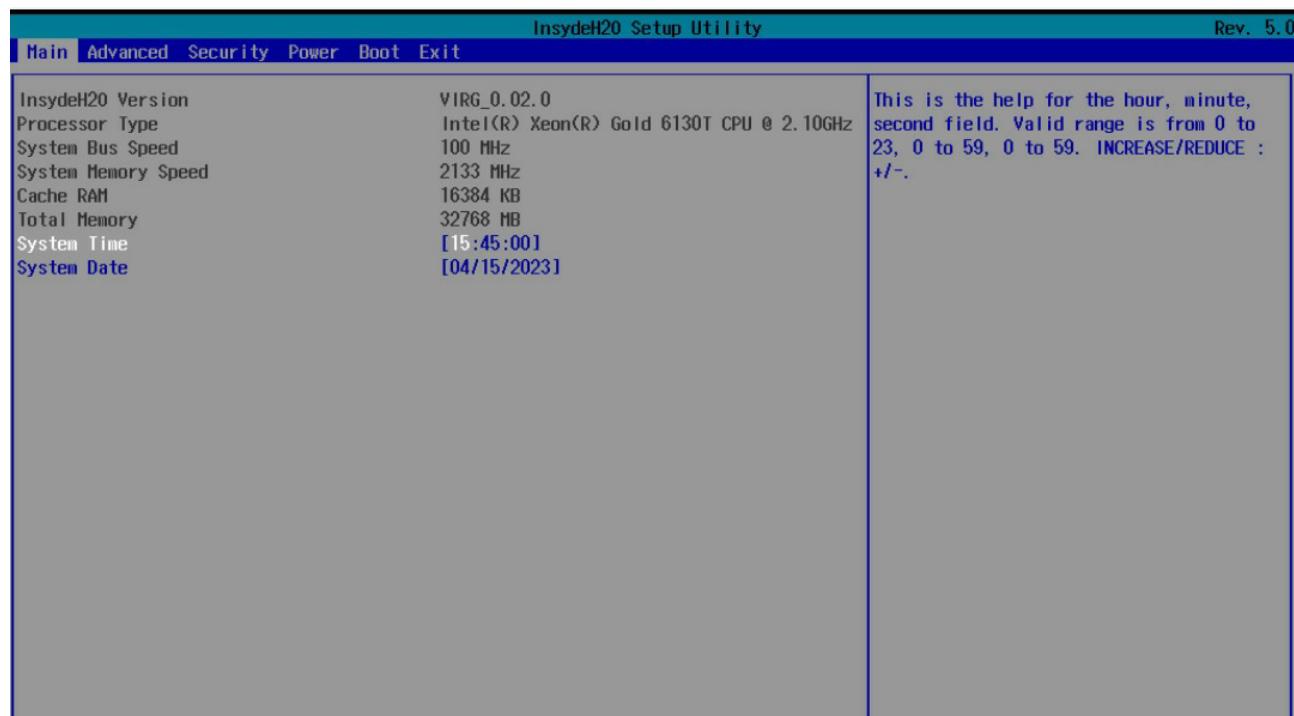


Main Option Key:

### 4.3.1 Main

Option Key	Description
System time	Configures the current time.
System date	Configures the current date.

## 4.4 Advanced

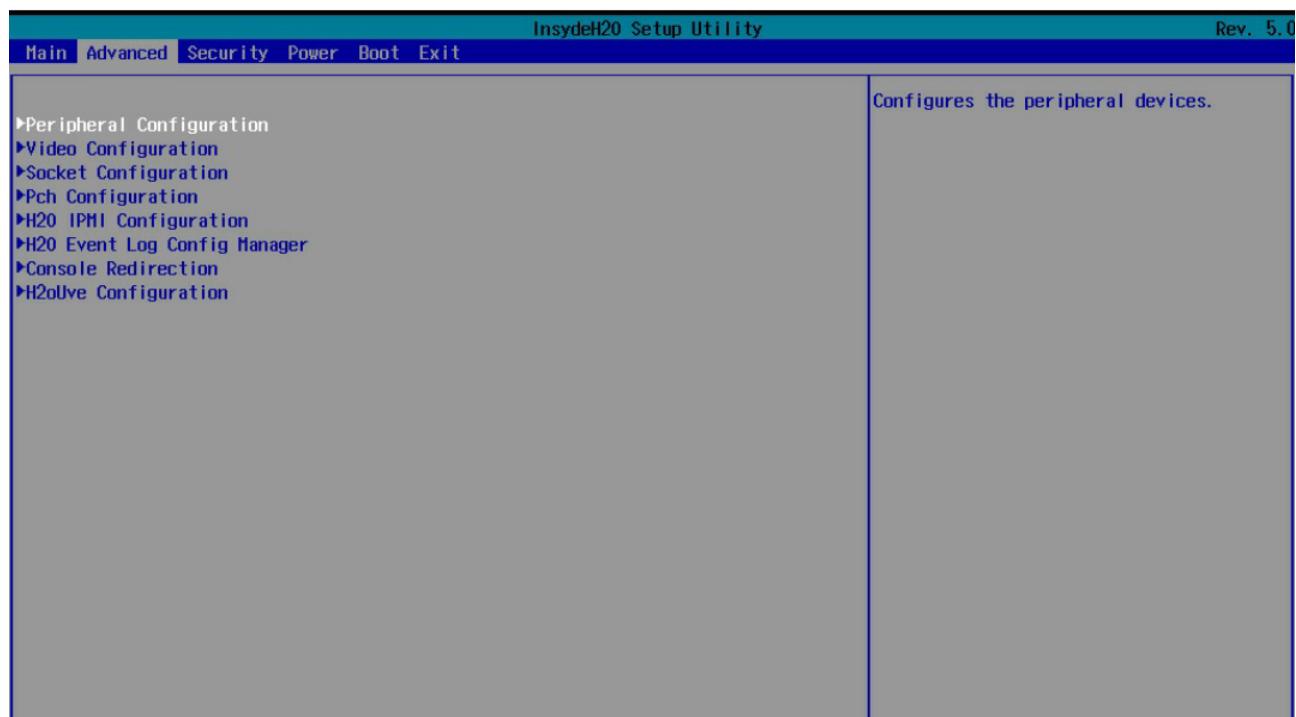

Advanced Option Key:

### 4.4.1 Peripheral Configuration

Peripheral Configuration		
PCIe SR-IOV	Enable	Disable
PCIe ARI	Enable	Disable
ARI Forward	Enable	Disable
Spread Spectrum	Enable	Disable
Redfish On/Off	Enable	Disable

### 4.4.2 Video Configuration

Video Configuration		
Display Mode	Plug In First	On Board First

### 4.4.3 Socket Configuration

Socket Configuration			
Processor Configuration	Hyper-Threading [ALL]	Enable	Disable
	VMX	Enable	Disable
	Enable SMX	Enable	Disable

Processor Configuration	MSR Lock Control	Enable		Disable
	Extended APIC	Enable		Disable
Common RefCode Configuration	MMCFG Size	64M	128M	256M
		512M	1G	2G
	MMIO High Base	56T	40T	24T
		16T	4T	1T
	MMIO High Granularity Size	1G	4G	16G
		64G	256G	1024G
	Serial Debug Message Level	Disable		Minimum
		Normal		Maximum
UPI Configuration	UPI Status	Link Speed Mode	Slow	Fast
		Link Frequency Select	9.6Gb/s	10.4Gb/s
			Auto	Use Per Link Setting
		Link L0p Enable	Auto	
			Enable	
			Disable	
		Link L1 Enable	Auto	
			Enable	
			Disable	
		Legacy VGA Socket	Min=0, Max=3	
		Legacy VGA Stack	Min=0, Max=6	
Memory Configuration	Enforce POR	Auto	POR	Disable
	Memory Frequency	Selections in MHz		
	IMC BCLK	Auto	100 MHz	133 MHz
	MRC Promote Warnings	Enable		Disable
	Promote Warnings	Enable		Disable
	Halt on mem Training Error	Enable		Disable
	Write Preamble TCLK	Auto	1TCLK	2TCLK
	Read Preamble TCLK	Auto	1TCLK	2TCLK
	Enable ADR	Enable		Disable
	Legacy ADR Mode	Enable		Disable
	ADR Data Save Mode	Disable	Batterybacked DIMMs	NVDIMMs
	Check PCH_PM_STS	Enable		Disable

Memory Configuration	Check Platform Detect ADR	Enable	Disable	
	Erase-Arm NVDIMMs	Enable	Disable	
	Restore NVDIMMs	Enable	Disable	
	Interleave NVDIMMs	Enable	Disable	
	Custom Refresh Rate	Min=0, Max=40		
	SMB Clock Frequency	Auto 400 KHz	100 KHz 1 MHz	
I/O Configuration	PCI 64-Bit Resource Allocation	Enable	Disable	
	PCIe Train by BIOS	No	Yes	
	PCIe Hot Plug	Auto	Manual	
		Enable	Disable	
	PCIe ACPI Hot Plug	Enable	Disable Per-Port	
	MC BaseAddress Range	Auto		Below 4G
	MC Index Position	12		20
	MC Num Group	1	8	32 64
	PCI-E Completion Timeout (Global) Disable	No	Yes	Per-Port
	PCI-E Global Timeout Value	Program the Completion Timeout Value (D:x F:0 O:B8h B:3-0) where x is 0-3		
Advanced Power Configuration	CPU State Control	WFR Uncore GV Rate Reduction	Auto	
			Enable	
			Disable	
		Uncore Freq Scaling (UFS)	Enable	Disable
		SpeedStep (Pstates)	Enable	Disable
		Config TDP	Nominal	
			Level 1	
			Level 2	
		P State Domain	All	One
		EIST PSD Function	HW_ALL	
			SW_ALL	
			SW_ANY	
		SINGLE_PCTL	Enable	Disable

Advanced Power Management Configuration	CPU P State Control	Single Power Domain (SPD)	Enable	Disable
		Boot performance mode	Max Performance	
			Max Efficient	
			Set by Intel Node Manager	
		Energy Efficient Turbo	Enable	Disable
		Turbo Mode	Enable	Disable
		CPU Flex Ratio Override	Enable	Disable
	Hardware PM State Control	Hardware P-States	Disable	Native Mode
			Native Mode with No Legacy Support	
		HardwarePM Interrupt	Enable	Disable
		EPP Enable	Enable	Disable
		EPP profile	Performance	Balanced Performance
			Balanced Power	Power
		APS rocketing	Enable	Disable
		Scalability	Enable	Disable
		PPO-Budget	Enable	Disable
	Package C State Control	Package C State	C0/C1 state, state	C2 state
			C6(non Retention)	C6(Retention) state
			No Limit	Auto
		C2C3TT	Min=0, Max=255	
		PKG C-state Lat. Neg.	Enable	Disable
		LTR IIO Input	Take IIO LTR input.	Ignore IIO LTR input.

#### 4.4.4 PCH Configuration

PCH Configuration				
PCH Devices	PCH state after G3	S0	S5	Last State
PCH SATA Configuration	SATA Controller			
	Configure SATA as	AHCI		RAID
	Support Aggressive Link Power Management	Enable		Disable
	Alternate Device ID on RAID	Enable		Disable
	Load EFI Driver for RAID	Enable		Disable
	Port 0	Enable		Disable
	SATA Port 0 DevSlp	Enable		Disable
	Hot Plug	Enable		Disable
	Configure as eSATA	Enable		Disable
	Mechanical Presence Switch	Enable		Disable
	Spin Up Device	Enable		Disable
	SATA Device Type	Hard Disk Drive		Sata State Drive
	SATA Topology	Unknown	ISATA	Direct Connect
		Flex		M.2
	Port 1	Enable		Disable
	SATA Port 1 DevSlp	Enable		Disable
	Hot Plug	Enable		Disable
	Configure as eSATA	Enable		Disable
	SATA HDD Unlock	Enable		Disable
	SATA Led locate	Enable		Disable
	RAID 0	Enable		Disable
	RAID 1	Enable		Disable
	RAID 10	Enable		Disable
	RAID 5	Enable		Disable
	Intel Rapid Recovery Technology	Enable		Disable
	RAID Option ROM UI banner	Enable		Disable
	IRRT Only on ESATA	Enable		Disable

PCH SATA Configuration	Smart Response Technology	Enable	Disable
	RAID OROM prompt delay	2 Seconds	4 Seconds
		6 Seconds	8 Seconds
PCH sSATA Configuration	sSATA Controller	Enable	Disable
	Configure sSATA as	AHCI	RAID
	Support Aggressive Link Power Management	Enable	Disable
	Alternate Device ID on RAID	Enable	Disable
	Load EFI Driver for RAID	Enable	Disable
	Port 0	Enable	Disable
	Hot Plug	Enable	Disable
	Configure as eSATA	Enable	Disable
	Spin Up Device	Enable	Disable
	sSATA Device Type	Hard Disk Drive	Sata State Drive
	SATA Topology	Unknown	ISATA
		Flex	M.2
	Port 1	Enable	Disable
	Hot Plug	Enable	Disable
	Configure as eSATA	Enable	Disable
	SATA HDD Unlock	Enable	Disable
	SATA Led locate	Enable	Disable
	RAID 0	Enable	Disable
	RAID 1	Enable	Disable
	RAID 10	Enable	Disable
	RAID 5	Enable	Disable
	Intel Rapid Recovery Technology	Enable	Disable
	RAID Option ROM UI banner	Enable	Disable
	IRRT Only on ESATA	Enable	Disable
	Smart Response Technology	Enable	Disable
RAID OROM prompt delay	2 Seconds	4 Seconds	
	6 Seconds	8 Seconds	
PCH Internal LAN	Enable	Disable	
Wake on LAN	Enable	Disable	

PCH sSATA Configuration	SLP_LAN# Low on DC Power	Enable	Disable	
	K1 off	Enable	Disable	
	FPK Port 1-4	Enable	Management	Disable
	PCI Delay Optimization	Enable	Disable	
	Compliance Test Mode	Enable	Disable	
	PCI-E ASPM Support (Global)	Per individual port		L1 Only
	CTO for Uplink x16 CTO for Uplink x8	40-50ms(spec 50us-50ms)	40-50ms(spec 16ms-55ms)	160-170ms (spec 65ms-210ms)
		400-500ms (spec 260ms-900ms)	1.6-1.7s(spec 1s-3.5s)	Disable
	MPL for Uplink x16 MPL for Uplink x8	MPL 128B	MPL 256B	MPL 512B
	PCIE Clock Gating	Enable		Disable
	PCH DMI ASPM	Platform-POR	ASPM L	Disable
	DMI Link Extended Synch Control	Enable		Disable
	Stop and Scream	Enable		Disable
	Expanded SPI TPM Transaction Length Enable	Enable		Disable
	Subtractive Decode	Enable		Disable
	Subtractive Decode Port#	Min=0, Max=7		
	PCIe Root Port Function Swapping	Enable		Disable
	Max Read Request Size	MRRS 128B	MRRS 256B	MRRS 512B
		MRRS1024B	MRRS2048	MRRS4096
	PCI Express Root Port 1-20	PCIE ASPM	Disable ASPM	
			ASPM L1	
			ASPM Auto	
		L1 Substates	Disable	L1.1
			L1.2	L1.1 & L1.2
		Gen 3 Eq Phase3 Method	Hardware	
			Static Coeff	
			Software Search	

PCH sSATA Configuration	PCI Express Root Port 1-20	ACS	Enable	Disable
		URR	Enable	Disable
		FER	Enable	Disable
		NFER	Enable	Disable
		CER	Enable	Disable
		SEFE	Enable	Disable
		SENFE	Enable	Disable
		SECE	Enable	Disable
		PME SCI	Enable	Disable
		Hot Plug	Enable	Disable
		Advanced Error Reporting	Enable	Disable
		PCIe Speed	Auto	Gen 1
			Gen 2	Gen 3
		MSI	Enable	Disable
		PCIE Lane Topology	Unknown	x1
			x4	Sata Express
			M.2	
		Max Payload Size	MPL	
			MPL 128B	
			MPL 256B	
		Compl. Timeout	40-50ms(spec 50us-50ms)	40-50ms (spec 16ms-55ms)
			160-170ms (spec 65ms-210ms)	400-500ms (spec 260ms-900ms)
			1.6-1.7s(spec 1s-3.5s)	Disable
PCH PCIe LTR Configuration		PCH PCIE1 LTR	Enable	Disable
		Snoop Latency Override	Auto	
			Manual	
			Disable	
		Snoop Latency Value	Min=0, Max=1023	
		Snoop Latency Multiplier	1 ns	32 ns
			1024 ns	32768 ns
			1048576 ns	33554432 ns

PCH sSATA Configuration	PCH PCIe LTR Configuration	Non Snoop Latency Override	Auto	
			Manual	
			Disable	
		Non Snoop Latency Value	Min=0, Max=102	
		Non Snoop Latency Multiplier	1 ns 1024 ns 1048576 ns	32 ns 32768 ns 33554432 ns
		PCIE1 LTR Lock	Enable	Disable


#### 4.4.5 H2o IPMI Configuration

H2o IPMI Configuration			
IPMI Support	Enable	Disable	
BMC Warmup Time	Min=0, Max=240		
ACPI SPMI Table	Enable	Disable	
Boot Option Support	Enable	Disable	
Set BIOS version to BMC	Enable	Disable	
BMC Configuration	Watchdog Timer Support	Enable	Disable
	Not disable in OS	Enable	Disable
	Watchdog Timer Timeout	Min=2, Max=8	
	Watchdog Timer Action	No Action	Hard Reset
		Power Down	Power Cycle
	Power Cycle Time Support	Enable	Disable
	Power Cycle Time	Min=0, Max=255	
	Power Button	Enable	Disable
	Reset Button	Enable	Disable
	NMI Button	Enable	Disable
	LAN Channel Number	Min=0, Max=15	
	IPv4 Source	Static	DHCP
	IPv6 Mode	Enable	Disable
	IPv6 Prefix Length	Min=0, Max=15	
SDR List	SDR List Support	Enable	Disable

#### 4.4.6 H2o Event Log Config Manager

H2o Event Log Config Manager			
Configurations Page	Console Serial Redirect	Enable	Disable
	Terminal Type	VT_100	VT_100+
		VT_UTF8	PC_ANSI
	Baud Rate	1200	2400
		4800	9600
		19200	38400
		57600	115200
	Data Bits	7 Bits	8 Bits
	Parity	None	Even
	Stop Bits	1 Bits	2 Bits
	Flow Control	None	RTS/CTS
	Information Wait Time	0 Second	2 Seconds
		10 Seconds	30 Seconds
	C.R. After Legacy Boot	No	Yes
	Text Mode Resolution	AUTO	Force 80x25,Force 80x24 (DEL FIRST ROW)
		Force 80x24 (DEL LAST ROW)	Limit 128x40
	Auto Refresh	Enable	Disable
	Auto adjust Terminal resolution	Enable	Disable

## 4.5 Security

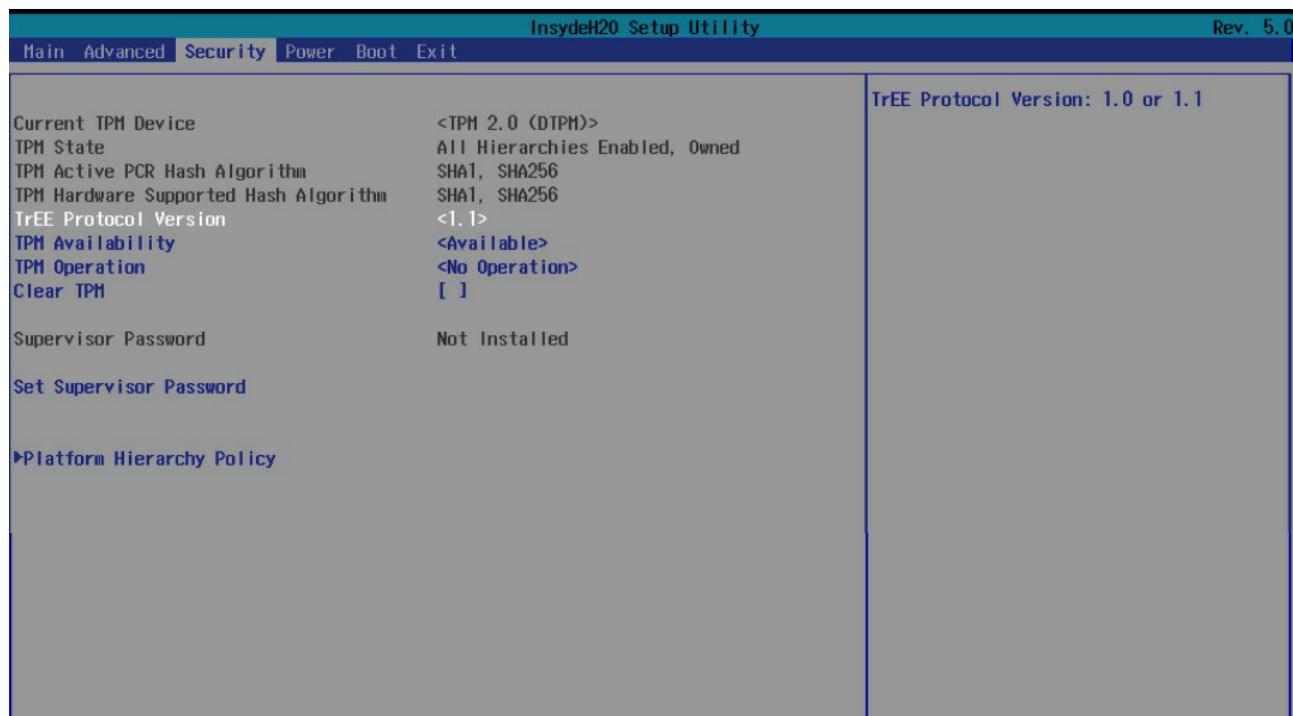


Security Option Key:

### 4.5.1 Security

Security			
Current TPM Device	Not Detected	TPM 1.2	TPM 2.0
TrEE Protocol Version	1.0	1.1	
TPM Availability	Available	Hidden	
TPM Operation	No operation	Disable and Deactivate	Enable and Activate

## 4.6 Power

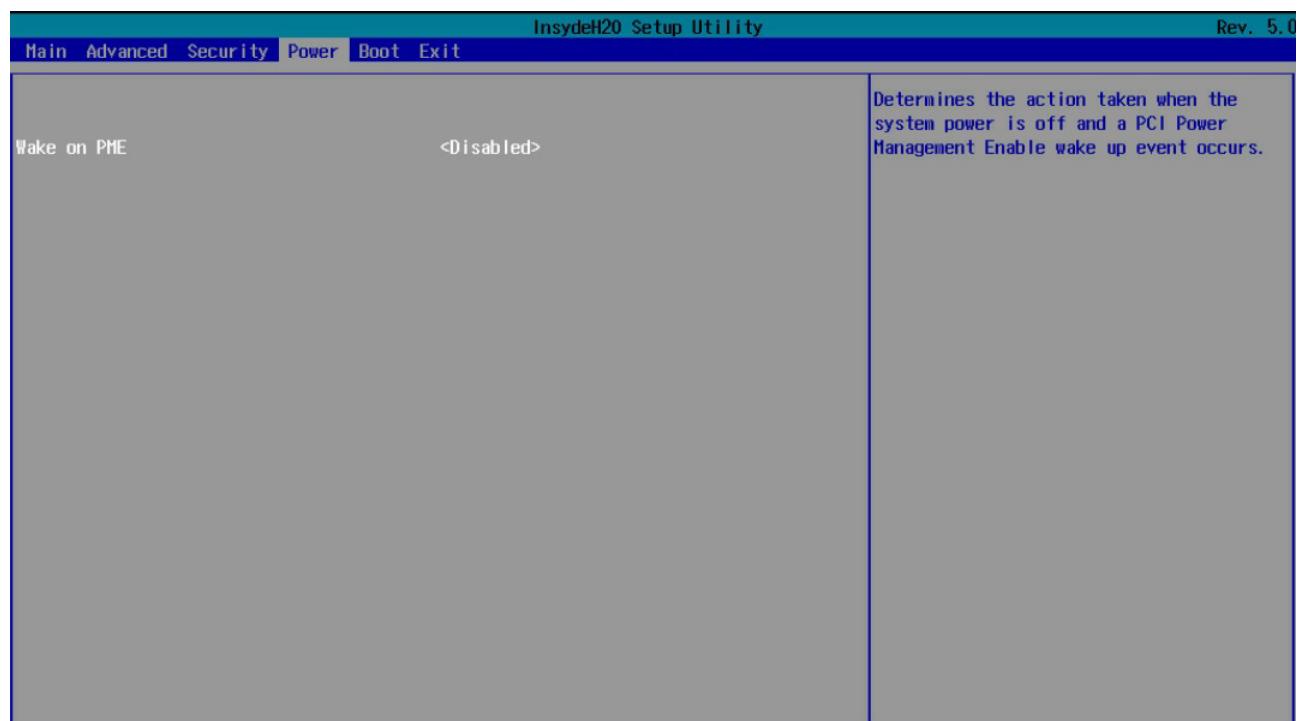


Power Option Key:

### 4.6.1 Power

Power		
Wake on PME	Enable	Disable

## 4.7 Boot

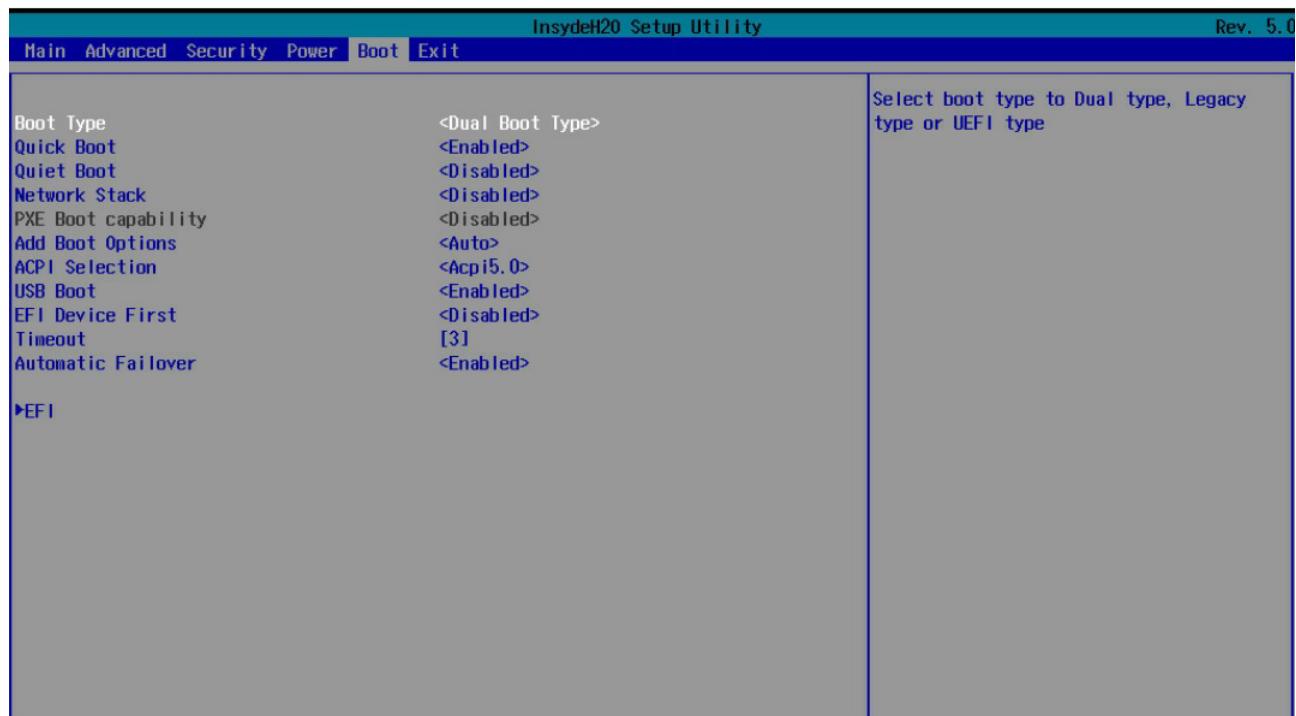


Boot Option Key:

### 4.7.1 Boot

Boot			
Boot Type	Dual Boot Type	Legacy Boot Type	UEFI Boot Type
Quick Boot	Enable	Disable	
Quiet Boot	Enable	Disable	
Network Stack	Enable	Disable	
PXE Boot to LAN	Enable	Disable	
PXE Boot capability	Disable	UEFI:IPv4	UEFI:IPv6
	UEFI:IPv4/UEFI:IPv6		Legacy
Add Boot Options	First	Last	Auto
ACPI Selection	Acpi1.0B	Acpi3.0	Acpi4.0
	Acpi5.0	Acpi6.0	Acpi6.1
USB Boot	Enable	Disable	
EFI Device First	Enable	Disable	
Timeout	Min=0, Max=10		
Automatic Failover	Enable	Disable	

## 4.8 Exit

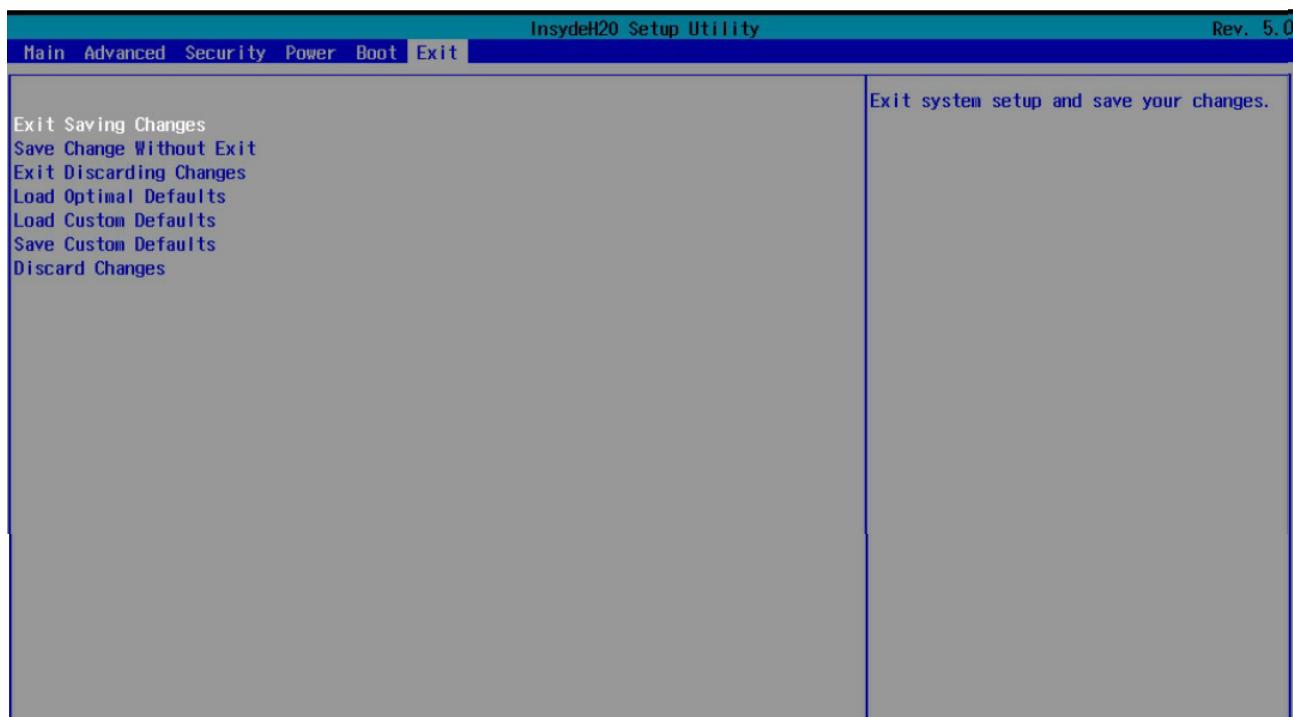

Exit Option Key:

### 4.8.1 Exit

Save and Exit	
Exit Saving Changes	Exit system setup and save your changes.
Save Change Without Exit	Save your changes without exiting the system.
Exit Discarding Changes	Discard your changes when exiting the system.
Load Optimal Defaults	Load optimal default items.
Load Custom Defaults	Resets the BIOS settings to the default values and overwrites any previously customized settings.
Save Custom Defaults	Saves the customized defaults in BIOS settings.
Discard Changes	Discard your changes.

## 4.9 BIOS Update Process

This is the manual for updating BIOS on **Pavo** system, the new BIOS supports to update from BIOS ver **Pavo1070** or later. Here are the update procedures

### DOS:

1. Copy Pavo1080.bin into **dos** folder
2. Copy dos folder to USB stick or HDD
3. Enter to DOS folder and execute the below command flash.bat
4. Reboot if complete the updated

### Linux:

1. Copy Pavo1080.bin into  
[linux/ InsydeH2OFFT\\_x86\\_LINUX64\\_200.02.00.02](#) folder
2. Copy linux folder to USB stick or HDD
3. Enter to linux folder and execute the below command./flash.sh
4. Reboot if complete the updated

### EFI:

1. Copy Pavo1080.bin into **efi** folder
2. Copy efi folder to USB stick or HDD
3. Boot into internal shell enters the usb efi folder and executes the below command Bios.nsh
4. Reboot if complete the updated



### NOTE

Please refer to "Bios Update Process.doc" in bios release zip file for details.


# Chapter 5. BMC Configuration Settings



Insert Ethernet LAN cable into the BMC LAN port. There are two methods to setup BMC IP:




## 5.1 Method 1 (Use the BIOS Setup)

**Step 1** BIOS SETUP → Advanced → H2O IPMI configuration → BMC Configuration → IPv4 source → Static

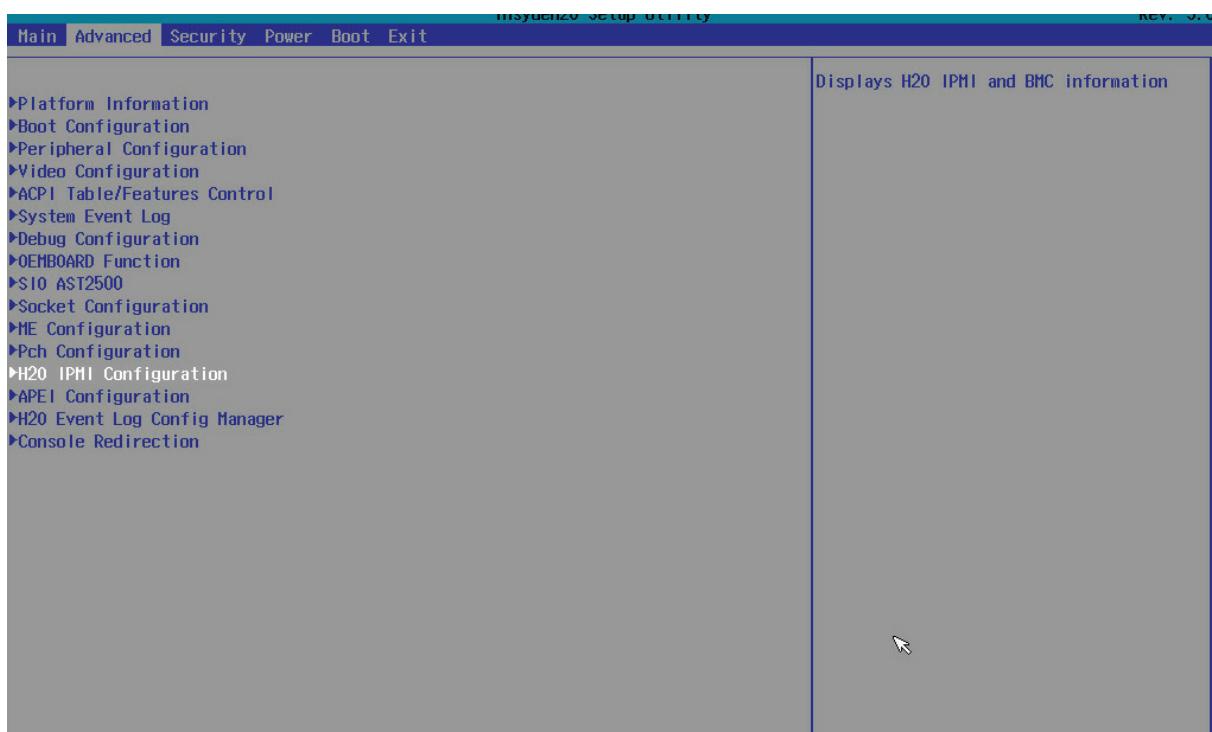


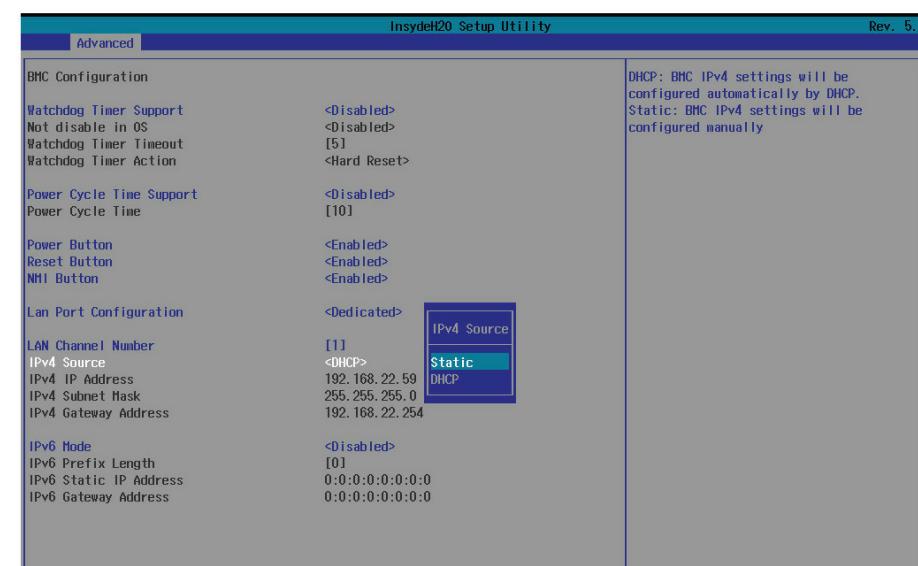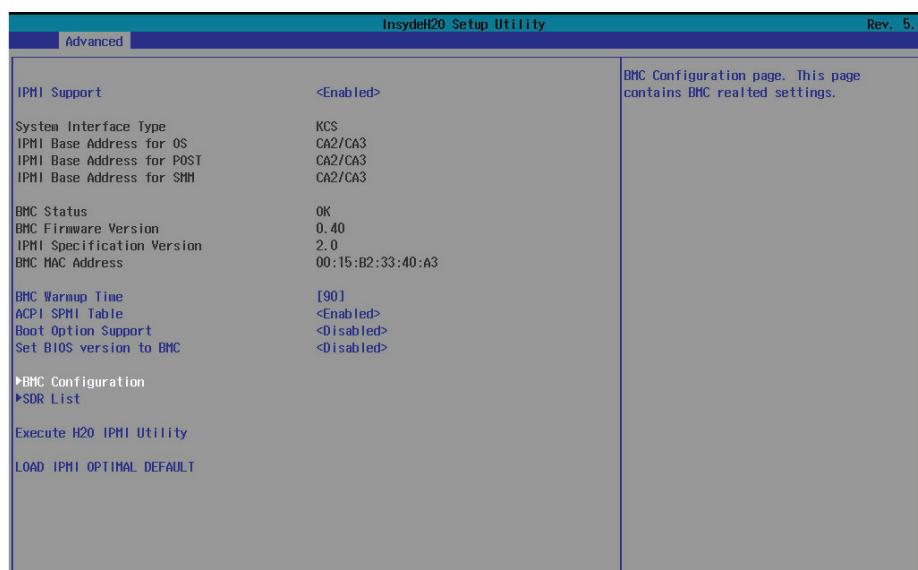


## Step 2 Type in the IP address. Configure the static IP address.

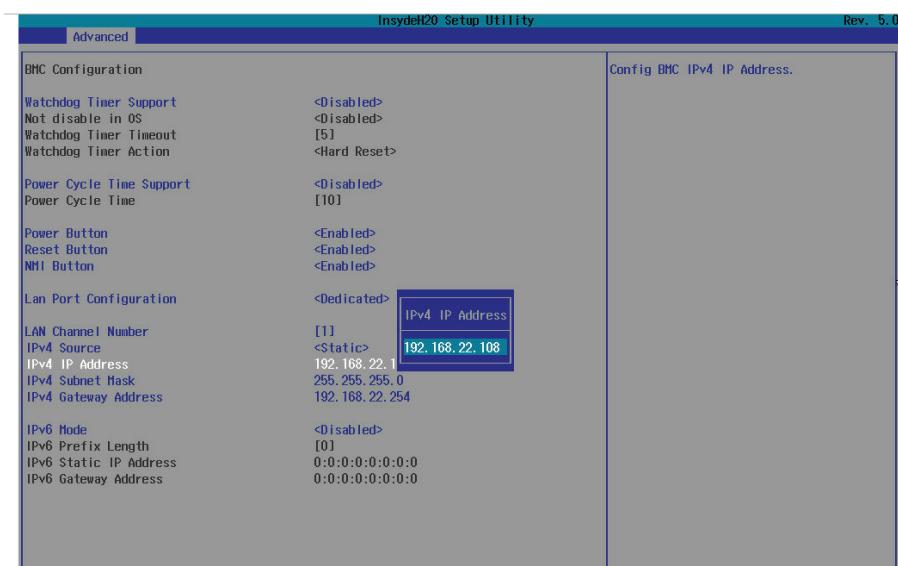

### Step 3 Type in the subnet mask address.

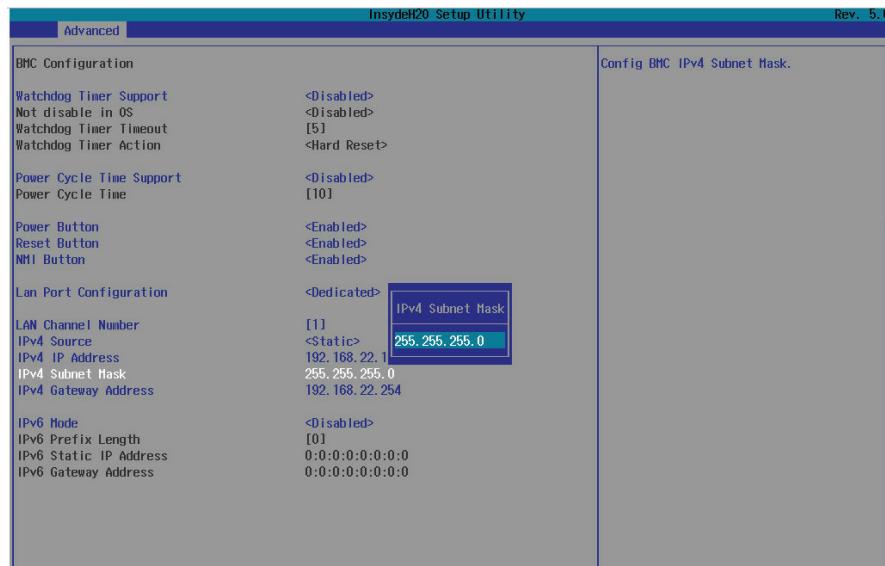

### Step 4 Type in the gateway address.

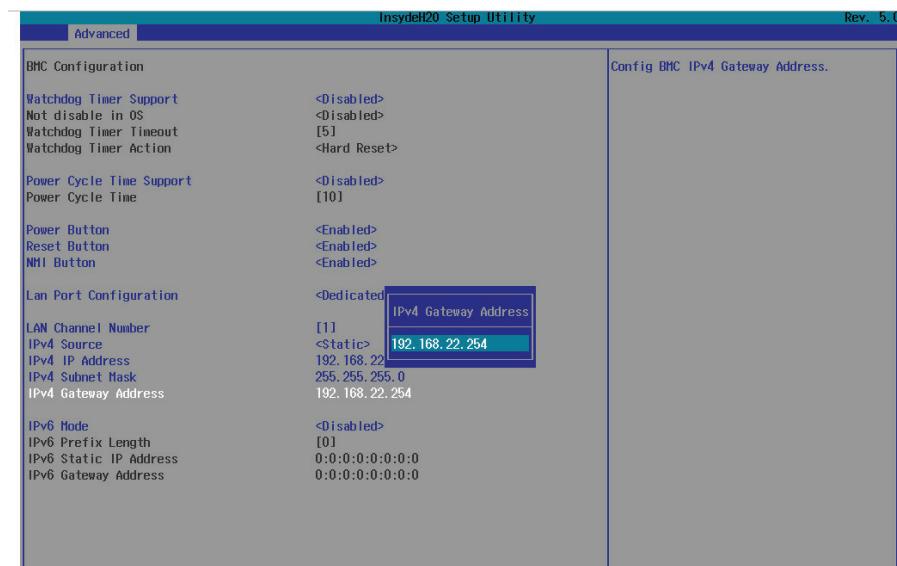

## 5.2 Method 2 (Use a Dos Tool - Syscheck)

### Step 1 Type in "sc –lanset"

```
C:\SC126\SC>sc -lanset
syscheck version 1.2.6

-----  

-lanset      Set LAN configuration
Internet Protocol  Please input 1 or 2
1 :Static IP enable
2 :DHCP enable

-----  

Present LAN Configuration:
DHCP   : enable
Static IP: disable
IP     : 192.168. 22. 53
Submask : 255.255.255. 0
Gateway : 192.168. 22.254

Do you want to Modify? (Y or y to Modify / any key to Exit)
-
```

### Step 2 Modify the IP setting.

```
C:\SC126\SC>sc -lanset
syscheck version 1.2.6

-----  

-lanset      Set LAN configuration
Internet Protocol  Please input 1 or 2
1 :Static IP enable
2 :DHCP enable

-----  

Present LAN Configuration:
DHCP   : enable
Static IP: disable
IP     : 192.168. 22. 53
Submask : 255.255.255. 0
Gateway : 192.168. 22.254

Do you want to Modify? (Y or y to Modify / any key to Exit)
y

Internet Protocol
(1 :Static IP enable / 2 :DHCP enable)
(Please input 1 or 2):1
```



#### NOTE

Type 1 for selecting Static IP Mode or type 2 for selecting DHCP Mode.

### Step 3 Type in the IP address.

```
-lanset      Set LAN configuration
Internet Protocol  Please input 1 or 2
1 :Static IP enable
2 :DHCP enable

-----  

Present LAN Configuration:
DHCP   : enable
Static IP: disable
IP     : 192.168. 22. 53
Submask : 255.255.255. 0
Gateway : 192.168. 22.254

Do you want to Modify? (Y or y to Modify / any key to Exit)
y

Internet Protocol
(1 :Static IP enable / 2 :DHCP enable)
(Please input 1 or 2):1
          Check DHCP: 1

Modify IP address?
(Y or y to Modify / any key to Check Next) y
IP     : 192.168.22.108
```

#### Step 4 Type in the submask address.

The IP address below is an example using a default IP setting. The IP address is configurable.

```

Present LAN Configuration:
DHCP      : enable
Static IP: disable
IP        : 192.168. 22. 53
Submask   : 255.255.255. 0
Gateway   : 192.168. 22.254

Do you want to Modify? (Y or y to Modify / any key to Exit)
y

Internet Protocol
(1 :Static IP enable / 2 :DHCP enable)
(Please input 1 or 2):1
          Check DHCP: 1

Modify IP address?
(Y or y to Modify / any key to Check Next) y
IP       : 192.168.22.108
          The IP Address: 192.168.22.108 is valid

Modify Submask address?
(Y or y to Modify / any key to Check Next) y
Submask  : 255.255.255.0
          The Submask: 255.255.255.0 is valid

```

#### Step 5 Configure the gateway address to complete the BMC IP setting.



##### NOTE

Type SC.EXE\LANGET command to obtain BMC IP and MAC address.

```

Do you want to Modify? (Y or y to Modify / any key to Exit)
y

Internet Protocol
(1 :Static IP enable / 2 :DHCP enable)
(Please input 1 or 2):1
          Check DHCP: 1

Modify IP address?
(Y or y to Modify / any key to Check Next) y
IP       : 192.168.22.108
          The IP Address: 192.168.22.108 is valid

Modify Submask address?
(Y or y to Modify / any key to Check Next) y
Submask  : 255.255.255.0
          The Submask: 255.255.255.0 is valid

Modify Gateway address?
(Y or y to Modify / any key to Exit) y
Gateway  : 192.168.22.254
          The Gateway: 192.168.22.254 is valid

C:\NSC126\SC>_

```

```

The Submask: 255.255.255.0 is valid

Modify Gateway address?
(Y or y to Modify / any key to Exit) y
Gateway  : 192.168.22.254
          The Gateway: 192.168.22.254 is valid

C:\NSC126\SC>sc -langet
syscheck version 1.2.6
-----
eth0 channel 1
IP       : 192.168. 22.108
eth0 channel 1
Submask  : 255.255.255. 0
eth0 channel 1
Gateway  : 192.168. 22.254
eth0 channel 1
MAC     : 00-15-B2-33-48-A3
eth0 channel 1
DHCP    : disable
Static IP   : enable

```

## 5.3 Login

**NOTE**

This feature works with JAVA 6 Runtime installed Console Environment


The IP source default is DHCP. You can change the IP source to DHCP or Static by the BIOS utility or the system check.

**Step 1** Open the browser then type the BMC IP address.



**Step 2** Use the default user name and password for first-time BMC WEB GUI login.

Field:	Default
UserName:	admin
Password:	admin

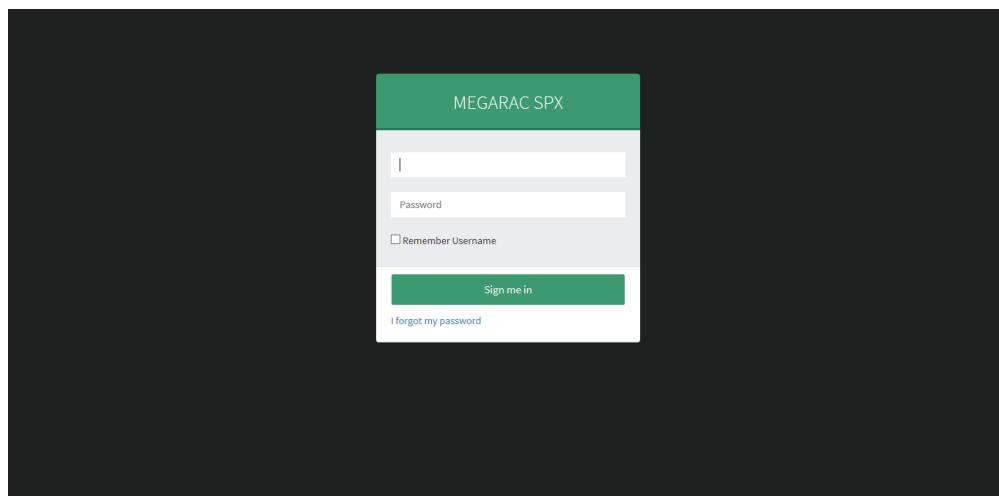**NOTE**

The default user name and password are in lower-case characters.

**NOTE**

Users who login the root user name and password will have full administrative power. The root password can be changed after login.

## 5.4 Web GUI



### 5.4.1 Menu Bar

Click to select the options of the menu bar.

Menu	Description
Dashboard	The Dashboard page gives the overall information about the status of a device.
Sensor	The Sensor Readings page displays all the sensor related information.
FRU Information	The FRU Information page displays the details for FRU devices in the system.
Logs and Reports	The Logs and Reports page monitors and reports on the status of IPMI event and video.
Settings	The Settings page allows you to configure various basic settings, such as date & time, KMV Mouse, Services, and ect.
Remote Control	The Remote Control page allows you to remotely manage server hardware components.
Image Redirection	The Image Redirection page is used to configure the image into BMC for redirection.
Power Control	The Power Control page allows you to view and control the power of your server.
Maintenance	This group of pages allows you to do maintenance tasks on the device.
Sign out	The Sign out page allows you to log out of the web GUI.

### 5.4.2 User Information and Quick Button

The user information and quick access buttons are located at the top right corner. It displays the logged-in user, his/her privilege and the four quick buttons allowing you to perform different functions.

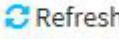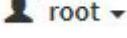Button		Description
User		Only valid commands are allowed.
Operator		All BMC commands are allowed except for the configuration commands that can change the behavior of the out-of-hand interfaces.
Administrator		All BMC commands are allowed.
No access		Login access denied.
	Notification	Click to view notification messages.
	Warning	Click to view warning messages.
	Sync	Click to synchronize with the latest sensor and event log updates.
	Refresh	Click to reload the current page.
	Root-administrator	<b>Sign out:</b> Click to log out of the GUI <b>Profile:</b> Click to enter the User Management Configuration dialog box in figure xx.
	Help	Click to view more details on field descriptions.

### 5.4.3 Dashboard:

The Dashboard page gives the overall information about the status of advice.

The screenshot shows the MEGARAC SPX dashboard. The left sidebar has a dark theme with white text. It includes a star icon and the text "MEGARAC SPX" at the top, followed by "Host Online". Below are links for Dashboard, Sensor, FRU Information, Logs & Reports (with a dropdown arrow), Settings, Remote Control, Image Redirection, Power Control, Maintenance, and Sign out. The main content area has a light background. At the top right are icons for envelope, alert, sync, refresh, and user "admin". Below these are two green boxes: one for "Up Time" showing "7 d 14 hrs" and another for "Pending Deassertions" showing "0". A yellow box for "Sensor Monitoring" says "All sensors are good now!". At the bottom, it says "Recently recovered".

### 5.4.4 Sensor

The Sensor Readings page displays all the sensor related information.

The screenshot shows the "Sensor Reading" page. The left sidebar is identical to the dashboard. The main area starts with a red header "Critical Sensors (0)". Below it is a blue header "Discrete Sensor States (4)" with a table:

Sensor Name	Status
ChassisIntrusion	No state defined
PSU1_Status	No state defined
PSU2_Status	No state defined
Watchdog_BMC	No state defined

Below this is a blue header "Normal Sensors (55)".

### 5.4.5 FRU Information

The FRU Information page displays Basic Information, Chassis Information, Board Information and Product Information of the FRU device. Click FRU Information on the menu bar to view the details of the selected device.

The screenshot shows the "FRU" page. The left sidebar is identical. The main area has a blue header "Available FRU Devices". Below it is a table:


FRU Device ID	0
FRU Device Name	Baseboard FRU

Below this are three tabs: "Chassis Information", "Board Information", and "Product Information". Each tab has a table with one row:

Chassis Information	Board Information	Product Information
Chassis Information Area Format Version	Board Information Area Format	Product Information Area Format Version


### 5.4.6 Logs and Report

The System Inventory page displays IPMI Event Log and Video Log. Click **Logs and Reports** from the menu bar.

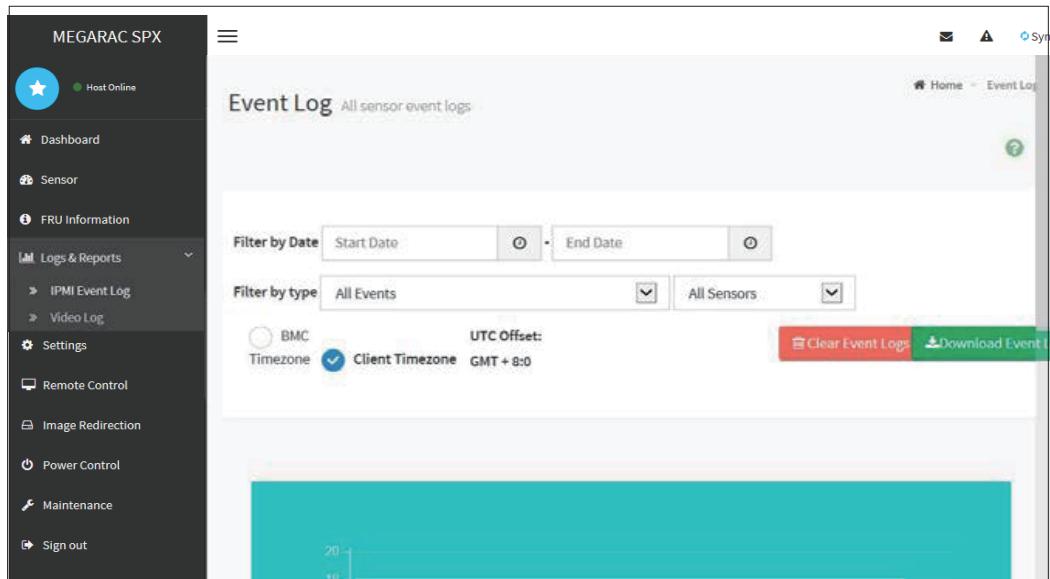

### 5.4.7 Settings

The Settings page allows you to access various configuration settings.

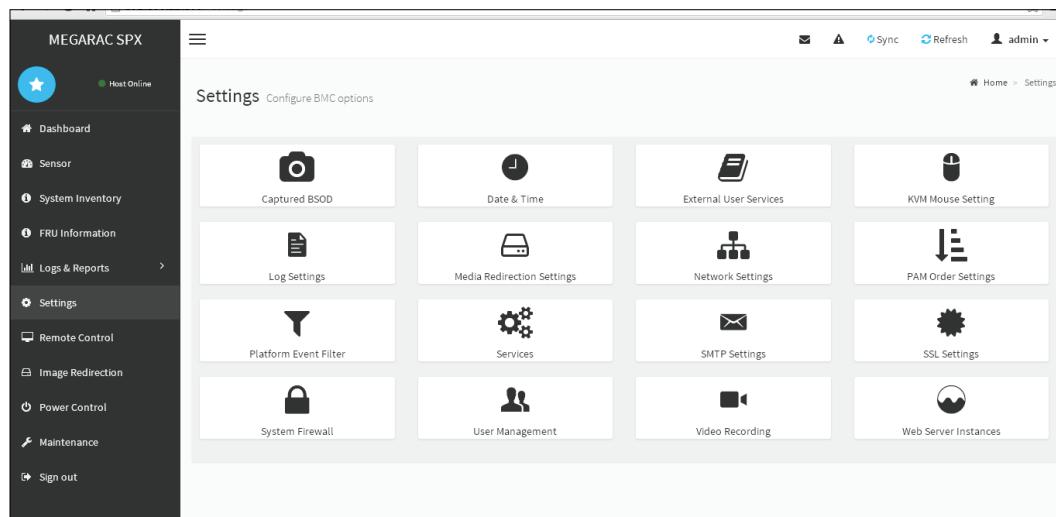

### 5.4.8 KVM Mouse Setting

The KVM Mouse Setting page allows you to configure the mouse mode to relative, absolute, and other.


The screenshot shows the 'KVM Mouse Setting' page. On the left is a dark sidebar with various navigation options like Dashboard, Sensor, FRU Information, Logs & Reports, Settings, Remote Control, Image Redirection, Power Control, Maintenance, and Sign out. The main area has a header 'KVM Mouse Setting'. Below it is a section titled 'Mouse Mode Configuration' with a sub-section 'Mouse Mode'. It contains three radio buttons: 'Relative Positioning (Linux)' (unchecked), 'Absolute Positioning (Windows)' (checked with a blue checkmark), and 'Other Mode (SLES-11 OS Installation)' (unchecked). At the bottom right of this section is a blue 'Save' button.

- For Windows OS environment, set mode to absolute.
- For Linux OS environment, set mode to relative.
- For SLES-11 OS environment, set mode to other mode.

**Remote Control:** The Remote Control page allow you to access any of the managed devices within your system.

The screenshot shows the 'Remote Control' page. The left sidebar is identical to the one in the previous screenshot. The main area has a header 'Remote Control' with a subtitle 'Power Control & Remote KVM'. Below the header are two green buttons: 'Launch KVM' and 'Download Java SOL'.

## Launch KVM:

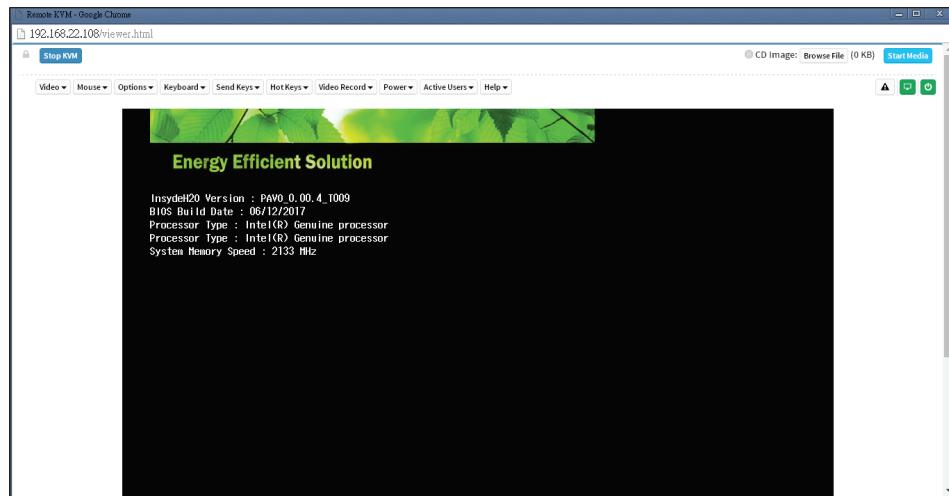

### 5.4.9 Firmware Update

This wizard takes you through the process of firmware upgradation. A reset of the box will automatically follow if the upgrade is completed or cancelled. An option to Preserve All Configuration is available. Enable it, if you wish to preserve configured settings through the upgrade.

**Warning:** Please note that after entering update mode widgets, other web pages and services will not work. All open widgets will be closed automatically. If upgrade process is cancelled in the middle of the wizard, the device will be reset.

#### NOTE

The firmware upgrade process is a crucial operation. Make sure that the chances of a power or connectivity loss are minimal when performing this operation.

Once you enter into Update Mode and choose to cancel the firmware flash operation, the MegaRAC® card must be reset. This means that you must close the Internet browser and log back onto the MegaRAC® card before you can perform any other types of operations.

Once Firmware upgrade using web is started, the regular IPMI command will not be allowed for safety concern if Enable IPMI Command handling during flashing support is disabled in project configuration.

To configure, choose **Firmware Image Location** under Maintenance. To open Firmware Update page, click **Maintenance → Firmware Update** from the menu bar.

The screenshot shows the 'Firmware Update' page with the following details:

- Protocol Type:** HTTP/HTTPS
- Preserve all Configuration:** A checkbox with a note: "This will preserve all the configuration settings during the firmware update - irrespective of the individual items marked as preserve/overwrite in the table below." Below this is a link to "Edit Preserve Configuration".
- Configuration Items Table:**

S.No	Preserve Configuration Item	Preserve Status
1	SDR	Overwrite
2	FRU	Overwrite
3	SEL	Overwrite
4	IPMI	Overwrite
5	NETWORK	Overwrite
6	NTP	Overwrite
7	SSH	Overwrite
8	KVM	Overwrite
9	AUTHENTICATION	Overwrite
10	SYSLOG	Overwrite
- Select Firmware Image:** A file selection input field showing "No file selected."
- Start Firmware update:** A large green button.

Firmware Update page

The various fields of Firmware Update are as follows.

- Preserve all Configuration: To preserve all configuration.
- Edit Preserve Configuration: To modify the Preserve status settings.
- Select Firmware Image: To Select the Firmware image to be uploaded.
- Start Firmware Update: To Start the Firmware Update.

This wizard takes you through the process of AMI based firmware upgradation. The protocol information to be used for firmware image transfer during this update is as follows.

**NOTE**

All configuration items will be preserved/overwrite as default during the restore configuration operation.


**Procedure**

1. Click Preserve all Configuration to preserve all configuration.
2. Click Browse to select firmware image. The Firmware update undergoes the following steps:
  - a. Closing all active client requests
  - b. Preparing Device for Firmware Upgrade
  - c. Uploading Firmware Image

**NOTE**

A file upload pop-up will be displayed for http/https but in the case of tftp files, the file is automatically uploaded displaying the status of upload.

- d. Browse and select the Firmware image to flash and click Upload.
- e. Click Start firmware update start the Firmware Update. A warning message will be prompted you to proceed further.
- f. Click OK to start the Firmware Update. The sample screenshot is shown below.

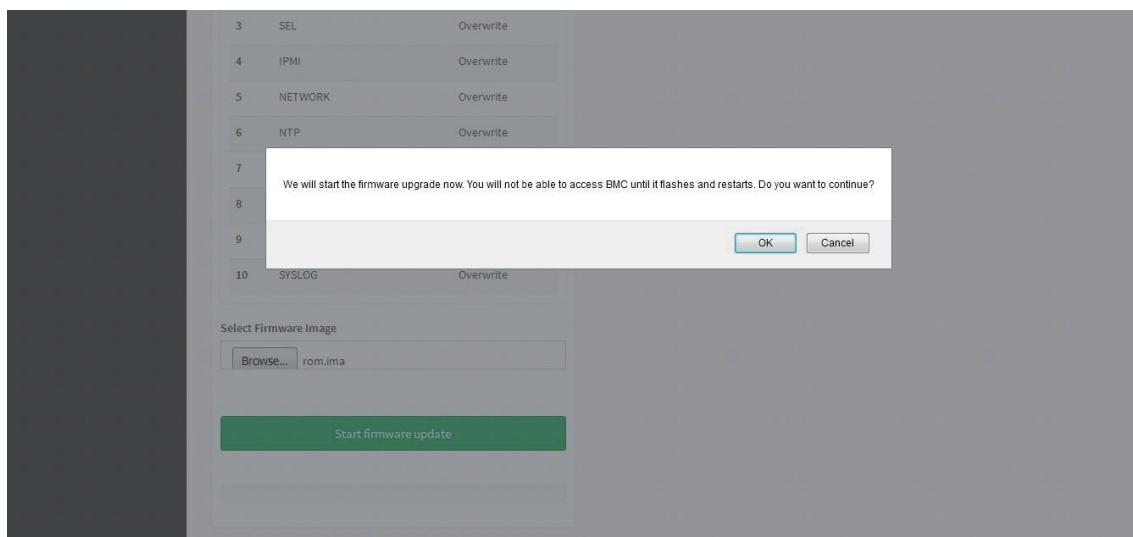

Firmware Update page - Image Upload

### g. Verifying Firmware Image

In Section Based Firmware Update, you can configure the firmware image for section based flashing. Check the required sections and click Proceed to update the firmware.

If flashing is required for all images, select the option Full Flash .


If you select Version Compare Flash option from web, the current and uploaded module versions, FMHlocation, size will be compared.

If the modules differ in size and location, proceed with force firmware upgrade. If all the module versions are same, restart BMC by saying all the module versions are similar.

If only few module versions are differing, those module will be flashed.


#### NOTE

Only selected sections of the firmware will be updated. Other sections are skipped. Before starting flash operation, you are advised to verify the compatibility between image sections.

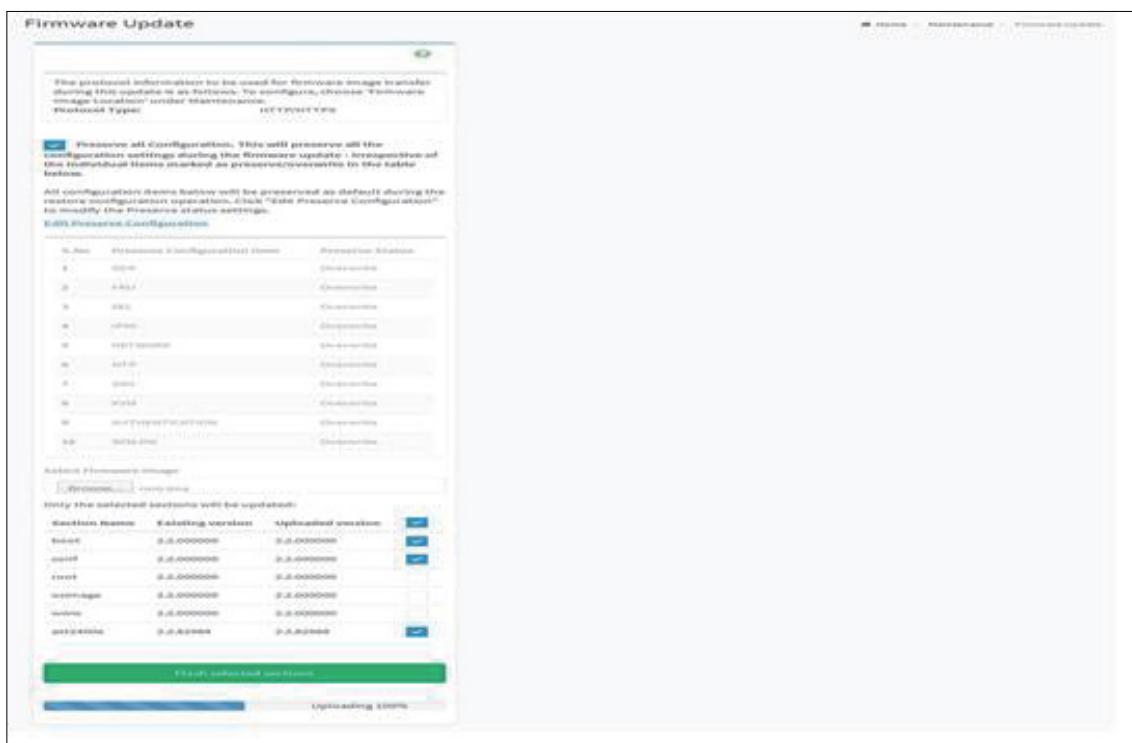

Section Based Firmware Flashing

- h. Flashing Firmware Image
- i. Resetting the image. The sample screenshot of Firmware update is as shown below.

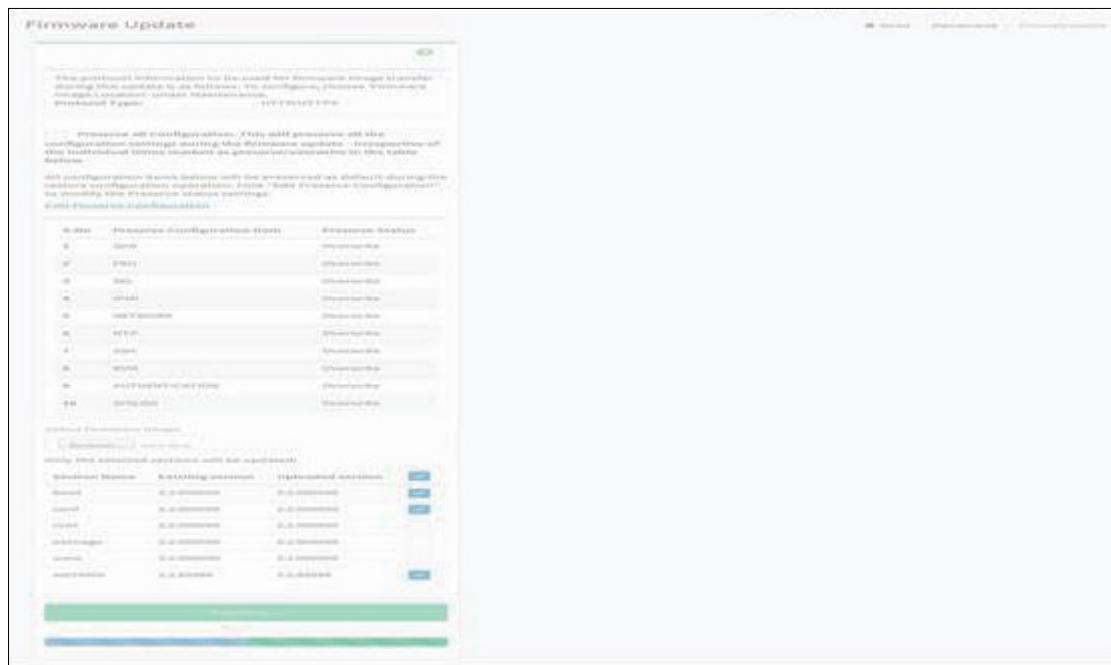


Firmware Update page

**NOTE**

The Firmware Update page will be disabled and you will not be able to perform any other tasks until firmware upgrade is completed and the device is rebooted. You can now follow the instructions presented in the subsequent pages to successfully update the card's firmware. The device will reset if update is canceled. The device will also reset upon successful completion of firmware update.

### 5.4.10 BIOS Firmware Update

This wizard takes you through the process of host BIOS firmware upgradation. A screenshot of BIOS Firmware Update is as shown below.

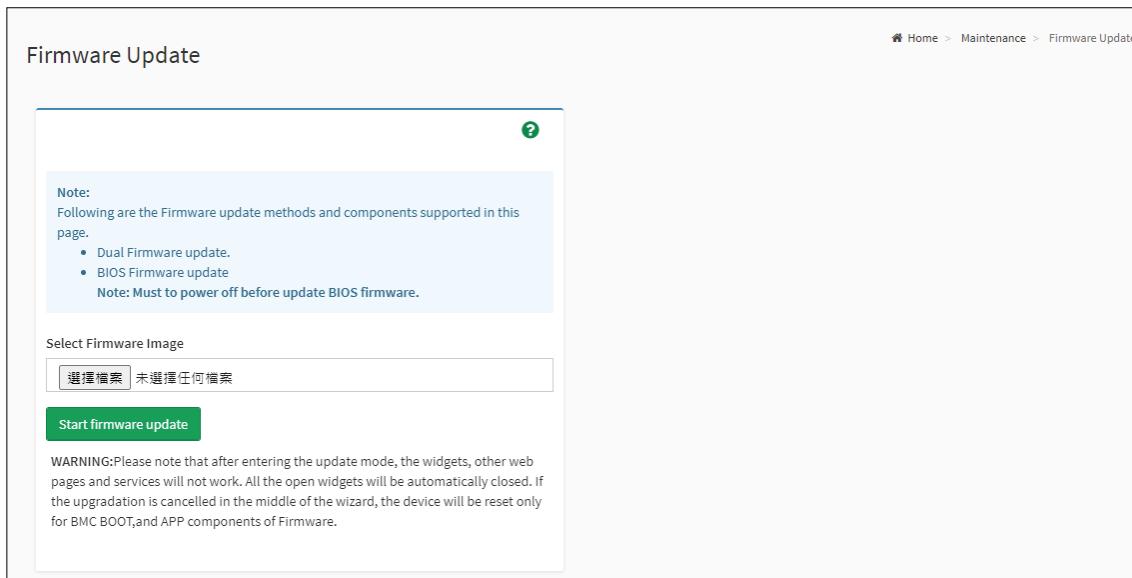

BIOS Firmware Update page

**NOTE**

The host will be forced to shut down, if it is power on.

The various are listed below.


Select Firmware Image: Click Browse to select the HPMBIOS firmware update in .binhpm format.

Start Firmware Update: The firmware update will be started to flash.

#### Procedure to proceed BIOS Firmware Update

1. The Firmware update undergoes the following steps:

- a. Click Browse and select the Firmware image to be flashed and click Start Firmware update to upgrade the current device firmware.
- b. Preparing Device for Firmware Upgrade.
- c. Uploading Firmware Image.
- d. Flashing the image. The sample screenshot of BIOS Firmware update is as shown below.

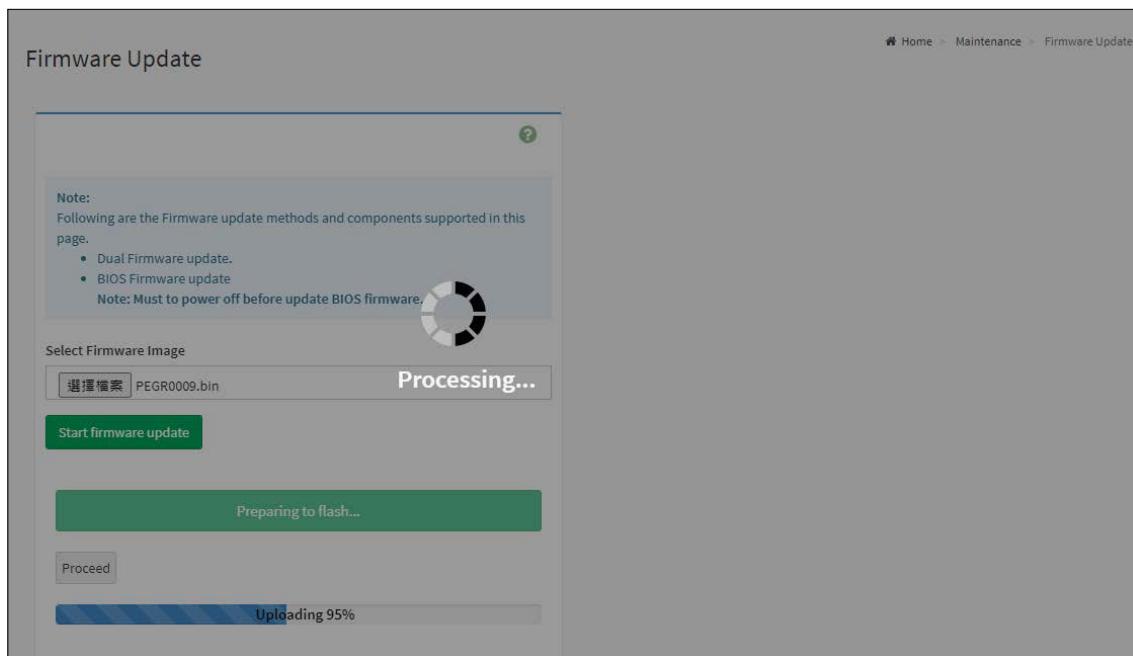

BIOS Firmware Update page

**NOTE**

You will not be able to perform any other tasks until firmware upgrade is completed and the device is off.

# Chapter 6. Technical Support



## Taiwan, Global Headquarters

Address: No. 152, Section 4,  
Linghang N. Rd, Dayuan District,  
Taoyuan City 337, Taiwan  
Tel: +886-3-433-9188  
Fax: +886-3-287-1818  
Sales Email: sales@aicipc.com.tw  
Support Email: support@aicipc.com

## South California, United States

Address: 21808 Garcia Lane  
City of Industry, CA 91789,  
United States  
Toll free: +7-4997019998  
Tel: +1-909-895-8989  
Fax: +1-909-895-8989#157  
Sales Email: sales@aicipc.com  
Support Email: support@aicipc.com

## Shanghai, China

Address: Room 1009, No. 777,  
Zhaojia Bang Rd, Shanghai 200032,  
Shanghai, China  
Tel: +86-21-54961421  
Fax +86-21-54961422 #608  
Sales Email: csales@aicipc.com.tw  
Support Email: support@aicipc.com

## New Jersey, United States

Address: 11 Melanie Lane  
Unit #20 & 21  
East Hanover, NJ 07936  
United States  
Tel: +1-973-884-8886  
Fax: +1-973-884-4794  
Sales Email: sales@aicipc.com  
Support Email: support@aicipc.com

## Moscow, Russia

Address: No.500, 5th Floor, 5th Entrance, 32A,  
Khoroshevskoye Shosse, Moscow, 123007  
Tel: +7-4997019998  
Sales Email: support-ru@aicipc.com.tw  
Support Email: support-ru@aicipc.com.tw

## Houten, The Netherlands

Address: Peppelkade 58, 3992AK, Houten,  
The Netherlands  
Tel: +31-30-6386789  
Fax: +31-30-6360638  
Sales Email: sales@aicipc.nl  
Support Email: support@aicipc.com

## North California, United States

Address: 48531 Warm Springs  
Boulevard Suite 404 Fremont, CA  
94539, United States  
Tel: +1-510-573-6730  
Fax: +1-510-573-6729  
Sales Email: sales@aicipc.com  
Support Email: support@aicipc.com

# Appendix: Battery Backup Unit(BBU)

## 1-1 Feature

HA202-PV offers the option of installing the battery backup unit (BBU) into the storage server, which excessively enhances the reliability, security, and performance to your product. The BBU module provides an emergency power source whenever the primary power source is unavailable or to produce additional electricity for the storage server to maintain data and operation. To find out more about our products and our services, or if you wish to discuss your project requirements, please contact us or consult your manufacturer for more related information.

## 1-2 Safety Precautions

Please meticulously adhere to the safety precautions provided below when operating the battery backup unit.

### Environment



- Avoid placing the equipment in hazardous environments (humid, hot, places with large temperature changes, and etc...).
- Store the equipment in a dry and cool environment (approximately 20°C is recommended) to keep the device from potential environmental impairment.
- Avoid placing the device under direct sunlight. The electrical performance may be reduced at a higher temperature.
- Distance the equipment from heating devices to prevent disaster.

### Handling the Device

- The equipment must be handled with utmost care. Please do not drop or abuse the equipment with physical force.
- The equipment is fragile and contains lithium-ion battery cells. If there is any indication that the equipment may be mechanically damage or abused, it must not be installed or used and must be taken out of service immediately.
- Please consult a professional technician or personnel before operating the equipment. Do not disassemble or modify the device by yourself to prevent disastrous consequences.
- Please wear antistatic gloves or wrist strap before touching the equipment. The device is highly statical.
- Please ensure that the power source is removed before making physical contact with the equipment.
- Charge your equipment after 4~6 weeks for the storage server to function normally.
- Dispose the equipment in appointed recycle locations. Do not dispose the equipment without an applicable disposal plan.

## 1-3 Hardware Installation

- ① Pull the node out of the chassis and remove the node cover.  
Please refer to [section 2.5](#) for more information on how to uninstall.
- ② Align and position the BBU module into which the BBU module is to be installed.
- ③ Push the BBU module completely into the chassis.
- ④ After the BBU modules are physically installed in the chassis, plug in the connectors to complete installation.

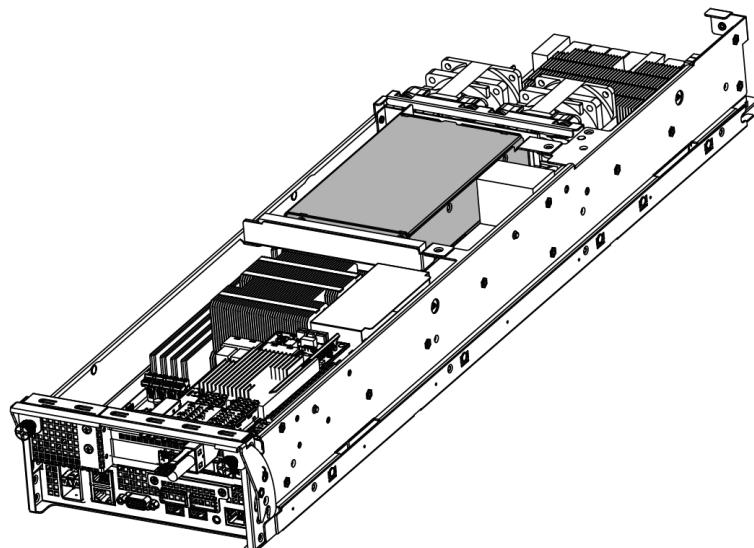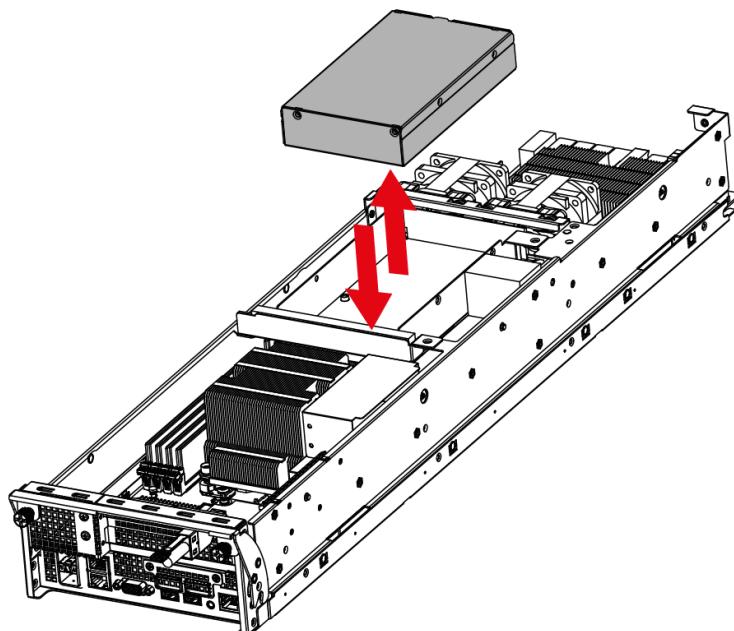

This information is provided for professional technicians only.

## 1-4 BMC FET Mode

### Function

When the server is activated, BMC will automatically set BBU to FET mode, which controls the charge and discharge of the battery. When the system power is on, BMC will enable the FET mode; when the system power is off, BMC will disable the FET mode. The BMC sensor will monitor the BBU temperature, voltage and capacity.

### Manual Check BBU

Users can operate and control BBU with the ipmitool command.

In order to modify the BBU, the command to unlock must be issued. The interval between the unlock command and set command for the next step cannot be over 500 milliseconds.

### Unlock and set FET mode enable.

```
#ipmitool raw 0x6 0x52 0x0 0x16 0x0 0x2b 0x97 0x11 0x41  
#ipmitool raw 0x6 0x52 0x0 0x16 0x0 0x2b 0x03 0x00 0xbc
```

### Unlock and set FET mode disable.

```
#ipmitool raw 0x6 0x52 0x0 0x16 0x0 0x2b 0x97 0x11 0x41  
#ipmitool raw 0x6 0x52 0x0 0x16 0x0 0x2b 0x00 0x00 0x83
```

### Check the FET mode Command.

ipmitool raw 0x6 0x52 0x0 0x16 0x1 0x2b

00: Enable FET mode charge

03: Enable FET mode discharge

7	6	5	4	3	2	1	0
RSVD	RSVD	RSVD	RSVD	PCHG	CHG	DSG	RSVD

#### PCHG (Bit 3): Pre-Charge FET Control

- 1 = ON, if protection features allow, see [XCHG]  
0 = OFF

#### CHG (Bit 2): Charge FET Control

- 1 = ON, if protection features allow, see [XCHG]  
0 = OFF

#### DSG (Bit 1): Discharge FET Control

- 1 = ON, if protection features allow, see [XDSG]  
0 = OFF

#### RSVD (Bit 7:4, 0): Reserved